



GL·iNet  
**HOME AC ROUTER**

**GL-B1300 USER GUIDE**

ver. 20171218.1

**Package Contents**

- GL-B1300 AC router
- Ethernet cable
- 12V/1.5A power adapter
- User guide

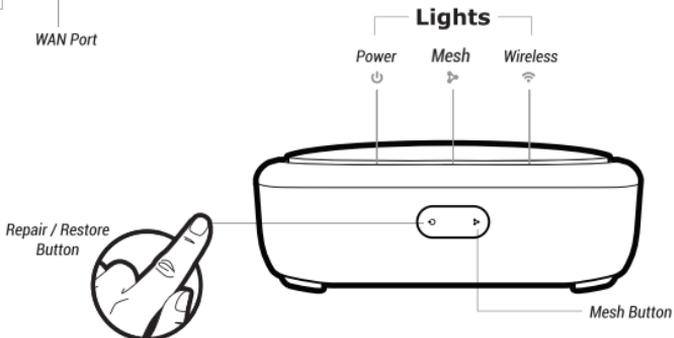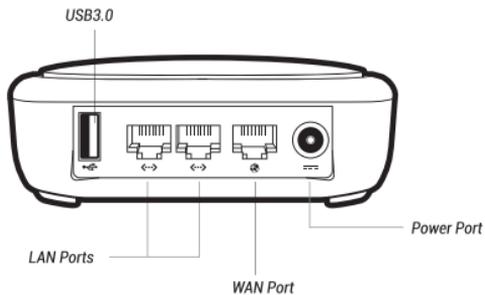
**Repair / Reset**

If you cannot access the web-based setup page or cannot connect to the router, you can press the **Reset** button:

- ① Press and hold for **3 seconds** then release to repair your network.
- ② Press and hold for **10 seconds** then release to reset the router to factory settings. All user data will be cleared.

## 1 Plug in power & Internet cable

When powered up, your router will broadcast a Wi-Fi signal with the SSID: **GL-XXXXX-xxx**.

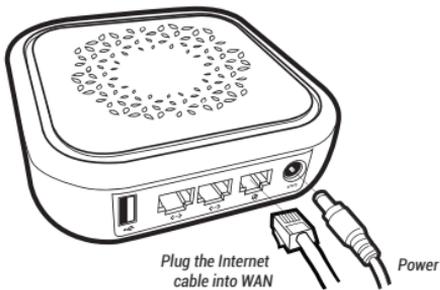

## 2 Connect via Wi-Fi

The default Wi-Fi password is **goodlife**, and it is also printed on the bottom of the router.



Search the SSID and connect to it




Default password is **goodlife**


## 3 Set up the router

Visit <http://192.168.8.1> in your browser to set up your router; start by choosing your preferred language.

### or Connect via LAN


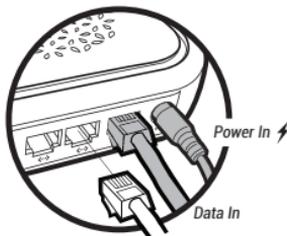


Plug the cable connecting your computer into LAN

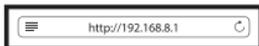

Access the above address using your browser

After you have set up your router, you will see the main web interface. Find the **Internet Settings** icon, then click the **New Connection** button. Choose **Cable** from the pop-up **Internet Settings** window.

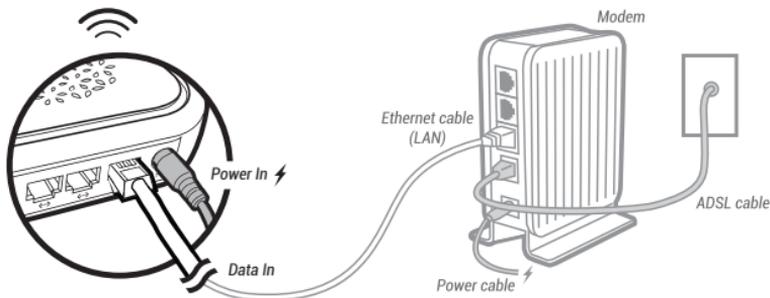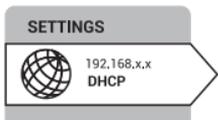


### DHCP/Static


The default protocol is **DHCP**. If your network needs a static setting, you can change it to **Static**.

### PPPoE

Change to **PPPoE** protocol when you need to apply username and password provided by your Internet service provider.

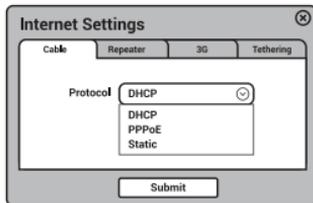


If you have more than one GL-B1300 router, you can set up a mesh network. In a mesh network, the routers will share same Wi-Fi names (SSID) for 2G and 5G Wi-Fi networks.

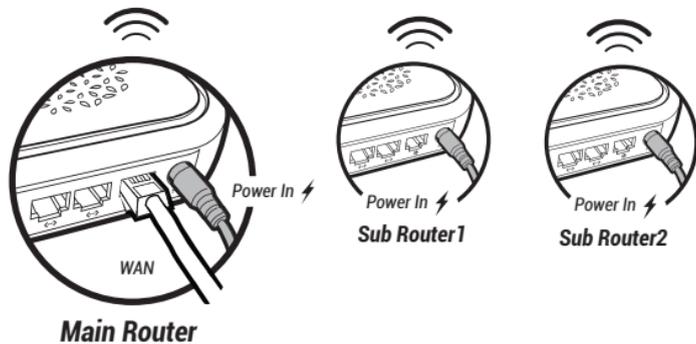

### 1 Plug in power & Internet cable


The router with Ethernet cable plugged into its WAN port is the **Main Router**. The other routers without Ethernet cables are **Sub Routers**.

ⓘ By default, the router with Ethernet cable plugged into its WAN port is the main router. You need to reset the router to change your main router or release a router used to be in a mesh network.

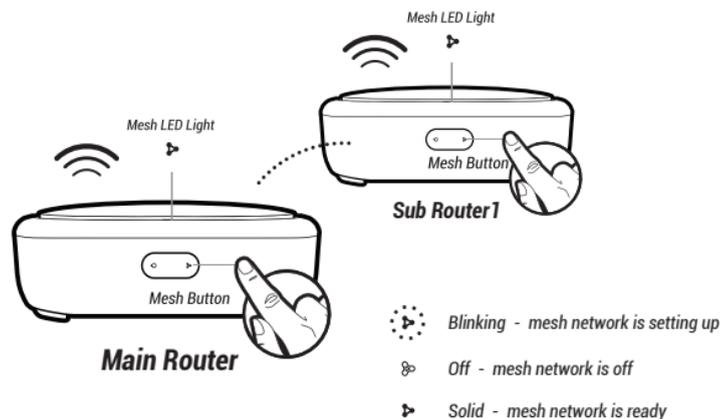

### 2 Pair routers

You can pair two routers by pressing their **Mesh Buttons** at the same time. The pairing starts right after their **Mesh LED lights** start blinking. After 2 minutes, their mesh lights will be solid indicating the mesh network is ready. You can pair another router with the main router by following above steps.

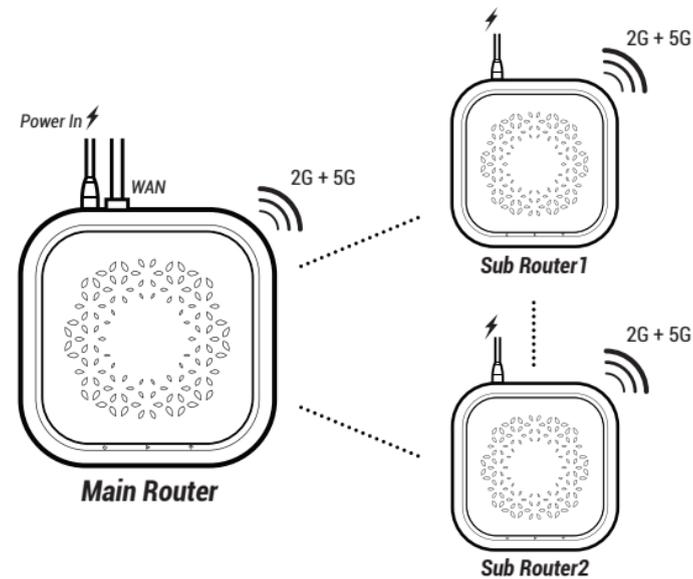


### 3 Mesh network

The mesh network works among routers when their **Mesh LED lights** are solid. Home materials and layout can affect how Wi-Fi signal travels. You might need extra routers to get full Wi-Fi coverage if you have a long narrow layouts and thick walls.

Find the **Wireless Settings** icon, then click the **Setting** button. The **Wireless Settings** window will pop up.

On the **Wireless Setting** page, you can change your **Wi-Fi Name (SSID)** and **Wi-Fi Password** to increase the security of your router. New changes will be in effect after you click **Submit**.

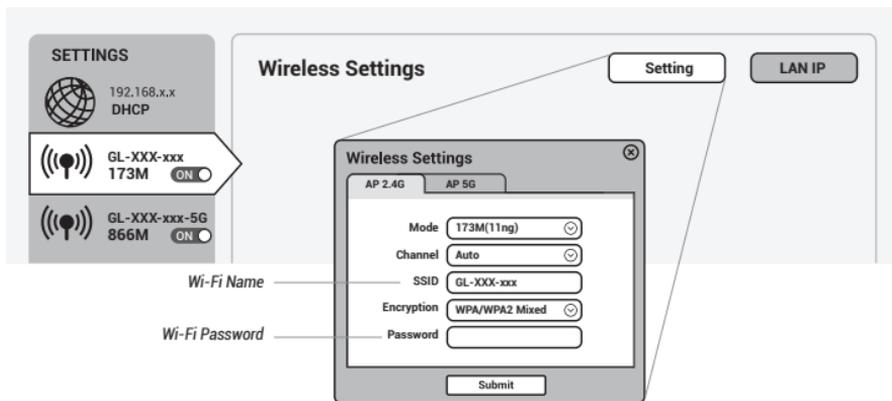

- ① It is **NOT** recommended to turn off your wireless network when you are connecting to your router wirelessly. Otherwise, all wireless connections to your router will be cut off immediately. To use the hotspot again, you can plug your router into a computer and turn on the Wi-Fi, or you can repair the network (See Hardware).

This router supports OpenVPN client. Using OpenVPN will slow down your Internet speed because of data encryption.

Click the **OpenVPN** icon and go to the VPN setting page. The first time it will ask you to upload your OpenVPN client configuration (ovpn files). Usually, you can download it from your OpenVPN service provider's website or console. Consult your service provider for more details.



## 1 Upload OpenVPN configurations

Click here to select files or drag and drop them here: .ovpn .zip .tar .gz

**VPN Authentication**

Some of your ovpn files need a username, a password and a passphrase. Please submit yours to authenticate these files.

Username

Password

Passphrase

After uploading the ovpn files, the router will check them. If you are prompted for a username and password, or a private key passphrase, or both, a window for **VPN Authentication** will pop up so that you can **Submit** these information for all files you upload.

This may not be necessary for some service providers.

## 2

## Connect to OpenVPN

Now you can choose from a list of configurations and apply your choice to connect as OpenVPN client.

Enable OpenVPN connection ——— **Enable**

Force all connected clients to use VPN ——— **Force VPN**  No Internet VPN is not connected

Change your config file ——— **Config File**  

To protect against DNS leaks, you must customize your DNS servers. You can enable **Force all clients** to override the DNS server settings for your client devices. To customize your DNS server, go to **Internet Settings > Custom DNS**

**SETTINGS**

 192.168.x.x  
DHCP

### Internet Status

---

#### DNS Settings

DNS Server 1

DNS Server 2

Force all clients to use

*Using public DNS Servers (e.g. Google's) can prevent leaking your local DNS*

? To get more detailed instructions or information about compatible VPN service providers, please visit <http://gl-inet.com/docs/>

## OpenWrt Firmware

Our firmware is developed based on OpenWrt and you can download all the firmwares from our website: [www.gl-inet.com/firmware](http://www.gl-inet.com/firmware). Find the available firmwares from the folder according to your device model, and they are located in different sub-folders:

- **v1** folder contains release versions. It should be the default firmware shipped with the router.
- **clean** folder contains clean versions of OpenWrt firmware, with **Luci** software only. By default, Wi-Fi is disabled and you need to enable it in **Luci**.
- **tor** folder contains Tor firmware for the device.

## DDWRT Firmware

DDWRT official firmware is not available for GL.iNet models except for GL-AR150 mini router. For further information, please visit <https://www.dd-wrt.com>

## Tor Firmware

Each model has its own Tor firmware which you need to flash to the router. It is quite easy and you can refer to our online tutorial at [www.gl-inet.com/docs/openwrt/tor/](http://www.gl-inet.com/docs/openwrt/tor/)

## Compile Your Own Firmware

If you have sufficient technical skills, you can compile your own firmware and flash to the router. Please refer to our online docs at [github.com/domino-team/openwrt-cc](https://github.com/domino-team/openwrt-cc)

## Uboot Failsafe

If you flash the wrong firmware, you would brick your router. But you still can recover it by using uboot failsafe. Please refer to the guide at [www.gl-inet.com/docs/diy/uboot/](http://www.gl-inet.com/docs/diy/uboot/)

 Using above DIY features might have a risk of bricking your router. We have no obligation to provide support, maintenance, upgrades, modifications, or new releases on DIY features. We reserve the rights of interpretation on above DIY contents without further announcement.

## Warranty

- Each router has **one-year warranty**. Accessories have **three-month warranty**.
- Please use standard power adapter, 12V / 1.5A.
- Any damage to the router caused by not following the instructions will render this warranty null and void.
- Any damage to the router caused by modifying the PCB, components or case will render this warranty null and void.
- Issues caused by the use of third-party firmware may not get official support from us.
- Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
- Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

## Technical Supports & General Enquiry

- For more detailed and updated instructions, please visit our website [www.gl-inet.com/docs](http://www.gl-inet.com/docs).
- For further questions, you can get help from the following ways:
  1. Send us an email at [service@gl-inet.com](mailto:service@gl-inet.com)
  2. Open a ticket at [www.gl-inet.com/tickets](http://www.gl-inet.com/tickets)
  3. Ask in our forum [www.gl-inet.com/forums](http://www.gl-inet.com/forums)
  4. Ask in other forums e.g. *OpenWrt, LEDE or other professional websites*

- **Hong Kong Office**

GL Technologies (Hong Kong) Limited  
210D Enterprise Place, 5W Science Park, Hong Kong

- **Shenzhen Office**

深圳市广联智通科技有限公司  
深圳市宝安区石岩街道松白路创维数码大厦305-306室 (+86-0755-86606126)



<http://www.gl-inet.com/docs>

**FCC ID: 2AFIW-B1300**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- 

The Equipment named above is confirmed to comply with the requirements setout in the European Council Directive on the Approximation of the Laws of the Member States relating to RED (2014/53/EU) and RoHS (2011/65/EU). The equipment passed the test which was performed according to the following European standards:

EN 300 328 V2.1.1; EN 301 893 V2.1.0; EN 300 440 V2.1.1

EN 301 489-1 V2.1.1; EN 301 489-17 V3.1.1

IEC/EN 62368-1:2014 (Second Edition)

IEC/EN 60065:2014 (Eighth Edition)

EN 60950-1:2006 (Second Edition) + A1:2010 + A2:2013

This product uses WiFi

2.4GHz Operating Frequency is 2400~2483.5MHz; 5GHz Operating Frequency is 5150 ~ 5250MHz and 5725 ~ 5850MHz;

RF Exposure: The highest measured 1g (simultaneous transmission)


Manufacturer: GL Technologies (Hong Kong) Limited, Unit 210D, 2/F, Enterprise Place Hong Kong Science Park, Shatin, Hong Kong  
Shenzhen Guanglianzhitong Tech Co., Ltd. Room 305-306, Skyworth Digital Bldg., Songbai Rd., Bao'an, Shenzhen, China

---



<b>CPU</b>	Atheros IPQ4028 Quad-core ARM, @717MHz
<b>Memory / Storage</b>	DDR3L 256MB / FLASH 32MB
<b>Frequency</b>	2.4GHz + 5GHz
<b>Transmission Rate</b>	400Mbps (2.4G) + 867Mbps (5G)
<b>Max Tx Power</b>	20dBm
<b>Protocol</b>	IEEE 802.11 a/b/g/n/ac
<b>Ethernet Type</b>	10/100/1000M
<b>Power Input</b>	12V  1.5A
<b>Power Consumption</b>	< 7W
<b>Dimension / Weight</b>	116*116*37mm / 270g
<b>Interface</b>	1WAN, 2LAN, 1USB3.0, 2buttons
<b>Working Temperature</b>	0 - 45°C (32 - 113°F)

## 1 HARDWARE

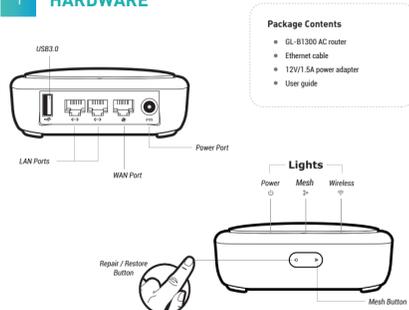

### Repair / Reset

If you cannot access the web-based setup page or cannot connect to the router, you can press the **Reset** button.

- Press and hold for **3 seconds** then release to repair your network.
- Press and hold for **10 seconds** then release to reset the router to factory settings. All user data will be cleared.

## 2 FIRST-TIME SETTINGS

### 1 Plug in power & Internet cable

When powered up, your router will broadcast a Wi-Fi signal with the SSID: **GL-XXXXX-xxx**.



Plug the Internet cable into WAN

### 2 Connect via Wi-Fi

The default Wi-Fi password is **goodlife**, and it is also printed on the bottom of the router.

Wi-Fi


GL-XXXXX-xxx

Search the SSID and connect to it

Password \*\*\*\*\*

Default password is goodlife

### or Connect via LAN

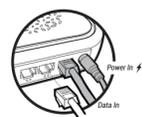

Plug the cable connecting your computer into LAN

### 3 Set up the router


Visit <http://192.168.8.1> in your browser to set up your router; start by choosing your preferred language.



Access the above address using your browser

## 3 INTERNET SETTINGS

After you have set up your router, you will see the main web interface. Find the **Internet Settings** icon, then click the **New Connection** button. Choose **Cable** from the pop-up **Internet Settings** window.

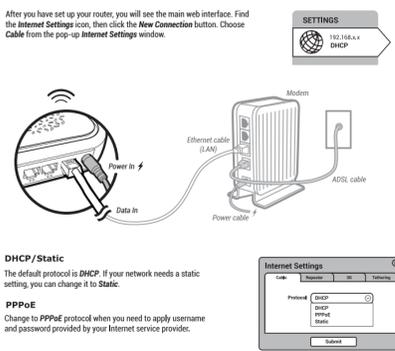


### DHCP/Static

The default protocol is **DHCP**. If your network needs a static setting, you can change it to **Static**.

**PPPOE**  
Change to **PPPOE** protocol when you need to apply username and password provided by your Internet service provider.

## 4 MESH NETWORK SETTINGS


If you have more than one GL-B1300 router, you can set up a mesh network. In a mesh network, the routers will share same Wi-Fi names (SSID) for 2G and 5G Wi-Fi networks.

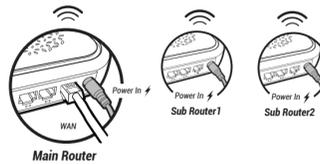

### 1 Plug in power & Internet cable


The router with Ethernet cable plugged into its WAN port is the **Main Router**. The other routers without Ethernet cables are **Sub Routers**.

- By default, the router with Ethernet cable plugged into its WAN port is the main router. You need to reset the router to change your main router or release a router used to be in a mesh network.

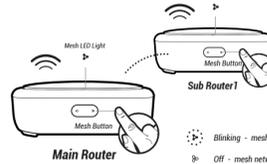

### 2 Pair routers

You can pair two routers by pressing their **Mesh Buttons** at the same time. The pairing starts right after their **Mesh LED** lights start blinking. After 2 minutes, their mesh lights will be solid indicating the mesh network is ready. You can pair another router with the main router by following above steps.

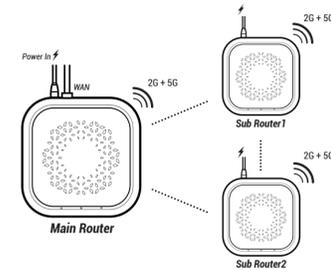


### 3 Mesh network

The mesh network works among routers when their **Mesh LED** lights are solid. Home materials and layout can affect how Wi-Fi signal travels. You might need extra routers to get full Wi-Fi coverage if you have a long narrow layouts and thick walls.

## 5 WIRELESS SETTINGS

Find the **Wireless Settings** icon, then click the **Setting** button. The **Wireless Settings** window will pop up.

On the **Wireless Setting** page, you can change your **Wi-Fi Name (SSID)** and **Wi-Fi Password** to increase the security of your router. New changes will be in effect after you click **Submit**.

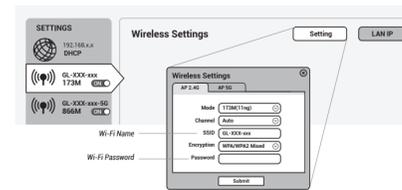

- It is **NOT** recommended to turn off your wireless network when you are connecting to your router wirelessly. Otherwise, all wireless connections to your router will be cut off immediately. To use the hotspot again, you can plug your router into a computer and turn on the Wi-Fi, or you can repair the network (See Hardware).

## 6 OPENVPN CLIENT

This router supports OpenVPN client. Using OpenVPN will slow down your Internet speed because of data encryption.

Click the **OpenVPN** icon and go to the VPN setting page. The first time it will ask you to upload your OpenVPN client configuration (ovpn files). Usually, you can download it from your OpenVPN service provider's website or console. Consult your service provider for more details.



### 1 Upload OpenVPN configurations



After uploading the ovpn files, the router will check them. If you are prompted for a username and password, or a private key passphrase, or both, a window for **VPN Authentication** will pop up so that you can **Submit** these information for all files you upload.

This may not be necessary for some service providers.

### 2 Connect to OpenVPN

Now you can choose from a list of configurations and apply your choice to connect as OpenVPN client.

Enable OpenVPN connection  Enable

Force all connected clients to use VPN  Force VPN  No Internet VPN is not connected

Change your config file  Config File

Apply

To protect against DNS leaks, you must customize your DNS servers. You can enable **Force all clients** to override the DNS server settings for your client devices. To customize your DNS server, go to **Internet Settings > Custom DNS**



- To get more detailed instructions or information about compatible VPN service providers, please visit <http://gl-net.com/docs/>

## 7 DIY GUIDANCE

### OpenWrt Firmware

Our firmware is developed based on OpenWrt and you can download all the firmwares from our website: [www.gl-net.com/firmware](http://www.gl-net.com/firmware). Find the available firmwares from the folder according to your device model, and they are located in different sub-folders:

- v1 folder contains release versions. It should be the default firmware shipped with the router.
- clean folder contains clean versions of OpenWrt firmware, with Luci software only. By default, Wi-Fi is disabled and you need to enable it in Luci.
- tor folder contains Tor firmware for the device.

### DDWRT Firmware

DDWRT official firmware is not available for GL-Net models except for GL-AR150 mini router. For further information, please visit <https://www.dd-wrt.com>

### Tor Firmware

Each model has its own Tor firmware which you need to flash to the router. It is quite easy and you can refer to our online tutorial at [www.gl-net.com/docs/openwrt/tor/](http://www.gl-net.com/docs/openwrt/tor/)

### Compile Your Own Firmware

If you have sufficient technical skills, you can compile your own firmware and flash to the router. Please refer to our online docs at [github.com/dominic-team/openwrt-cc](https://github.com/dominic-team/openwrt-cc)

### Uboot Failsafe

If you flash the wrong firmware, you would brick your router. But you still can recover it by using uboot failsafe. Please refer to the guide at [www.gl-net.com/docs/diy/uboot/](http://www.gl-net.com/docs/diy/uboot/)

- Using above DIY features might have a risk of bricking your router. We have no obligation to provide support, maintenance, upgrades, modifications, or new releases on DIY features. We reserve the rights of interpretation on above DIY contents without further announcement.

## 8 SUPPORT

### Warranty

Each router has **one-year warranty**. Accessories have **three-month warranty**.

- Please use standard power adapter, 12V / 1.5A.
- Any damage to the router caused by not following the instructions will render this warranty null and void.
- Any damage to the router caused by modifying the PCB, components or case will render this warranty null and void.
- Issues caused by the use of third-party firmware may not get official support from us.
- Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
- Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

### Technical Supports & General Enquiry

For more detailed and updated instructions, please visit our website [www.gl-net.com/docs](http://www.gl-net.com/docs).

For further questions, you can get help from the following ways:

- Send us an email at [service@gl-net.com](mailto:service@gl-net.com)
- Open a ticket at [www.gl-net.com/tickets](http://www.gl-net.com/tickets)
- Ask in our forum [www.gl-net.com/forums](http://www.gl-net.com/forums)
- Ask in other forums e.g. **OpenWrt**, **LEDE** or other professional websites

### Hong Kong Office

GL Technologies (Hong Kong) Limited  
2100 Enterprise Place, 5W Science Park, Hong Kong

### Shenzhen Office

深圳市广联网络科技有限公司  
深圳市宝安区西乡街道铁岗社区铁岗大道305-306室 | +86-0755-86606126



<http://www.gl-net.com/docs>

FCC ID: 2AF1W-B1300

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Equipment named above is confirmed to comply with the requirements set out in the European Council Directive on the Approximation of the Laws of the Member States relating to RED (2014/53/EU) and RLF (2011/65/EU). The equipment passed the test which was performed according to the following European standards:

- EN 300 328 V2 1.1, EN 301 893 V2 1.0, EN 300 440 V2 1.1
- EN 301 489-1 V2 1.1, EN 301 489-17 V2 1.1
- IEC/EN 62368-1:2014 (Second Edition)
- IEC/EN 60950:2014 (Eighth Edition)
- EN 60950-1:2006 (Second Edition) + A1:2010 + A2:2013

This product uses WiFi 2.4GHz Operating Frequency is 2400-2483.5MHz; 5GHz Operating Frequency is 5150 - 5250MHz and 5725 - 5850MHz; RF Exposure: The highest measured 1g (simultaneous transmission) Manufacturer: GL Technologies (Hong Kong) Limited, Unit 2100, 2/F, Enterprise Place Hong Kong Science Park, Shatin, Hong Kong Shenzhen Guanglianchong Tech Co., Ltd. Room 305-306, Skyworth Digital Bldg., Songhai Rd., Bao'an, Shenzhen, China



CPU	Atheros IPQ4028 Quad-core ARM, @717MHz
Memory / Storage	DDR3L 256MB / FLASH 32MB
Frequency	2.4GHz + 5GHz
Transmission Rate	400Mbps (2.4G) + 867Mbps (5G)
Max Tx Power	20dBm
Protocol	IEEE 802.11 a/b/g/n/ac
Ethernet Type	10/100/1000M
Power Input	12V ~ 1.5A
Power Consumption	< 7W
Dimension / Weight	116*116*37mm / 270g
Interface	1WAN, 2LAN, 1USB3.0, 2buttons
Working Temperature	0 - 45°C (32 - 113°F)



GL-Net  
HOME AC ROUTER  
GL-B1300 USER GUIDE

ver 20171218.1