GL·iNet



User Manual

GL-X2000 / Spitz Plus

Dual-SIM Wi-Fi 6 Cellular Router

Firmware Version 4.7.13

About This Manual

This manual is your go-to resource for getting started with your device, covering basic product information, hardware connections, web management interface login, initial setup, and detailed instructions for all software features in the web admin panel.

With this guide, you will be able to:

- Understand key product details
- Choose a suitable location for the device
- Complete hardware connections via step-by-step guidance
- Log into the web management interface with ease
- Configure initial settings and master all software features in the web admin panel

Format Conventions

These symbols/colors help you follow steps faster.

Convention	What It Means
Underlined teal text	Clickable link which can open a web page or a specific section
Bold text	Emphasize or mark some key information in this document, such as titles, hyperlinks, and exact menu/item names on the device's web interface
>	The path to load the corresponding page (e.g., System > Firmware)
Note	Key information for setup, operations, and safety. Ignoring this might result in setup failure, device malfunction or damage
Tips	Advice to help you use your device better

Note:

- Device features may vary by model and firmware version.
- Product availability is subject to regional differences or ISP specifications.
- All images, procedures, and descriptions in this guide are for illustrative purposes only and may differ from your actual usage experience.

Need More Help or Info?

- Firmware Update: GL.iNet Firmware Download Center | Router
- Community: Discuss our products and share insights at GL.iNet Community Forum
- Technical Support: Contact our Technical Support at Contact page

Copyright © 2026 GL.iNet Technology (HK) Ltd. All rights reserved.
No part of this manual may be reproduced, transcribed, translated, or distributed in any form or by any means, without the prior written permission of GL.iNet Technology (HK) Ltd. GL.iNet is a registered trademark of GL.iNet Technology (Hong Kong) Ltd. in China and/or other countries and regions. All other brand and product names mentioned herein are trademarks or registered trademarks of their respective owners.
The content of this document is subject to change without notice due to product version upgrades or other reasons. Unless otherwise agreed, this document is provided for informational purposes only, and all statements, information, and recommendations contained herein do not constitute any form of warranty.

GL Tech (HK) Ltd: #601, 5W, Hong Kong Science Park, N.T. Hong Kong
GL Intelligence, Inc.: 10400 Eaton Place, Suite 215, Fairfax, VA 22030

Contents

Chapter 1 Get To Know Your Router 6

1.1 Product Overview 7

1.1.1 Appearance 7

1.1.2 Interface and Button 8

1.1.3 LED 9

1.2 Specifications 10

1.3 Package Contents 11

Chapter 2 Hardware Connection 12

2.1 Choosing a Location 13

2.2 Connecting the Router 13

Chapter 3 Log In To Your Router 14

Chapter 4 Set Up Internet Connection 16

4.1 Quick Setup Wizard 17

4.2 Manually Set Up Internet Connection 18

4.2.1 Connect to the Internet via Ethernet Cable 19

4.2.2 Connect to the Internet via an Existing Wi-Fi 23

4.2.3 Connect to the Internet via USB Tethering 29

4.2.4 Connect to the Internet via Cellular 34

Chapter 5 Wireless 42

5.1 Wi-Fi Status Display 43

5.2 Wireless Settings 44

5.2.1 5 GHz Wi-Fi 44

5.2.2 2.4GHz Wi-Fi 46

Chapter 6 Clients 48

6.1 Device Details 50

6.2 Action 52

6.3 Remove Clients 54

6.4 Sort 55

Chapter 7 Cloud Services 56

7.1 GoodCloud 57

7.1.1 Enable GoodCloud 57

7.1.2 Manage Your Router 60

7.1.3 Unbind Device 64
7.1.4 Disable GoodCloud 64
Chapter 8 Get To Know VPN 65
8.1 Introduction 66
8.2 Application Scenarios 67
Chapter 9 VPN Dashboard 69
9.1 VPN Setup Wizard 70
9.2 VPN Client 73
9.2.1 Client Options 74
9.2.2 Policy Mode 76
9.2.3 Global Options 77
9.3 VPN Server 79
9.3.1 Server Options 80
9.3.2 Server Route Rule 81
9.3.3 Global Options 82
Chapter 10 Set Up VPN Server 83
10.1 Set Up OpenVPN Server 84
10.1.1 Preparation 84
10.1.2 Setup Steps 85
10.1.3 Troubleshooting 87
10.2 Set Up WireGuard Server 88
10.2.1 Preparation 88
10.2.2 Setup Steps 89
10.2.3 Troubleshooting 92
Chapter 11 Set Up VPN Client 93
11.1 Set Up OpenVPN Client 94
11.1.1 Preparation 94
11.1.2 Set Up NordVPN 94
11.1.3 Set Up OpenVPN Client Manually (for other providers) 100
11.2 Set Up WireGuard Client 103
11.2.1 Preparation 103
11.2.2 Set Up AzireVPN 104
11.2.3 Set Up Hide.me 108
11.2.4 Set Up IPVanish 111

11.2.5 Set Up Mullvad 115
11.2.6 Set Up NordVPN 119
11.2.7 Set Up PIA (Private Internet Access) 124
11.2.8 Set Up Surfshark 128
11.2.9 Set Up WireGuard Client Manually (for other providers) 132
Chapter 12 Applications 137
12.1 Plug-ins 138
12.2 Dynamic DNS 139
12.2.1 Enable DDNS 139
12.2.2 Check if DDNS Works 142
12.2.3 HTTPS Remote Access 144
12.2.4 SSH Remote Access 146
12.3 Network Storage 148
12.3.1 Connect Storage 148
12.3.2 Set Up Samba 149
12.3.3 Set Up WebDAV 152
12.3.4 Set Up DLNA 155
12.4 AdGuard Home 156
12.5 Parental Control 158
12.5.1 Quick Setup 158
12.5.2 Troubleshooting 166
12.6 Tailscale 167
12.6.1 Set Up Tailscale 168
12.6.2 Allow Remote Access WAN 171
12.6.3 Allow Remote Access LAN 172
12.6.4 Custom Exit Nodes 173
12.7 eSIM Management 174
12.7.1 Current eSIM Status 175
12.7.2 eSIM Profile List 176
Chapter 13 Network 183
13.1 Port Forwarding 184
13.1.1 DMZ 184
13.1.2 Port Forwarding 185
13.2 Multi-WAN 187

13.2.1 Interface Status Track 187
13.2.2 Multi-WAN Mode 190
13.3 LAN 193
13.2.1 Basic Settings 193
13.2.2 DHCP Server 194
13.2.3 Address Reservation 196
13.4 Guest Network 197
13.4.1 Basic Settings 197
13.4.2 DHCP Server 198
13.5 DNS 200
13.5.1 DNS Server Settings 201
13.5.2 Edit Hosts 203
13.6 Port Management 205
13.7 Network Mode 206
13.8 IPv6 208
13.8.1 IPv6 Mode 209
13.8.2 DNS Acquisition Method 209
13.9 Drop-in Gateway 210
13.10 IGMP Snooping 212
13.11 Network Acceleration 213
13.12 NAT Settings 214
13.12.1 Full Cone NAT 214
13.12.2 SIP ALG 214
Chapter 14 System 216
14.1 Overview 217
14.2 Upgrade 218
14.2.1 Firmware Upgrade 218
14.2.2 Modem Upgrade 220
14.3 Scheduled Tasks 221
14.3.1 LED Display Schedule 221
14.3.2 Schedule Reboot 222
14.3.5 5GHz Wi-Fi Schedule 223
14.3.6 2.4GHz Wi-Fi Schedule 225
14.4 Time Zone 227

14.5 Log 228
14.6 Security 230
14.6.1 Admin Password 230
14.6.2 Access Control 231
14.6.3 Remote Access Control 233
14.6.4 Open Ports on Router 234
14.7 Reset Firmware 235
14.8 Advanced Settings 236

Chapter 1

Get To Know Your Router

This chapter covers the router overview, specifications, and package contents.

1.1 Product Overview

Spitz Plus (GL-X2000) is a dual-SIM 4G LTE Wi-Fi 6 cellular gateway designed to provide fast, reliable connections especially in remote areas and during road trips. Featuring 3-Carrier Aggregation, the router streams data on three carrier bands simultaneously, providing 3x available bandwidth to avoid congestion. It offers four internet access methods: Cellular (SIM cards), ethernet, repeater, and tethering. It supports multi-WAN (failover and load-balancing), VPN (OpenVPN and WireGuard), parental controls, AdGuard Home, port forwarding, Tailscale, and more.

1.1.1 Appearance










1.1.2 Interface and Button

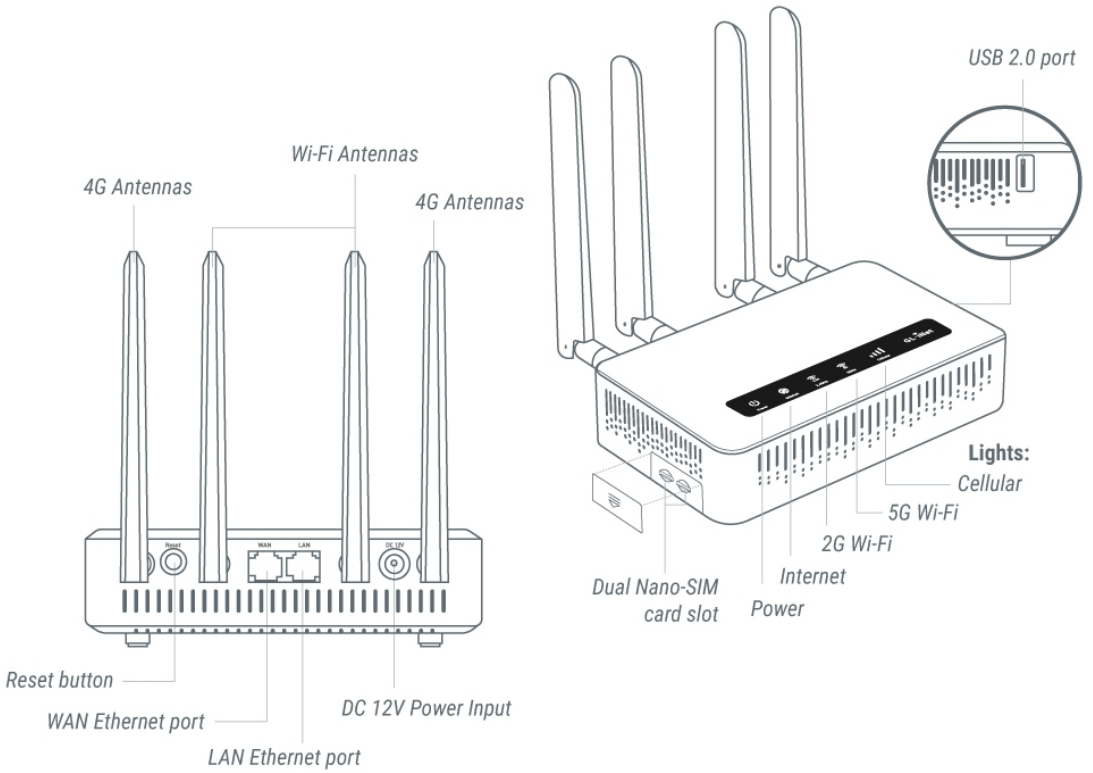

Item	Description
DC 12v Power Input	Connects to the power adapter.
WAN Ethernet Port	Connects to a modem or an Ethernet outlet for Internet.
LAN Ethernet Port	Connects to wired devices if needed.
USB 2.0 Port	For USB storage devices, phone USB-tethering, and compatible cellular dongles.
Wi-Fi Antennas	For 2.4GHz & 5GHz dual-band Wi-Fi signal transmission and reception.
4G Antennas	For 4G LTE cellular network signal transmission and reception.
Dual Nano-SIM Card Slot	For inserting two Nano-SIM cards. Only one SIM can be active at a time.
Reset Button	Press and hold for **3 seconds** and then release to repair your network.

	Press and hold for **8 seconds** and then release to reset the router to factory default.

1.1.3 LED

Condition status	Power	Internet	2.4Ghz	5Ghz	Cellular
Normal (connected to the internet)	Green	Green	Green	Green	Green
Not connected to the internet	Green	Off	Green	Green	Green
Updating firmware	Green	Blinking green (every 0.5s)	Blinking green (every 0.5s)	Blinking green (every 0.5s)	Green
Resetting router (hold down "reset" button for > 3s)	Blinkng green (every 1s)	Green	Green	Green	Green
Restoring router to factory settings (hold down "reset" button for 10s)	Fast blinking green (every 0.25s)	Green	Green	Green	Green

1.2 Specifications

Interface	1 x WAN Ethernet port 1 x LAN Ethernet port 1 x USB 2.0 port 2 x Nano SIM card slots 1 x Reset button
CPU	Qualcomm Dual-core, @1GHz
Memory / Storage	DDR3L 512MB / NAND Flash 128MB
Protocol	IEEE 802.11a/b/g/n/ac/ax
Wi-Fi Speed	574Mbps (2.4GHz), 2402Mbps (5GHz)
Ethernet Speed	10/100/1000Mbps
Antennas	2 x Cellular Antennas (SMA, 600M~3.8GHz) 2 x Wi-Fi Antennas (PR-SMA, 2.4G~2.5GHz, 5.15~5.84GHz)
LEDs	Power / Internet / 2.4G Wi-Fi / 5G Wi-Fi / Cellular Signal Strength
Power Input	DC5521, 12V/2.5A (5.5*2.1mm) [default adapter] / 9V~36V
Power Consumption	< 14W
Operating Temperature	0 ~ 40°C (32 ~ 104°F)
Storage Temperature	-20 ~ 70°C (-4 ~ 158°F)
Dimension / Weight	141 x 86 x 36 mm / 443g
Other Tools	Datasheet / Firmware / App / Unboxing / Tutorials / Media Kit

*Wireless speeds are based on IEEE 802.11 standards (e.g., 802.11ax for Wi-Fi 6). Actual throughput and range may be lower due to environmental obstacles (walls, metal), network congestion, or client device capabilities.

*Use of Wi-Fi 6 (802.11ax) and its features (OFDMA, MU-MIMO, 1024-QAM) requires client devices to support the corresponding technologies.

1.3 Package Contents

The package includes:

- 1 x Spitz Plus (GL-X2000)
- 1 x User manual
- 4 x External antennas
- 1 x Thank you card
- 1 x Ethernet cable
- 1 x Wall mount kit
- 1 x Adhesive pad
- 1 x Power adapter
- 1 x Converter (Base on your shipping country)



1 x User manual



1 x Thank you card



1 x RJ45 Ethernet cable



1 x Power adapter (1.8 meters)



4 x External antennas



1 x Wall mount kit

1 x Adhesive pad



1 x Spitz Plus (GL-X2000)



Converters
* EU, UK & AU Plug for Quectel EG120K-EA Module
* US Plug for Quectel EG120K-NA Module

Chapter 2

Hardware Connection

This chapter covers router location selection and connection steps.

2.1 Choosing a Location

Follow these tips to choose a location for best performance.

- **Avoid moisture and hea**t: Do not place the router in areas exposed to water, humidity, or high temperatures (e.g., sinks, radiators).
- **Ventilation and cooling**: Place the router in a cool, well- ventilated area for proper heat dissipation.
- **Central placement**: Position the router where it can connect to power and multiple devices easily (e.g., living room central zone).
- **Cable convenience**: Route cables and the power cord safely to prevent tripping hazards.
- **Placement**: Place the router on a flat, stable surface (shelf, desktop), or mount it on the wall using the included wall mount kit.
- **EMI avoidance**: Keep the router away from electromagnetic interference sources (Bluetooth devices, microwaves) to minimize signal interference.

2.2 Connecting the Router

1. **Power on**

   Put the two-piece power adapter together. Connect it to the router and plug it into an outlet. It will start up automatically.

2. **Connect a device to the router**

   Connect a device (e.g., laptop or smartphone) to the router via Wi-Fi or an Ethernet cable.

   - **Wi-Fi**: On your device, go to Settings > WLAN, locate the router's Wi-Fi network name in the available networks list and enter the password. You can find the default network name and password printed on your router's label.
   - **Ethernet**: Connect your device to the router's LAN port via an Ethernet cable.

3. **Log in to the router**

   The Internet is unavailable when connecting to the router for the first time. Please log in to the router as instructed in Chapter 3 to complete the initial setup before accessing the Internet.

Chapter 3

Log In To Your Router


This chapter guides you to log in to your router via web admin panel.

Configure and manage your router through a web-based management interface, which can be accessed on any Windows, Mac OS or Linux OS with a web browser, such as Microsoft Edge, Google Chrome, Mozilla Firefox or Apple Safari.

Note: If you prefer using the GL.iNet app instead of the web admin panel, download the app and follow the on-screen prompts.

Follow the steps below to log in to your router via the web admin panel.

1. Connect a device (e.g., a computer or laptop) to the router via Wi-Fi or an Ethernet cable.
2. Open a web browser (Chrome and Edge are recommended) and visit http://192.168.8.1. You will be directed to the login page of the web admin panel. If you fail to access the web admin panel, see here for troubleshooting.
3. Set up your admin password. A strong password is recommended for security. Then click **Next** to continue.
4. You will then enter the router's web admin panel.

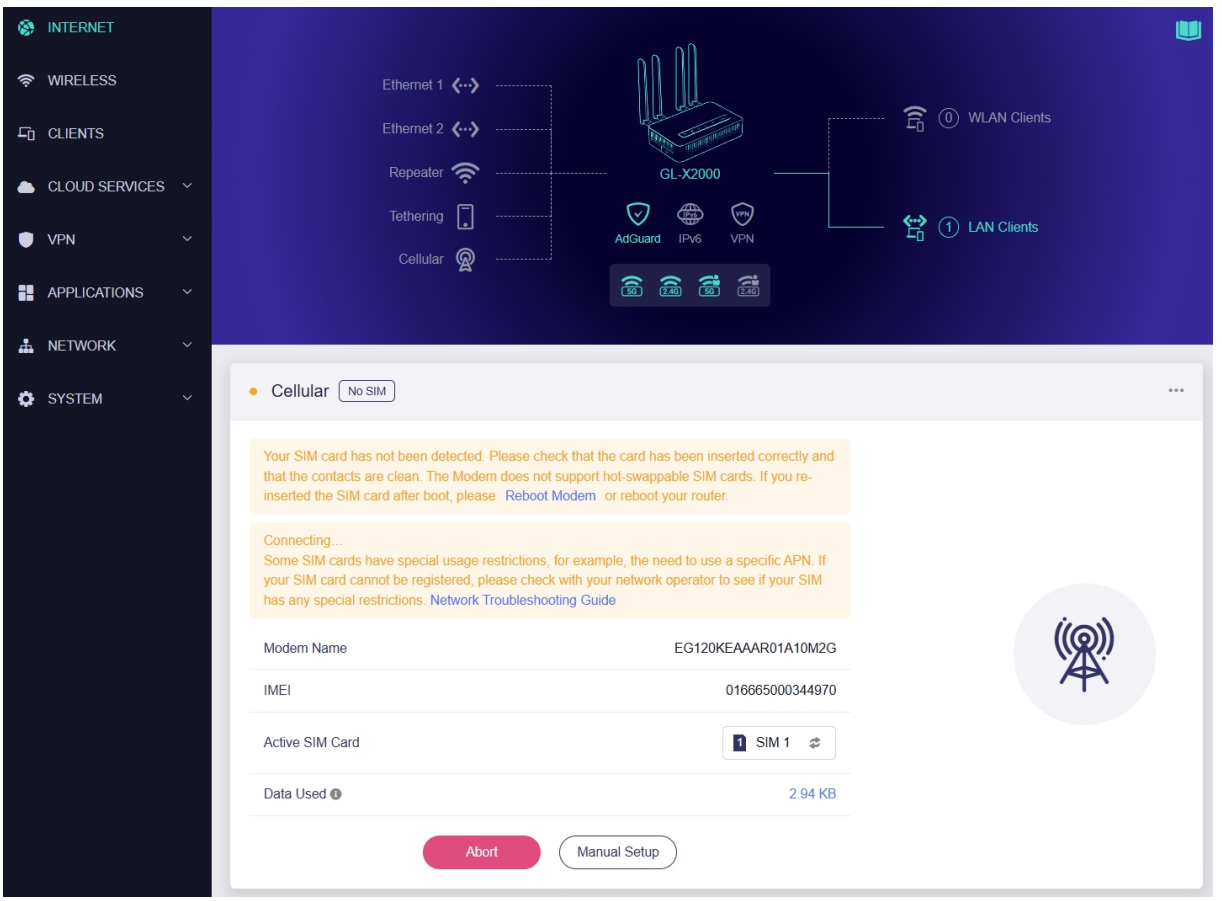

Chapter 4


Set Up Internet Connection

This chapter introduces multiple Internet connection methods for the router to adapt to diverse network environments.


4.1 Quick Setup Wizard

The Web-based Setup Wizard will guide you through the router network configuration. Follow the steps below to start the wizard.

1. Log in to the router's web admin panel as instructed in Chapter 3.
2. On the homepage, click the book icon in the top right corner.

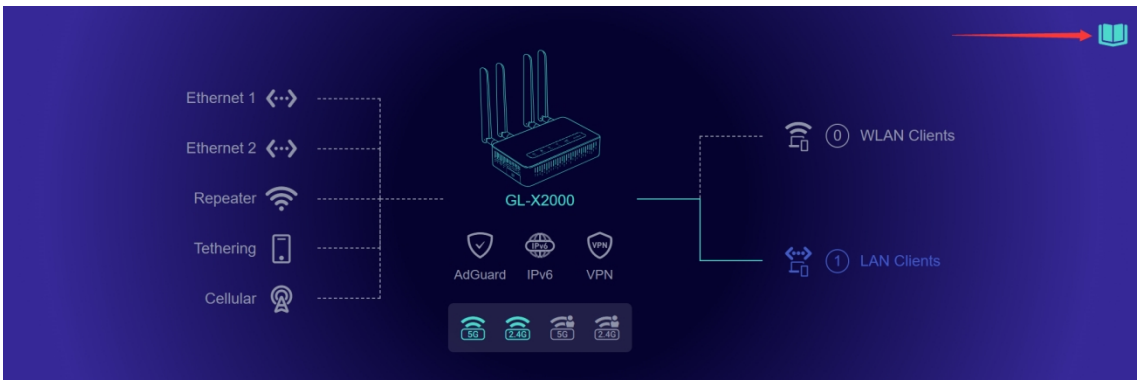

3. Follow the Setup Wizard to configure your router and establish an internet connection.

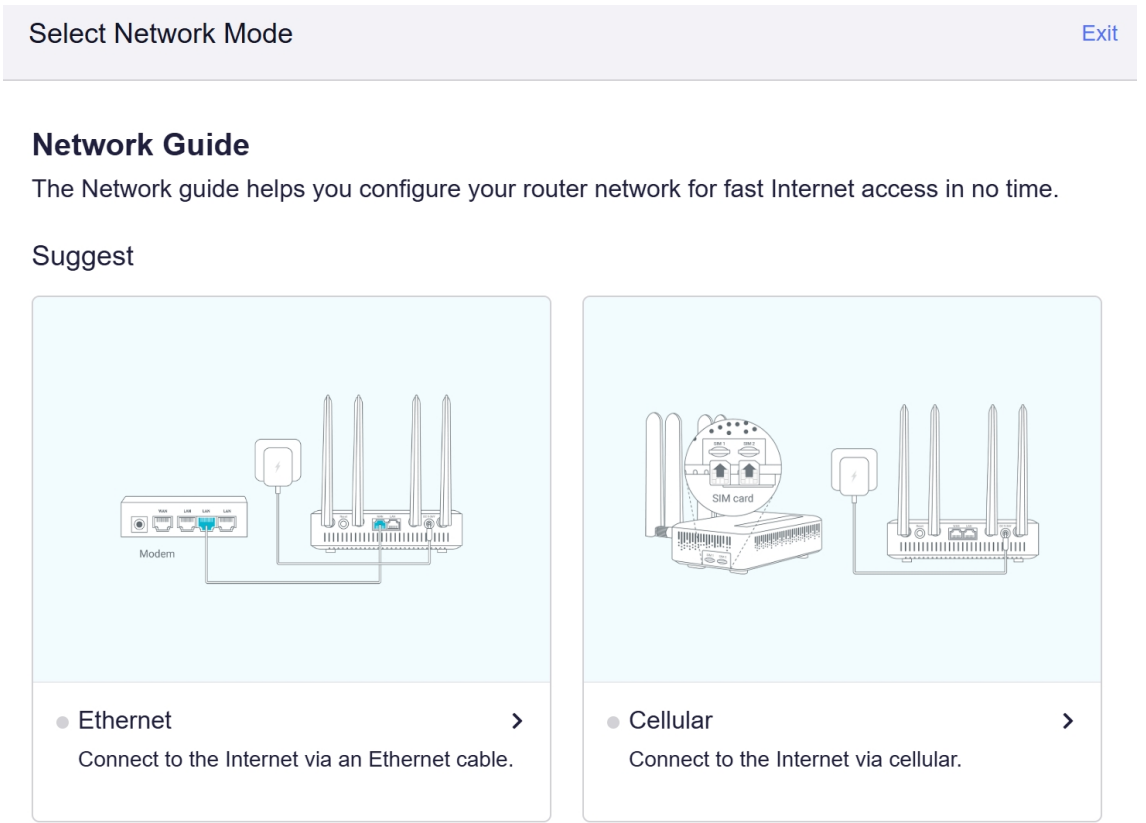

If using the GL.iNet app, follow the on-screen prompts to set up internet access.

4.2 Manually Set Up Internet Connection

While the Setup Wizard is convenient for quick network setup, manual setup allows you to adjust advanced network settings for specific requirements, and check or modify existing connections if needed.

Spitz Plus supports four internet connection methods: Ethernet, Repeater, USB Tethering, and USB Modem. Choose the appropriate method based on your usage needs.

1. **Ethernet**: Connect the router to a broadband network using an Ethernet cable plugged into the WAN port. The router typically obtains an IP address automatically via DHCP. Users can also manually configure a static IP or PPPoE settings. This method delivers high stability and fast speed, making it ideal for home and office environments with fixed broadband access.

2. **Repeater**: This mode enables the router to connect to an existing Wi-Fi network to extend the Wi-Fi signal and create a separate, secure local network. Note that transmission speeds may be reduced to some extent. It is ideal for Wi-Fi dead zones that require signal extension, or public locations where enhanced network security is needed.

3. **USB Tethering**: Connect a smartphone or other compatible device to the router via a USB cable to share the device's mobile data connection (e.g., 4G/5G) with the router. This is a convenient solution for temporary internet access, especially when outdoors or in areas without fixed broadband.

4. **Cellular**: Insert one or two Nano-SIM cards into the router's built-in dual SIM slot. The router will then connect to the Internet via 4G mobile networks, providing connectivity independent of fixed-line broadband. This method offers high mobility and is suitable for scenarios such as in-vehicle use or outdoor activities. When two SIM cards are inserted, only one SIM card can be active at a time.


4.2.1 Connect to the Internet via Ethernet Cable

Connect the router to a broadband network using an Ethernet cable plugged into the WAN port. The router typically obtains an IP address automatically via DHCP. Users can also manually configure a static IP or PPPoE settings. This method delivers high stability and fast speed, making it ideal for home and office environments with fixed broadband access.


Basic Setup

Follow the steps below to connect your router to the Internet via an Ethernet cable.

1. Connect the **WAN** port of your router to the upstream device (e.g., an ISP modem, primary router, network switch or an Ethernet jack) via an Ethernet cable.

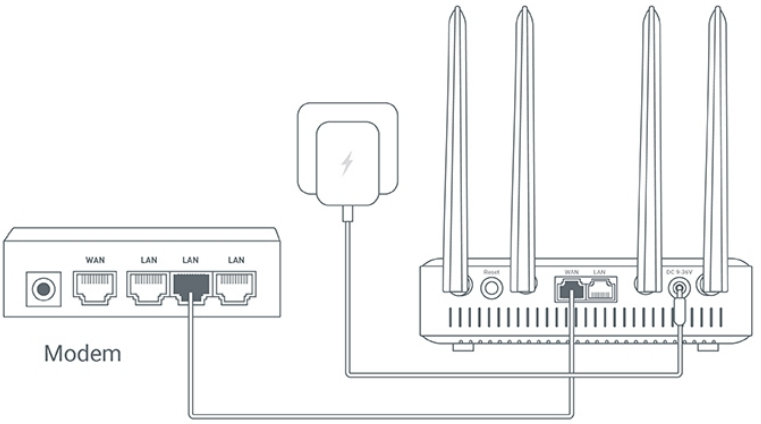


2. Log in to the router's web admin panel and navigate to **INTERNET** > **Ethernet**. If the connection is successful, the Ethernet section will display network details, including Protocol, IP Address, Gateway, and DNS Server.

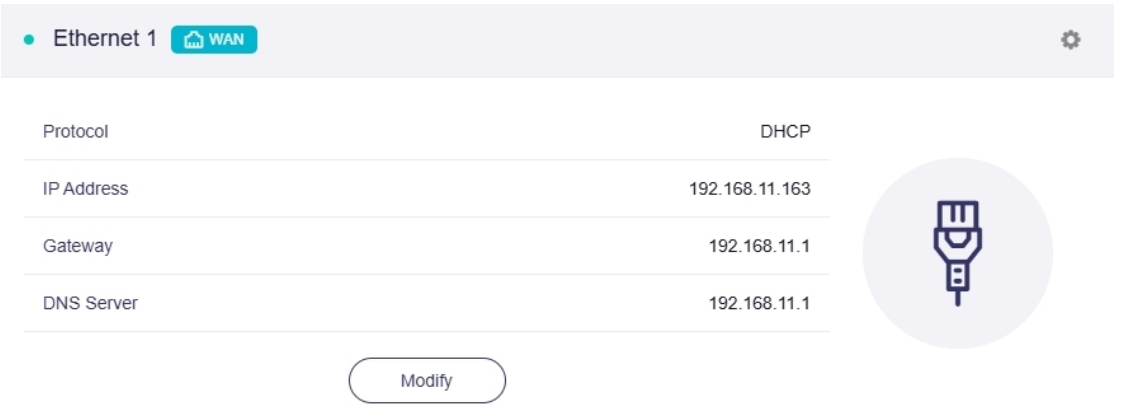


Protocol

There are three types of protocols: DHCP, Static and PPPoE. Click **Modify** to change.

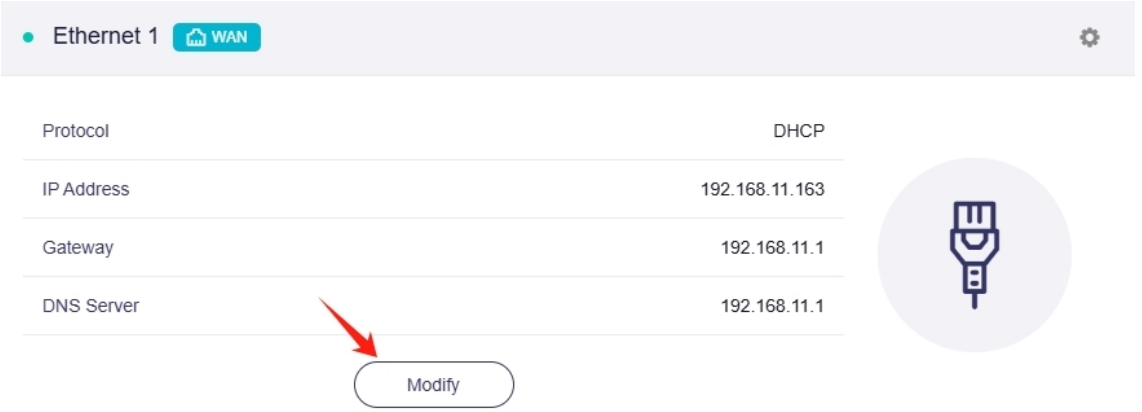


- **DHCP**

  DHCP is the default and most common network protocol, which automatically assigns IP addresses and other network configuration parameters to devices on an IP network via a client-server model.

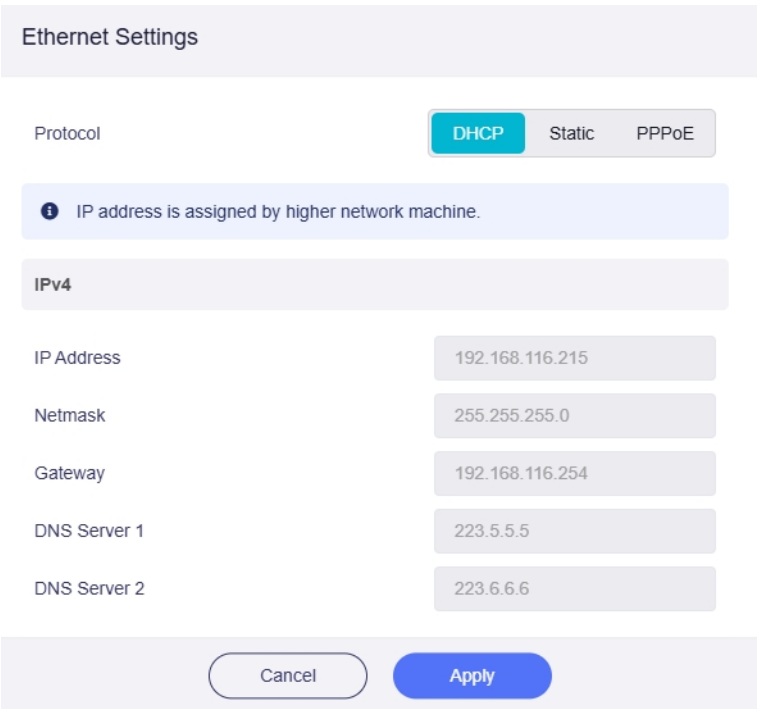


- **Static**

  A static IP address is required if your ISP (Internet Service Provider) assigns a fixed public IP address, or if you need to manually configure network parameters (e.g., IP address, gateway, subnet mask).

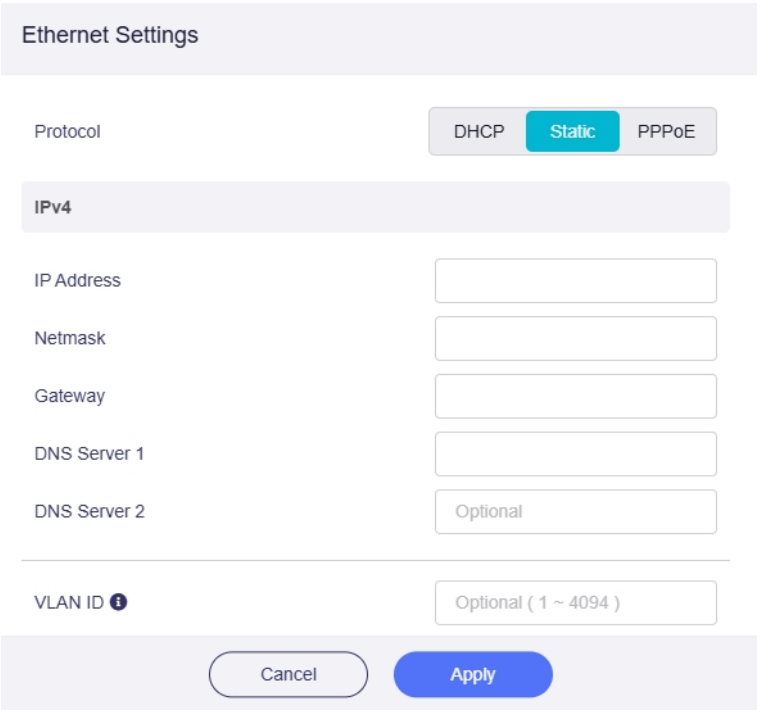


- **PPPoE**

  PPPoE (Point-to-Point Protocol over Ethernet) is a network protocol widely used by ISPs. Typically, they will provide a modem along with a unique username and password, which are required to set up an internet connection.

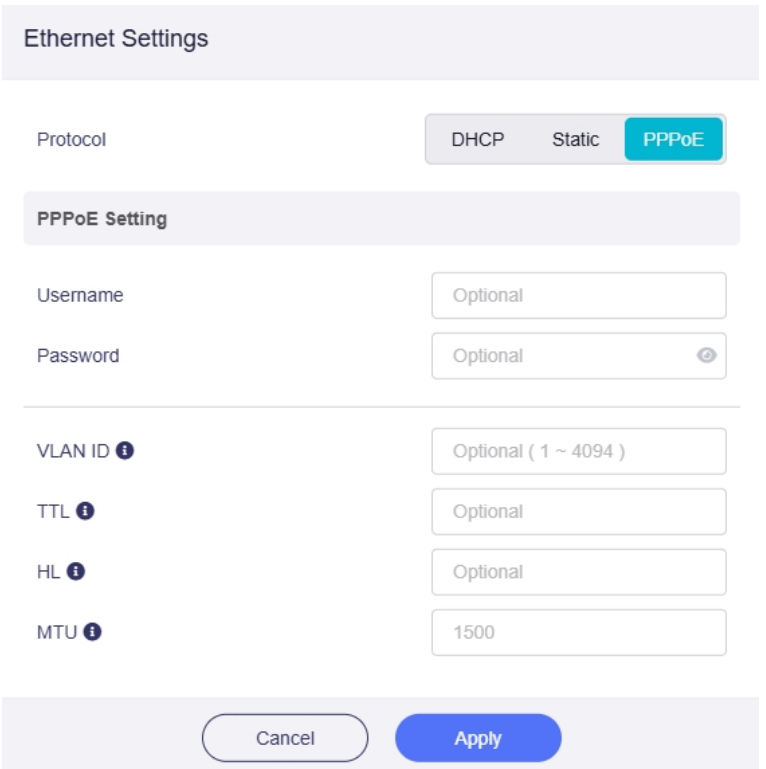

Advanced Settings

In addition to the essential settings, there are also some optional advanced settings for the above three protocols.

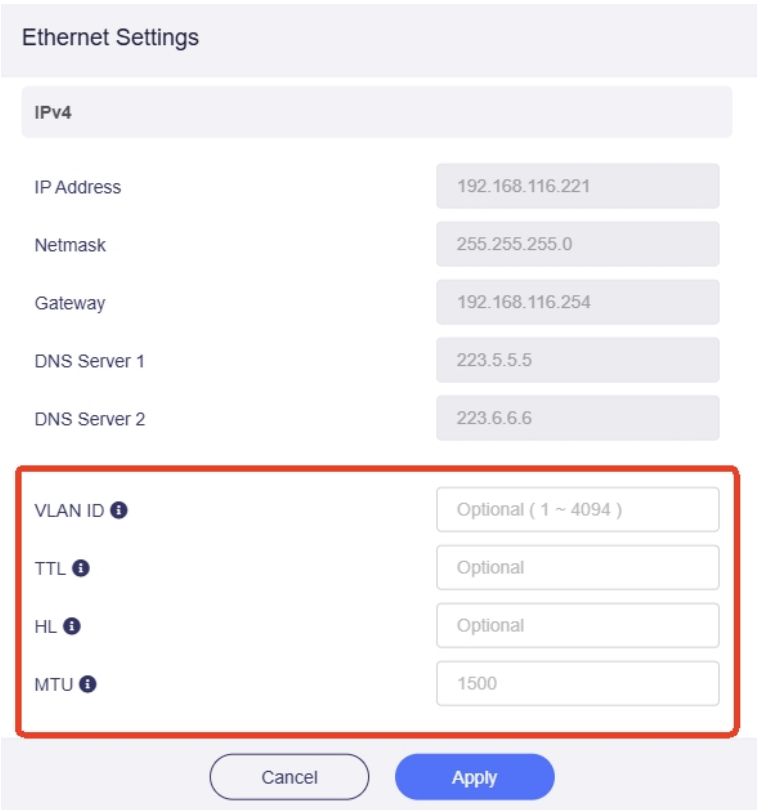

- **VLAN ID**

  This setting is needed only if the provider's server requires the interface to use a specific tagged VLAN ID.

- **TTL**

  TTL (Time To Live) defines the maximum time packets can survive in the network. By default, the router decrements the TTL of incoming packets from client devices by 1 before forwarding them. If you need to override it, you can set a fixed value here. The TTL setting is valid only for IPv4.

- **HL**


  In IPv6, the HL (Hop Limit) field limits the number of transmission hops for data packets in the network, serving as the equivalent of TTL in IPv4.

- **MTU**

  The default MTU value is 1500 bytes.

4.2.2 Connect to the Internet via an Existing Wi-Fi

Connect the router as a repeater to the existing wireless network to boost Wi-Fi signals and create a local network isolated from the primary network. When in hotels or cafes with free public hotspots, using a repeater not only strengthens Wi-Fi signals, but also provides wired and wireless access for multiple devices, and safeguards your network security.

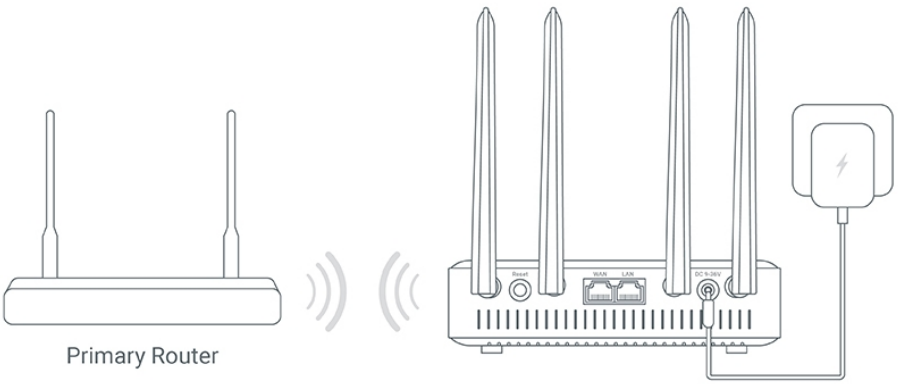


GL.iNet repeater feature works in WISP (Wireless Internet Service Provider) mode by default, which means that the router will create its own subnet and act as a firewall to protect you from the public network.


Basic Setup

Follow the steps below to connect your router to an existing Wi-Fi as a repeater.


1. Log in to the router's web admin panel, and navigate to **INTERNET** > **Repeater**. Click **Connect**.

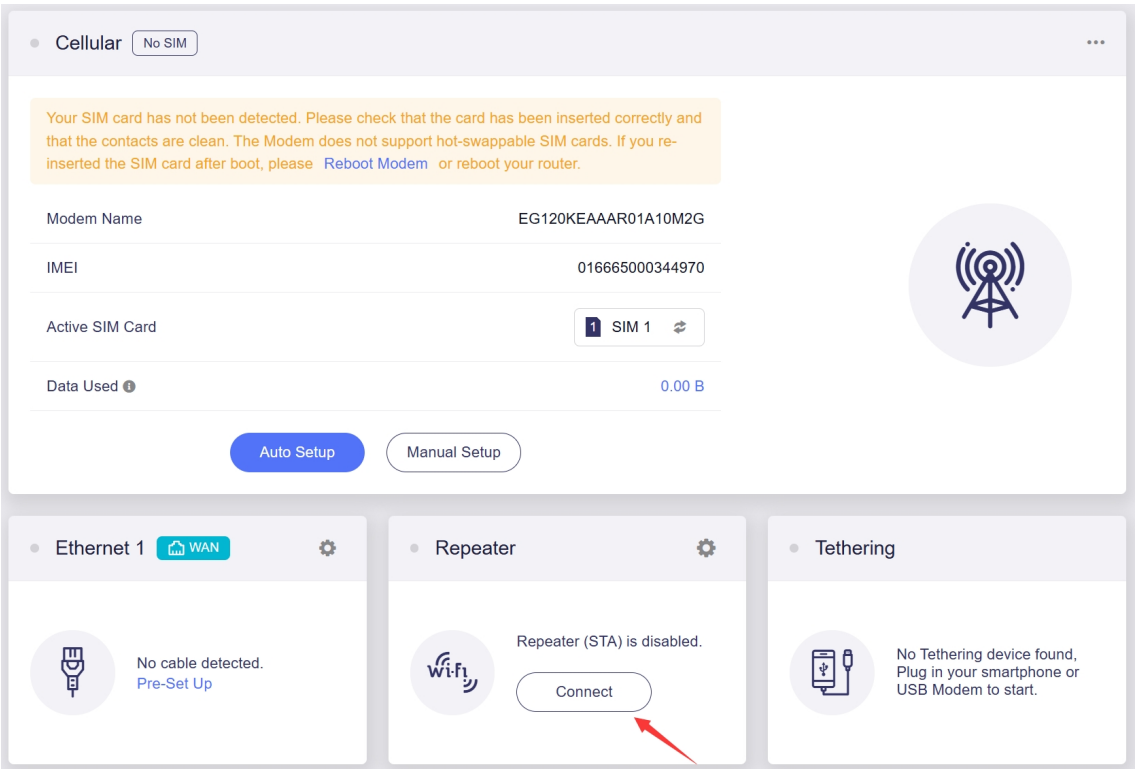


2. In the pop-up window, choose the Wi-Fi network you want to connect from the available network list.

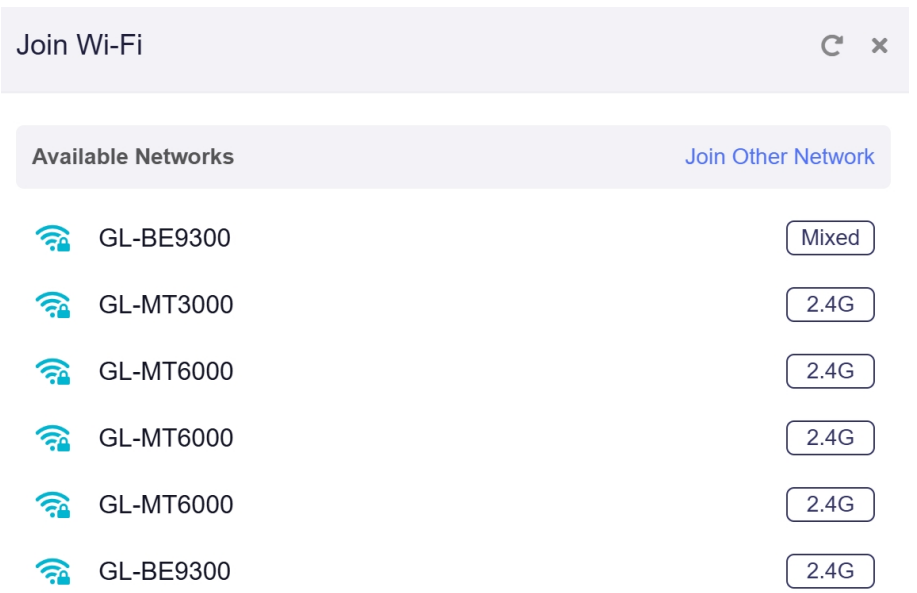


3. Enter the correct Wi-Fi password and click **Apply**.

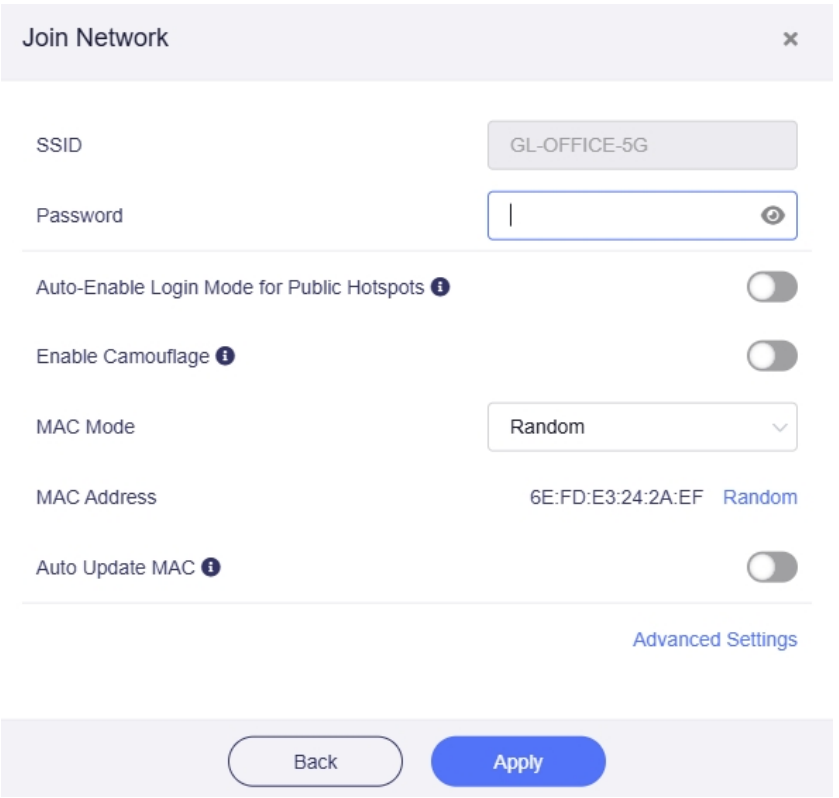

If the target Wi-Fi SSID is not in the Available Network list, click **Join Other Network** in the top right corner, manually input the Wi-Fi SSID and other info required, and click **Apply**.

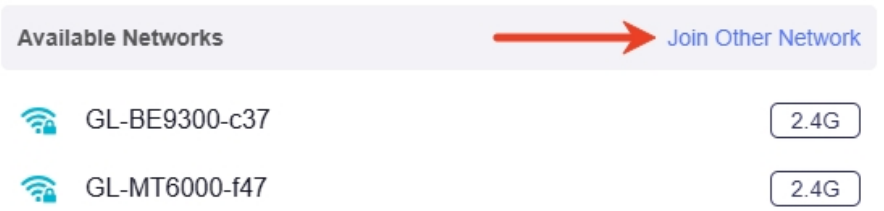


4. Wait a minute for the router to connect. Once connected, the page displays as below.

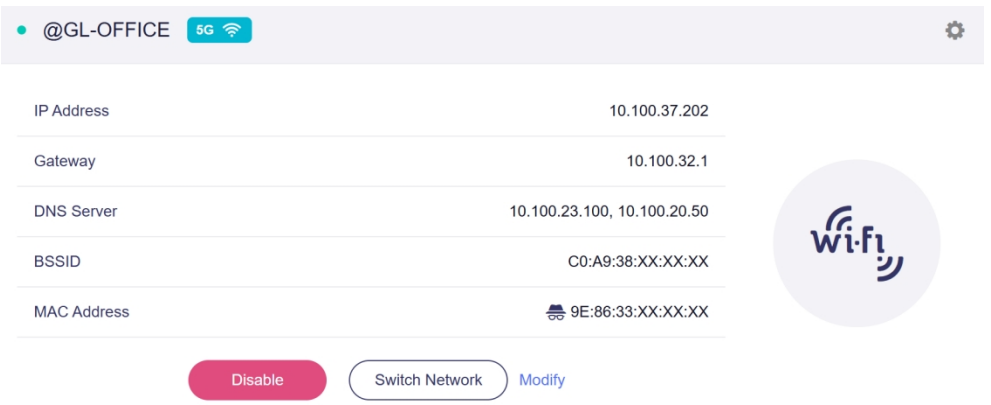


Public Hotspot Settings

When connecting the router to a public hotspot with a captive portal, it is recommended to enable the following features to improve the connection success rate.

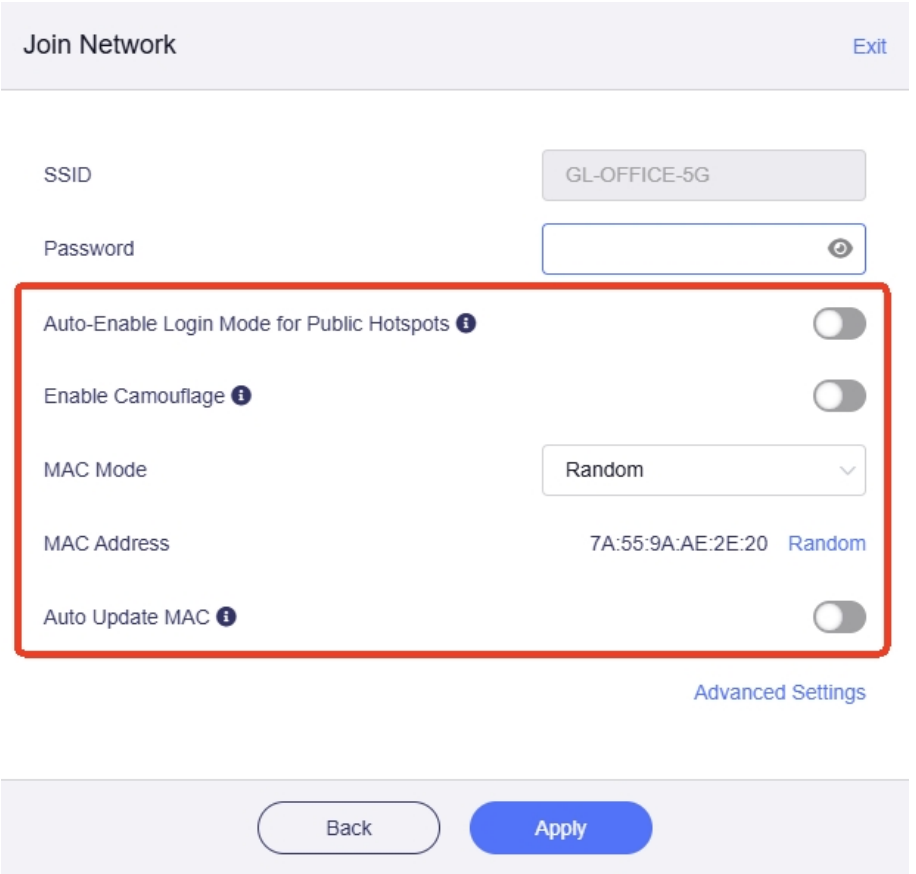

- **Auto-Enable Login Mode for Public Hotspots**

  If enabled, the router automatically enters Public Hotspot Login Mode when it is connected to a hotspot but not the Internet. In this mode, some services will be suspended while DNS mode switches to automatic, which may leak your network activity to the network provider (e.g., hotel, shopping mall). Even if disabled, the router will prompt you to enter this mode if it detects a hotspot captive portal or fails to log in.

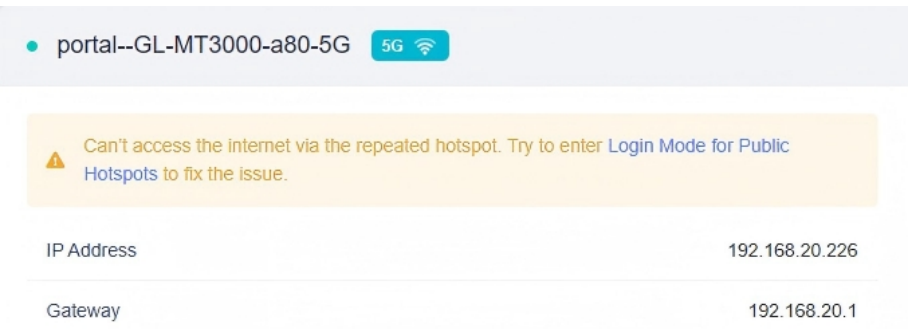

- **Enable Camouflage**

  If enabled, the router will masquerade as the client device you use to access the admin panel by emulating that device’s MAC address.
- **MAC Mode**

  Choose which MAC address the router uses to connect to the public hotspot.

  Factory: Uses the device's original factory-assigned MAC address.

  Clone: Clones a client device’s MAC address for connection.

  If the desired MAC isn’t listed, manually enter the MAC address you want to clone. Note: Many devices use randomized MAC addresses (often called Private Wi-Fi Address or random hardware address) when connecting to Wi-Fi networks. As a result, the MAC address displayed here may not match the device’s actual physical MAC.


  Random: Automatically generates a random MAC address for connection.
- **Auto Update MAC**

  If this option is enabled, the MAC address will be updated automatically.

When saving the network configuration, the MAC Mode, including any cloned or randomized MAC address, will be tied to the specific SSID you save. You can manually change these settings for each SSID at any time.

Advanced Settings


When joining the network, there are some optional advanced settings.

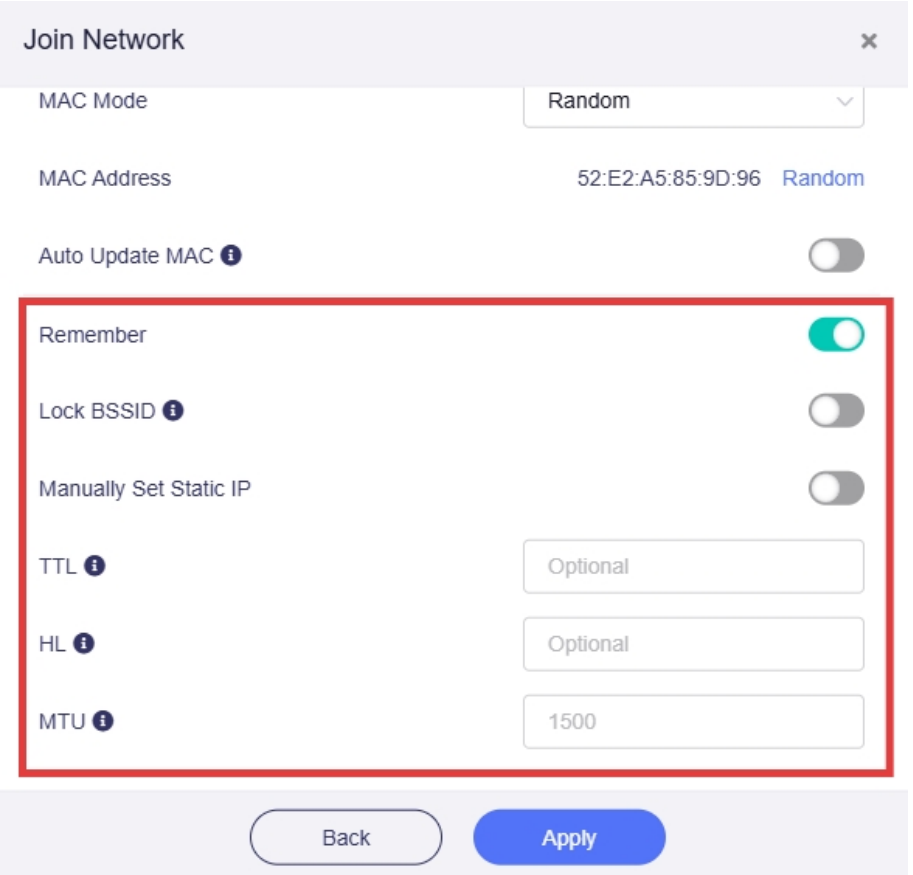

- **Remember**: Enable this to remember the current repeated Wi-Fi network. This is available in firmware v4.7 and later.
- **Lock BSSID**: If this option is enabled, the router will only connect to the AP corresponding to the BSSID you selected when switching to a network using this SSID.
- **Manually Set static IP**: This is available in firmware v4.7 and later.
- **TTL**: TTL (Time To Live) sets the maximum time for packets to survive in the network, and is filled in according to the requirements of the operator. By default, the router forwards the TTL of the incoming client device minus one. If you need to camouflage, you can set a fixed value here. the TTL is valid only for IPv4.
- **HL**: In IPv6, the HL (Hop Limit) field is used to limit the number of transmission hops of data packets in the network, which is equivalent to the TTL in IPv4.
- **MTU**: The default value is 1500.

4.2.3 Connect to the Internet via USB Tethering

Connecting a smartphone to the router through a USB cable is called Tethering, which can share the device's mobile data network (e.g., 4G/5G) with the router. This is a convenient method for temporary internet access, especially when outdoors or in areas without fixed broadband.

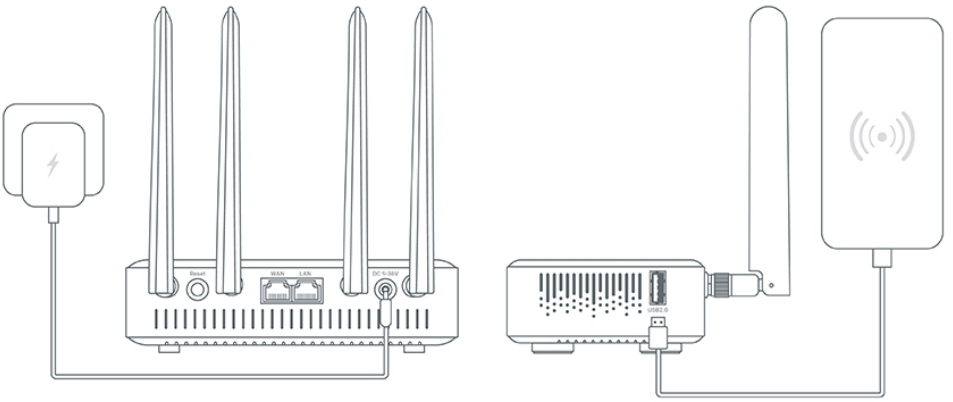


Host-less modem works in Tethering as well during the setup of the modem.


Note: Some mobile carriers limit or charge extra for tethering. We recommend checking with your carrier.

iPhone Tethering


1. Connect an iPhone to the router's USB port using a USB cable. A system dialog will appear asking whether to trust the device. Tap **Trust** to proceed.

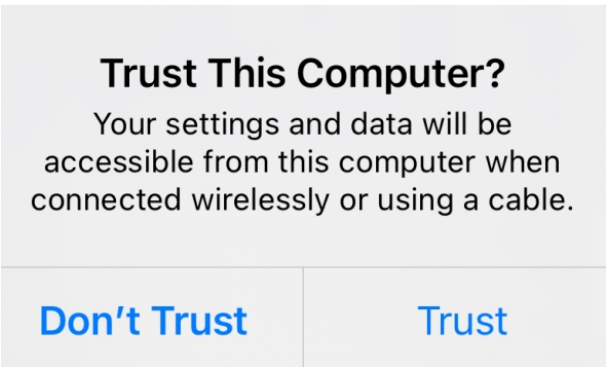


2. Go to iPhone **Settings** > **Personal Hotspot**. Enable **Allow Others to Join**.

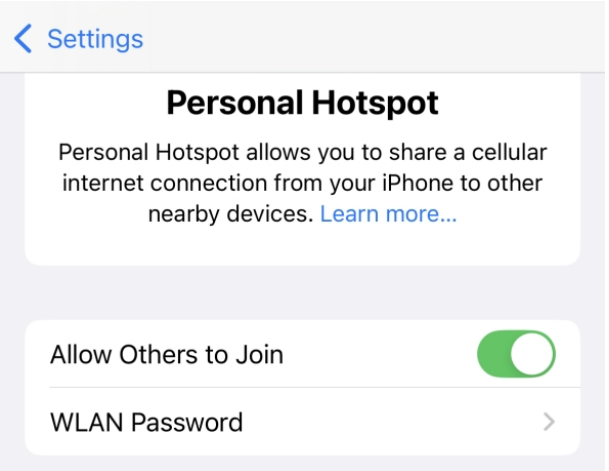


3. Connect a computer or another phone to the router. Log in to the router's web admin panel and navigate to **INTERNET** > **Tethering**, then click **Connect**.

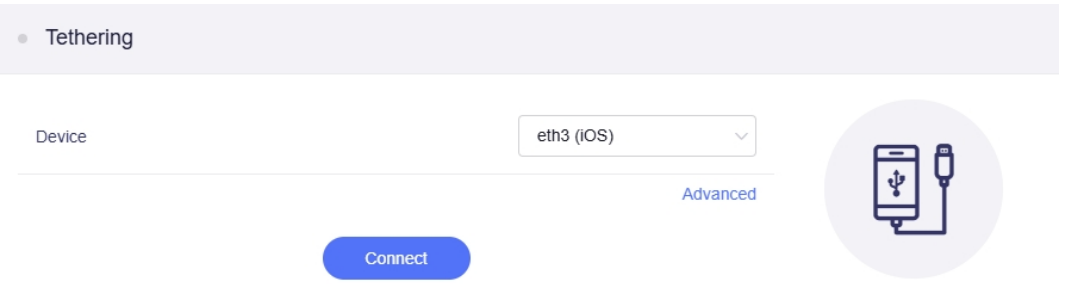


If you need to set advanced settings, such as TTL, HL, and MTU, click **Advanced** to customize these settings before clicking **Connect**.

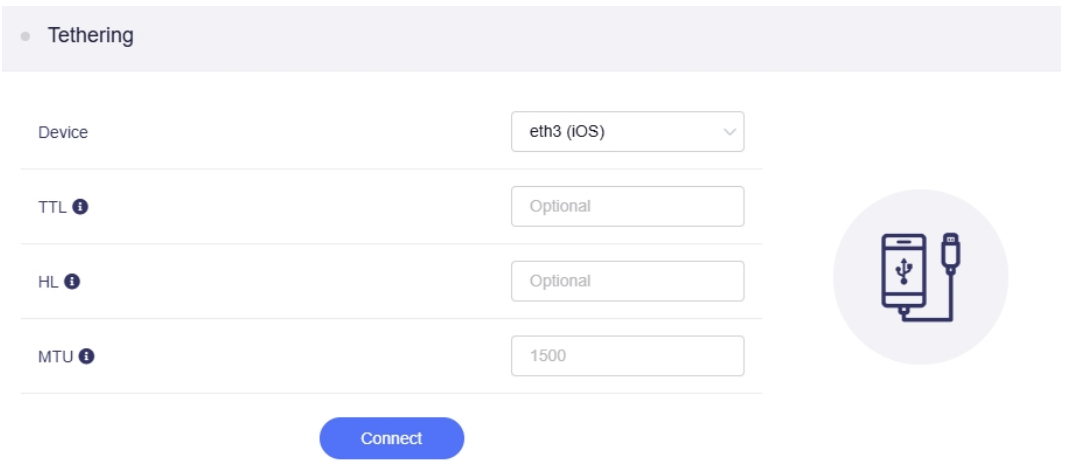

4. It will start connecting.

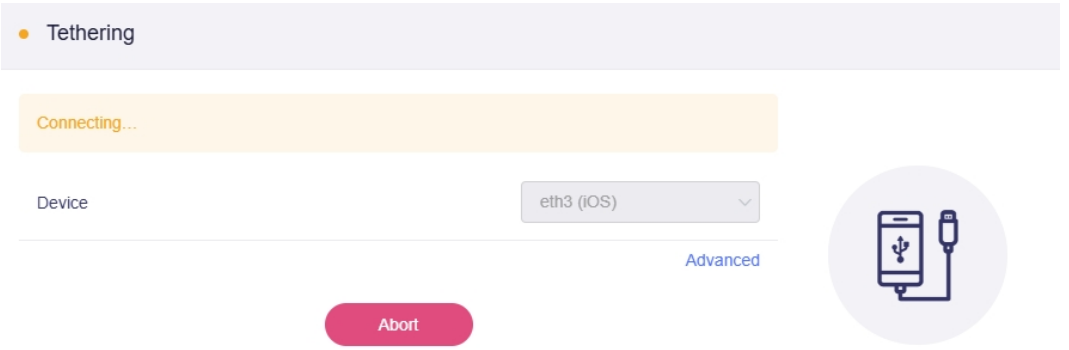


Once connected, this page will display the Tethering connection details.

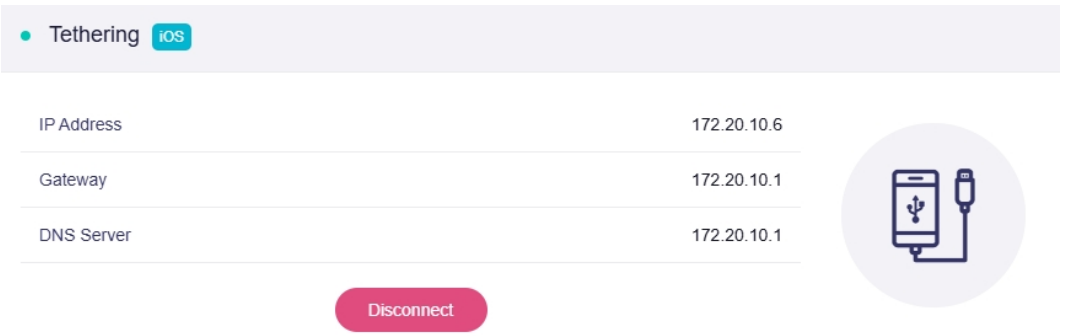


Android Tethering

1. Connect an Android phone to the router's USB port using a USB cable. A system dialog may appear asking USB preferences. Select **USB Tethering** or **File Transfer** if prompted.

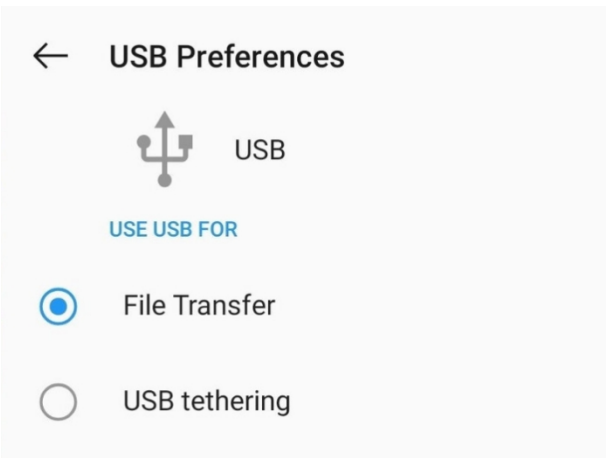


2. Go to your phone's **Settings** > **Network & Internet** > **Personal Hotspot**. Enable **Personal Hotspot** or **USB Tethering**.

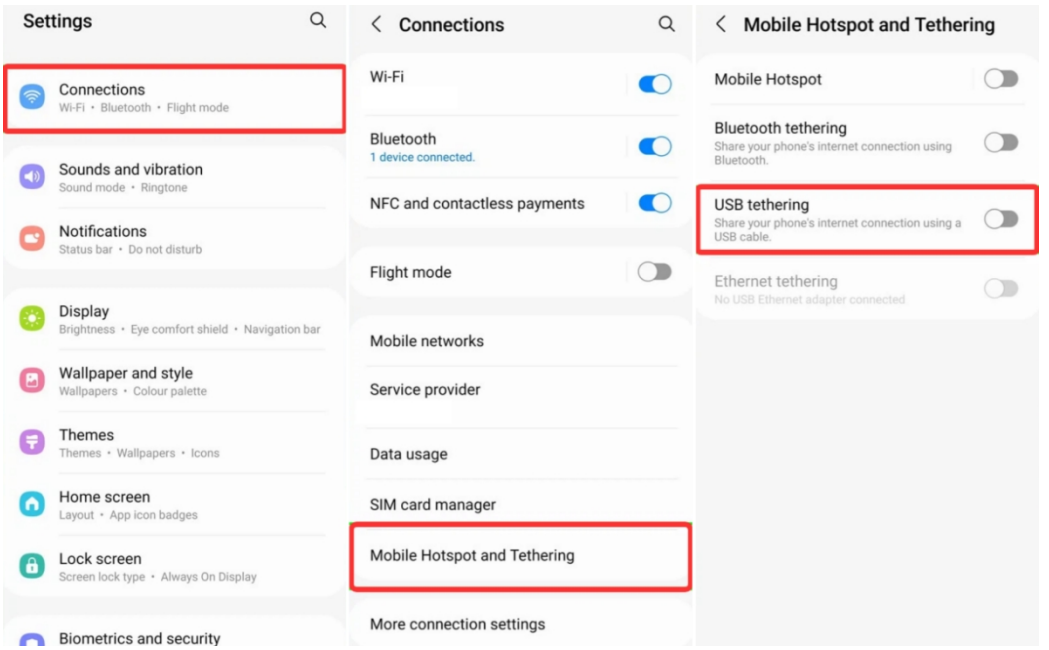


(The steps to enable USB Tethering vary by brand. Check your device's settings for the exact location, and contact your manufacturer's support if needed.)


3. Connect a computer or another phone to the router, then log in to the router’s web admin panel, navigate to **INTERNET** > **Tethering**. Click **Connect**.

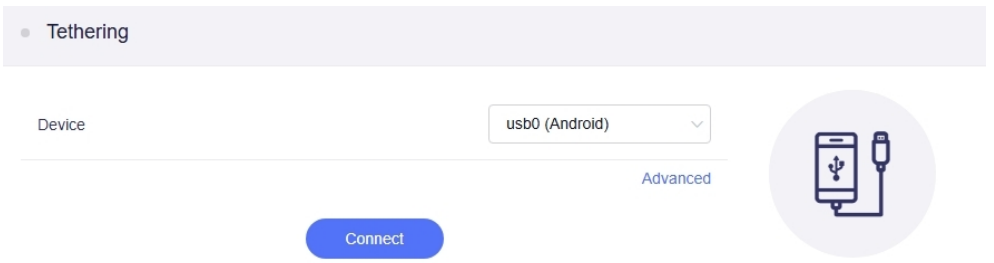

If you need to set advanced settings such as TTL, HL, and MTU, click **Advanced** to customize these settings before clicking **Connect**.

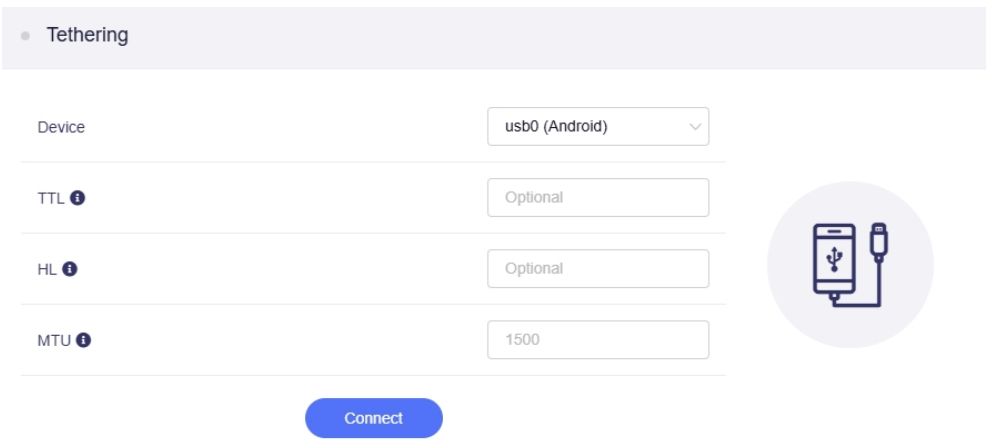

4. It will start connecting. Once connected, this page will display the Tethering connection status.

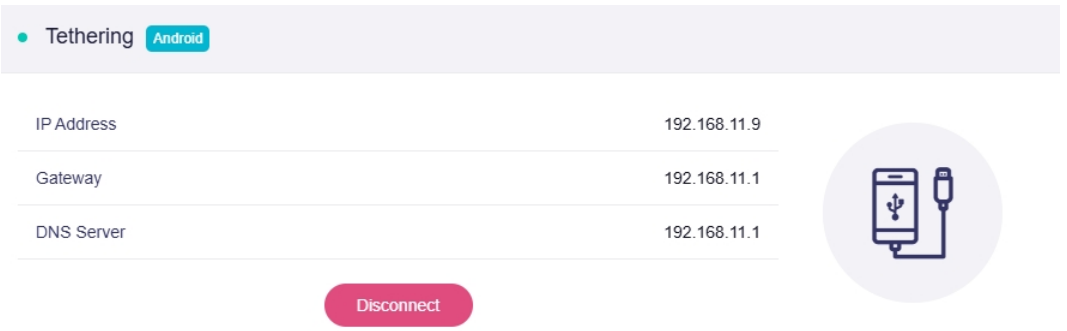

Troubleshooting


If the Tethering connection fails, try these troubleshooting steps:

- Use the original power supply for the router.
- Unplug and re-plug the USB cable.
- Use another USB cable. Ensure it supports data transfer (not just charging).
- Turn off and turn on "USB Tethering" for a few times (for Android Phone).
- Turn off and turn on "Allow Others to Join" for a few times (for iPhone).
- Restart your smartphone and try again.

If problem persists, contact our technical support at support@gl-inet.com.

4.2.4 Connect to the Internet via Cellular

Connect the router to the internet by inserting one or two SIM cards into its Dual Nano-SIM card slot. This allows the router to connect to the Internet via 4G/5G networks, providing connectivity without relying on fixed-line broadband. It is suitable for in-vehicle use or outdoor activities. Note that this connection is implemented through the router's cellular modem.

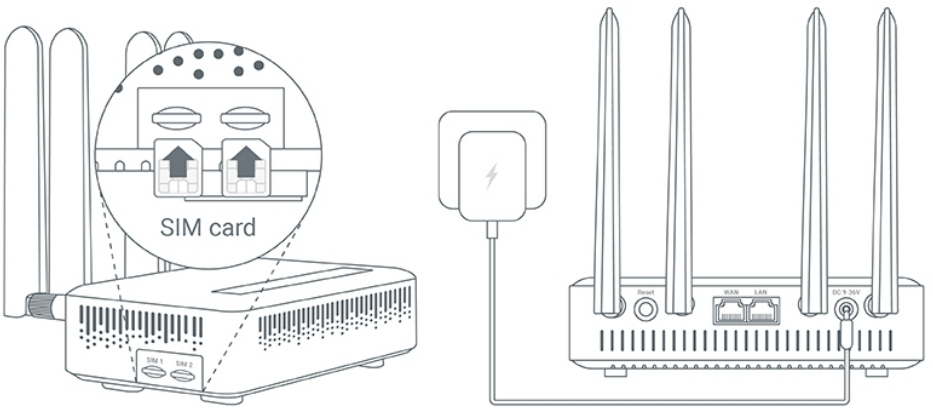


Note: The eSIM functionality of Spitz Plus is available on firmware v4.7 and above. Learn how to use the eSIM physical card on GL.iNet router here.


Basic Setup

Follow the steps below to connect your router to the Internet via Cellular.


1. Insert one or two SIM cards into the router, and the internet connection will be established automatically.
2. Log in to the router's web admin panel, and navigate to **INTERNET** > **Cellula**r. You should see the name of your SIM carrier and a green dot appear in the Cellular section. If not, power off the router, reinsert the SIM card and power it on.

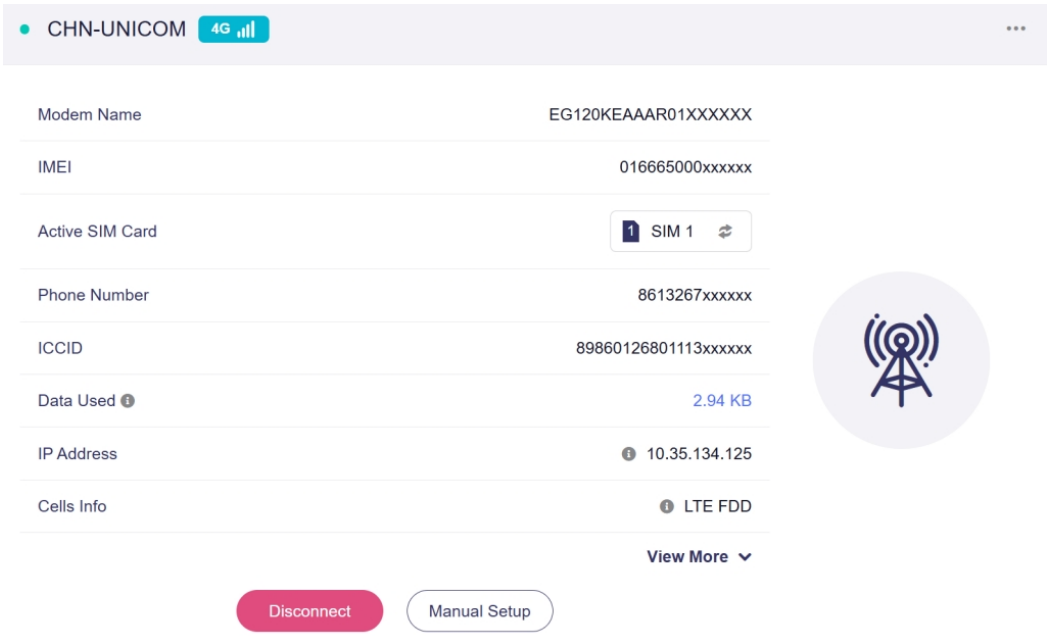

3. When two SIM cards are inserted, click the switch icon to the right of Active SIM Card.

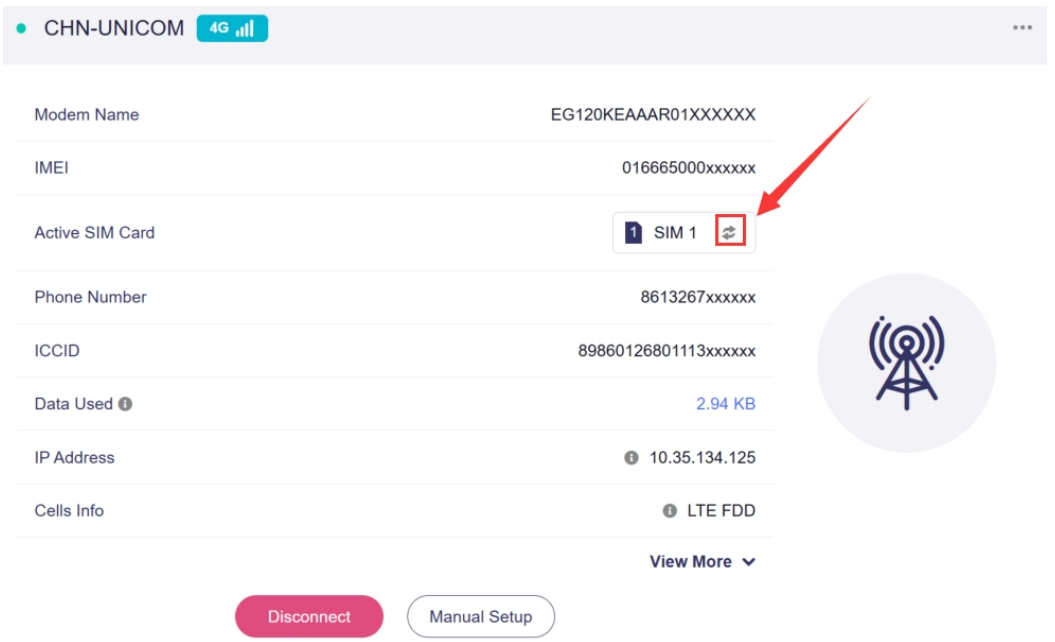


Turn on **Auto Switch** to switch between SIM 1 and SIM 2 automatically.

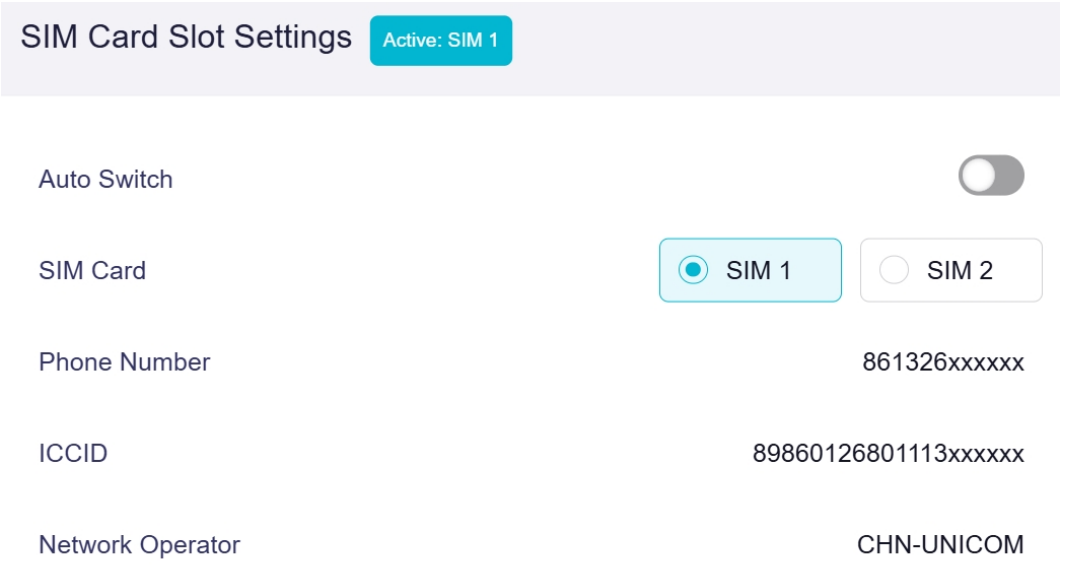


Note: When two SIM cards are inserted, only one SIM card can be active at a time.


4. Click **View More** to view more cellular information, including modem details, SIM card details, Internet details, and cellular signal.

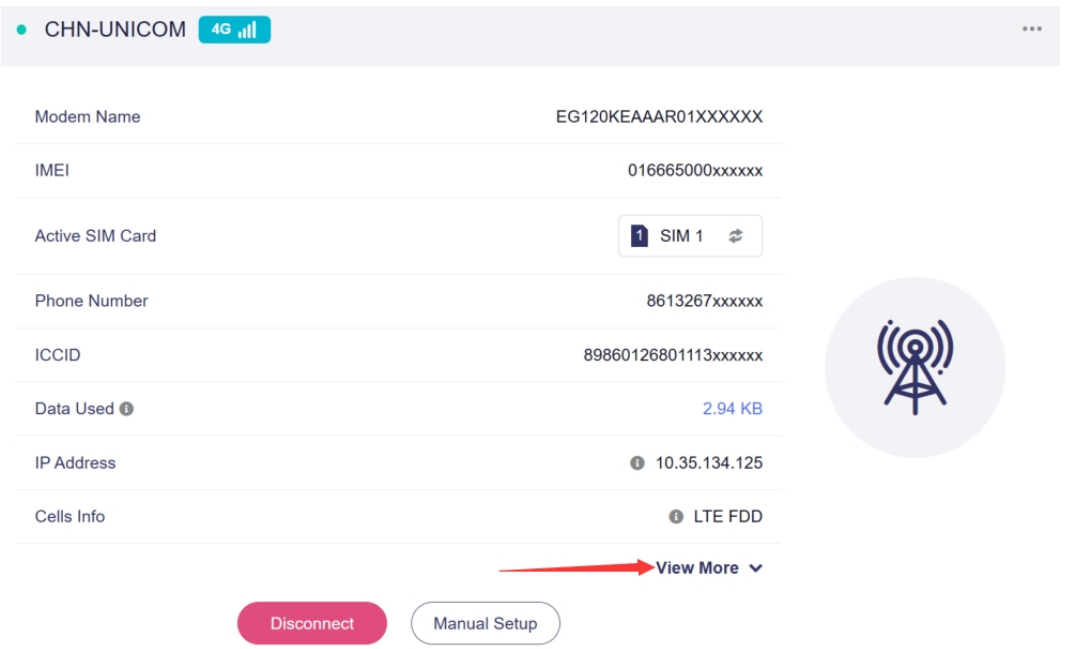

You can view WAN details.

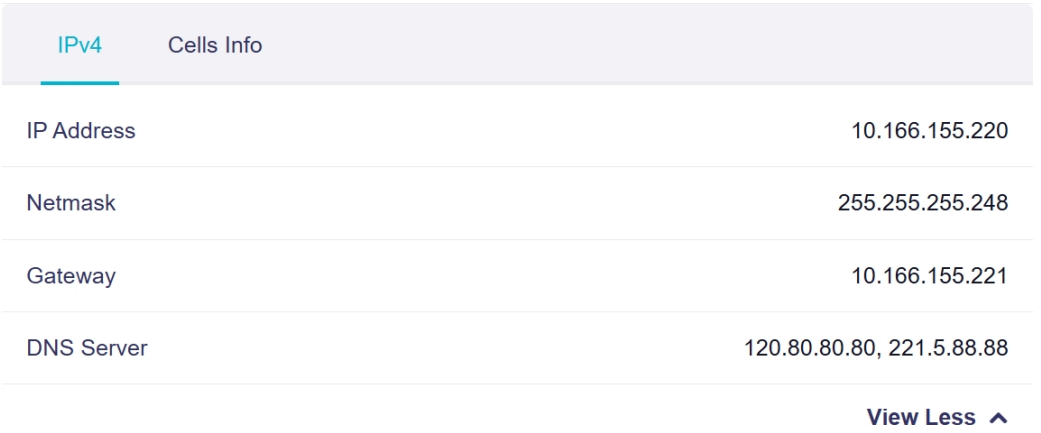


Click **Cells Info** to view cellular details if needed.

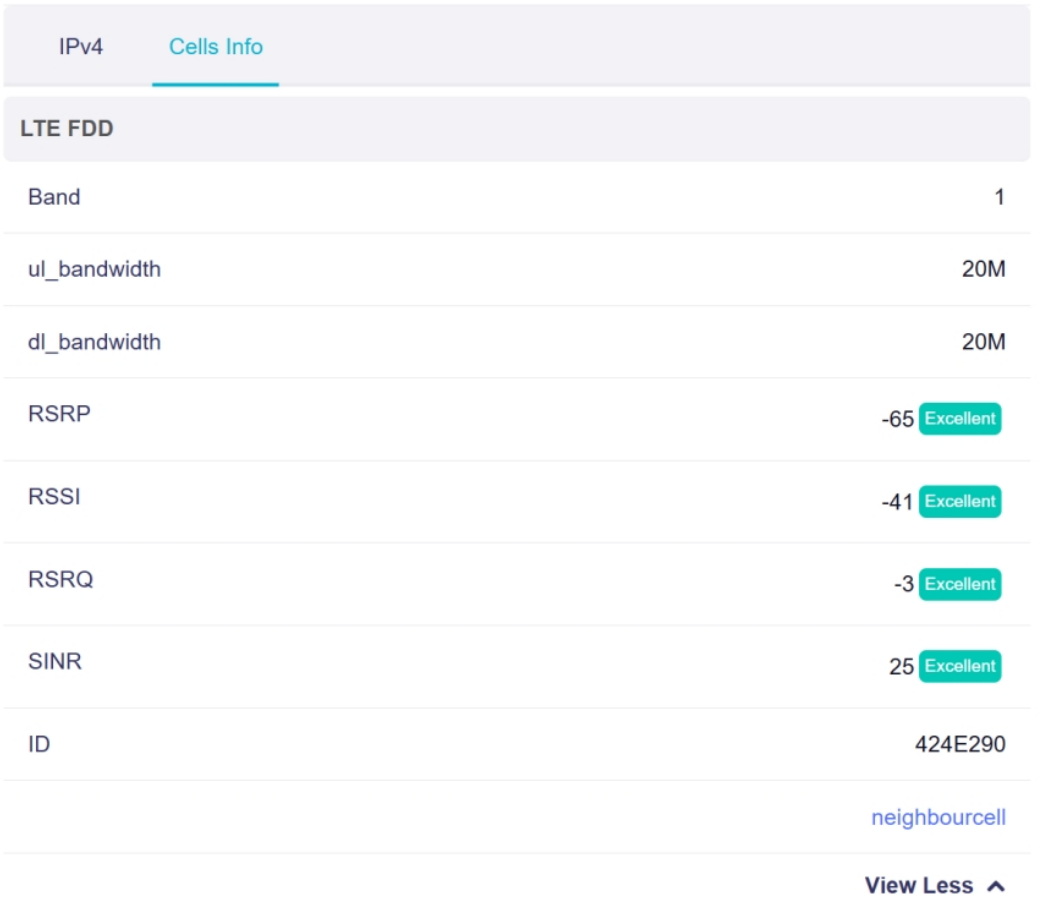

If you encounter any issues, refer to the Cellular Network Troubleshooting Guide.


Advanced Settings


The router provides optional advanced settings for cellular connections. Click **Manual Setup** to configure them.

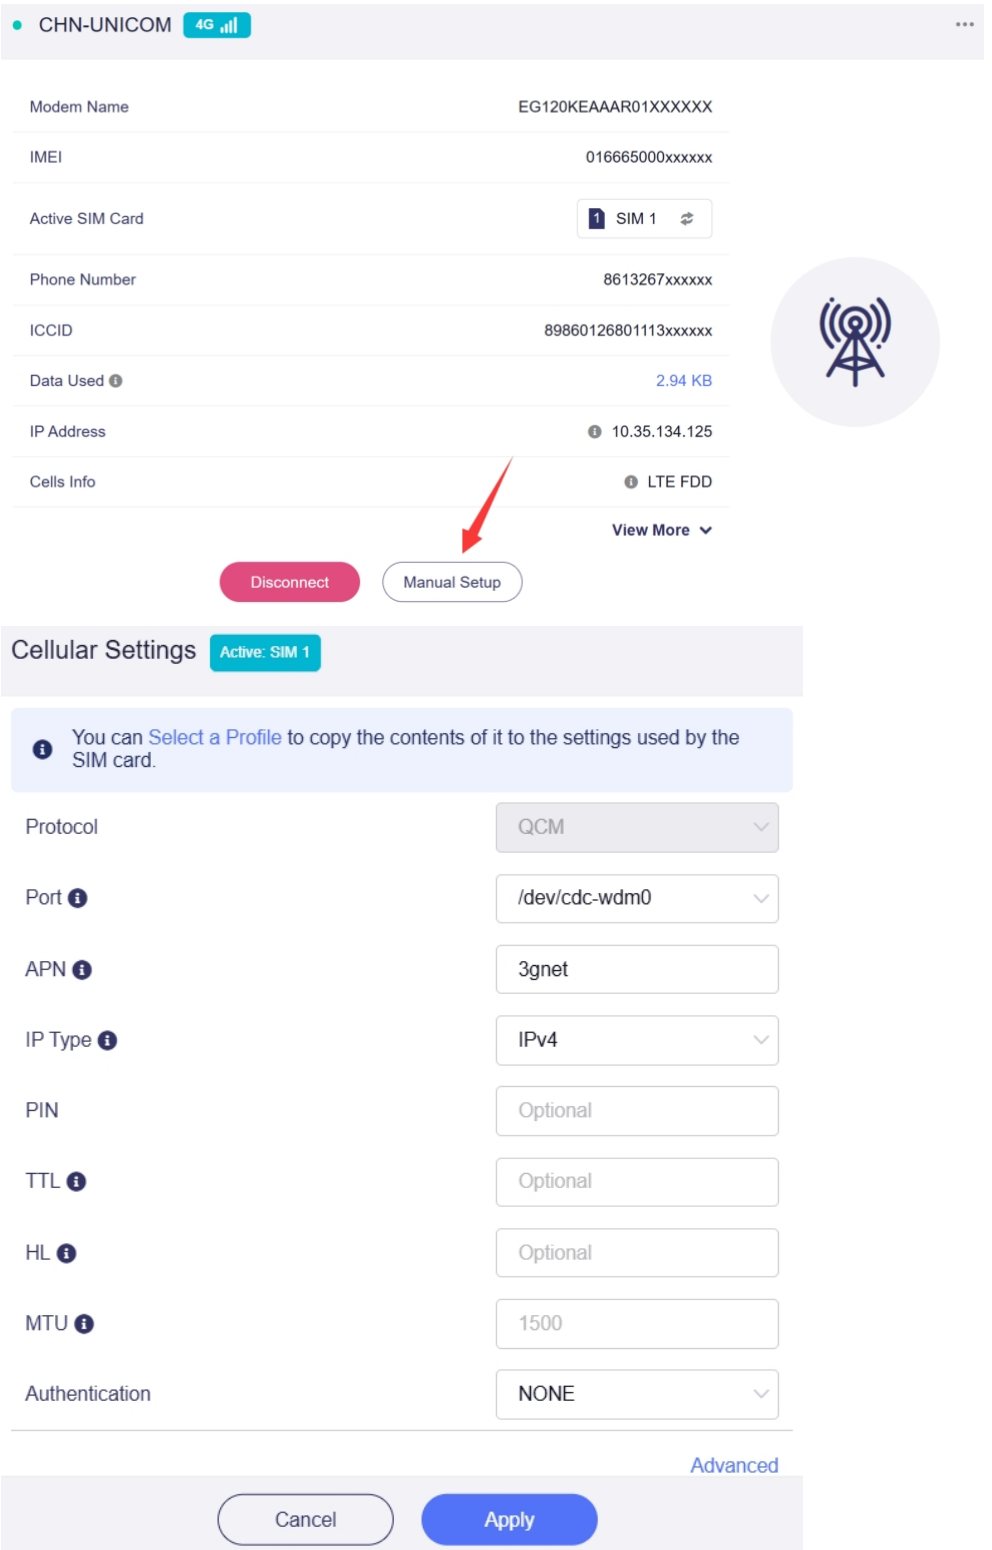

- **Port**: The cdc-wcdm0 port is faster, and the ttyUSBX port has better compatibility.
- **APN**: Some SIM cards require a specific APN. If you don't know the correct APN, please ask your network operator.
- **IP Type**: If the SIM card does not support the current IP Type setting, or when IPv6 is selected but the IPv6 global switch is not turned on, it may result in dialling abnormalities.
- **PIN**: Enter the SIM card PIN if PIN protection is enabled.
- **TTL**: TTL (Time To Live) sets the maximum time for packets to survive in the network, and is filled in according to the requirements of the operator. By default, the router forwards the TTL of the incoming client device minus one. If you need to camouflage, you can set a fixed value here. The TTL is valid only for IPv4.
- **HL**: In IPv6, the HL (Hop Limit) field is used to limit the number of transmission hops of data packets in the network, which is equivalent to the TTL in IPv4.
- **MTU**: The default value is 1500.
- **Authentication**: Choose the authentication method required by your carrier (e.g., NONE, PAP, CHAP). This is usually set to NONE if no credentials are needed.

Click **Advanced** to enable International Data Roaming or Band Masking if needed.

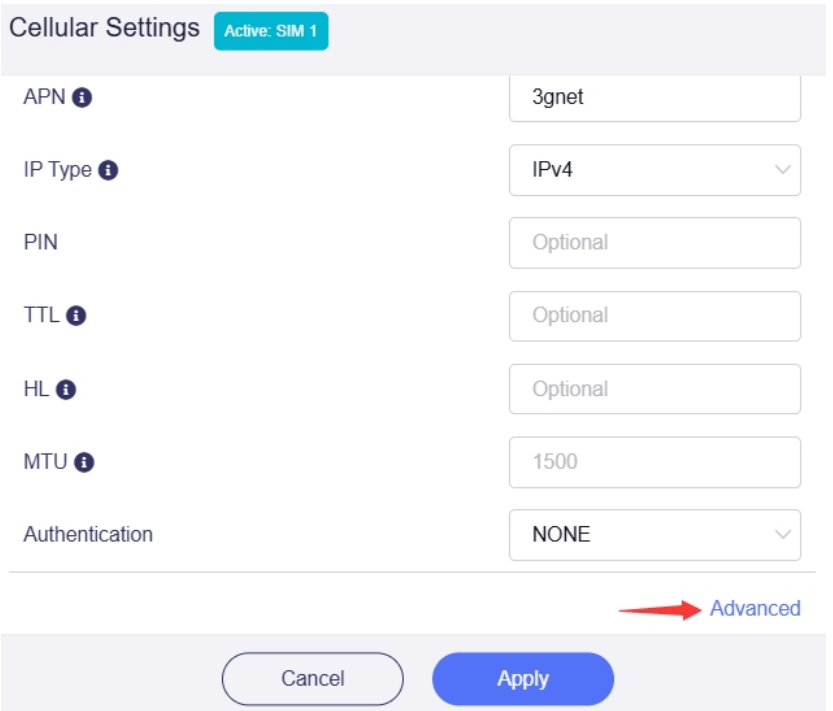


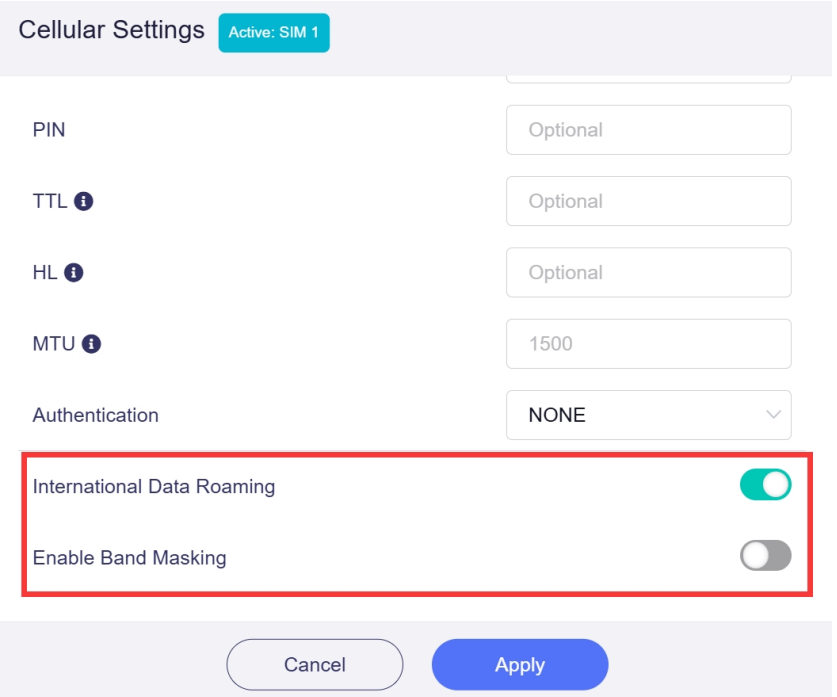

- **International Data Roaming**: If this option is enabled, the SIM card can use cellular data while roaming abroad. Additional roaming charges may apply.This option is enabled by default.
- **Enable Band Masking**: If this option is enabled, you can manually select or exclude specific cellular frequency bands.

Modem Advanced Settings

In addition to basic cellular settings, you can enable advanced modem functions for managing cellular profiles, SMS messages, signal records, and more. Click the menu icon in the upper-right corner.

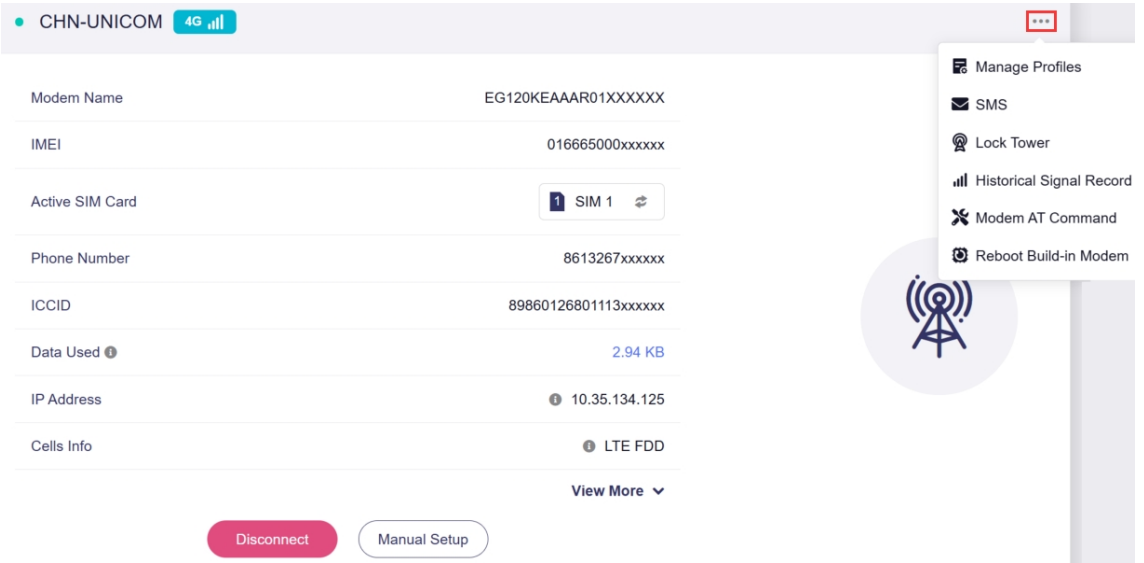

- **Manage Profiles**: Create and manage cellular profiles to quickly switch APN and other cellular settings.
- **SMS**: Send, receive and view SMS messages via the built-in cellular modem.
- **Lock Tower**: Lock the router to a specified base station for stable cellular connections. The tower must support matching frequency bands, or the connection may fail.
- **Historical Signal Record**: View historical cellular signal strength records to evaluate connection quality.
- **Modem AT Command**: Send AT commands to check status and debug the cellular modem.
- **Reboot Build-in Modem**: Restart the built-in cellular modem without rebooting the whole router.

For detailed instructions about modem advanced settings, refer to Connect to the Internet via Cellular.


Chapter 5

Wireless

This chapter guides you to check Wi-Fi status and configure wireless settings.

5.1 Wi-Fi Status Display

The router’s Wi-Fi networks are enabled by default, and the corresponding Wi-Fi icon will light up below the device model image on the INTERNET page.

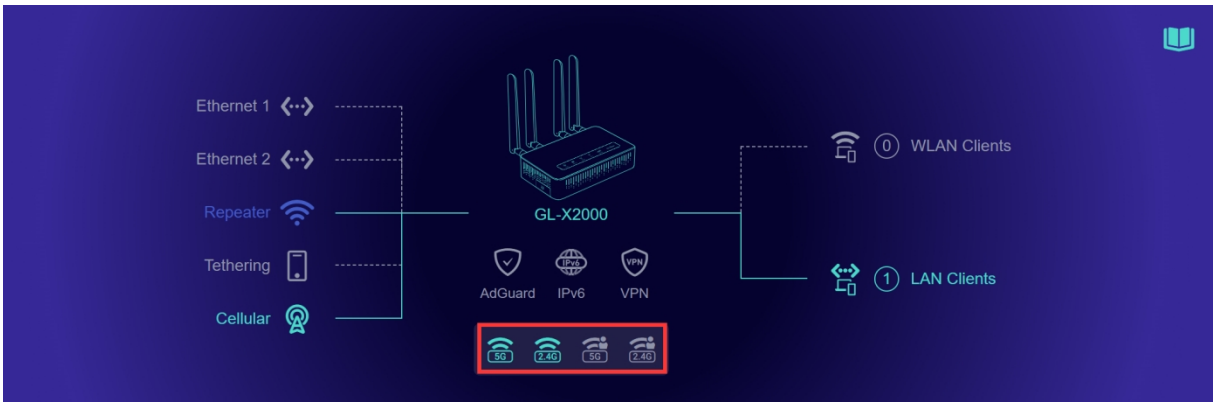

If the cursor hovers over the enabled Wi-Fi icon, a Wi-Fi QR code will be displayed as follows. You can scan the Wi-Fi QR code to quickly connect to the corresponding Wi-Fi.




5.2 Wireless Settings

Log in to the router's web admin panel and navigate to **WIRELESS**.

The wireless page displays the router's 5 GHz and 2.4 GHz Wi-Fi settings, with each further divided into main Wi-Fi and guest Wi-Fi networks for flexible management

5.2.1 5 GHz Wi-Fi


The 5 GHz Main Wi-Fi allows you to configure multiple settings, including enabling/disabling Wi-Fi, setting TX power, enabling/disabling randomized BSSID, setting Wi-Fi name (SSID), security, password, SSID visibility, mode, bandwidth, and channel.

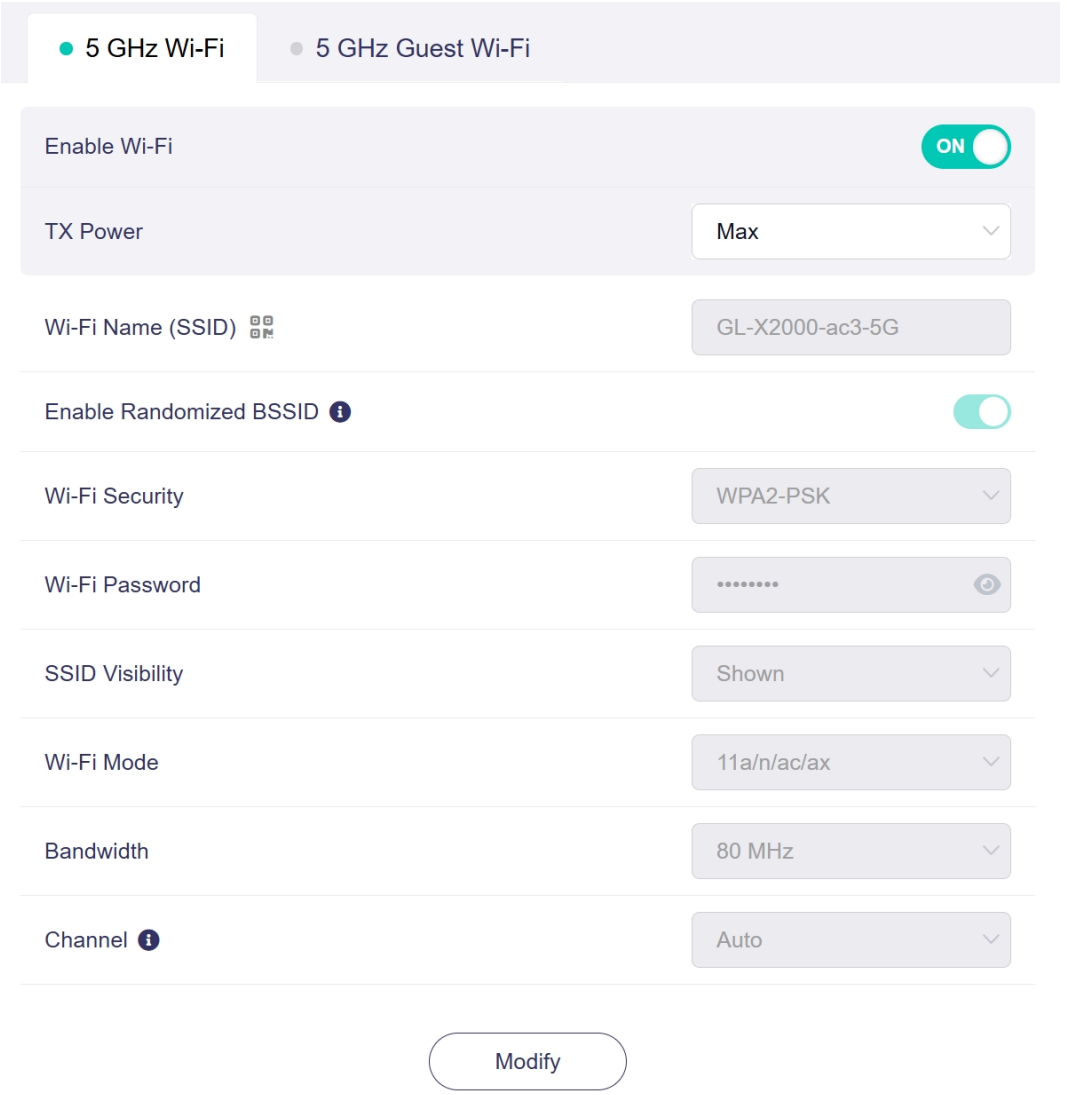

Note:


1. **Randomized BSSID** is enabled by default. It helps prevent the router from being tracked through a fixed BSSID, since client devices may report nearby BSSIDs and their own location data to OS/device vendors, who use them to build a BSSID-to-location database. When it is enabled, the router uses a randomly generated BSSID and renews it at each reboot, so the BSSID cannot be linked to a fixed location.
2. The **Bandwidth** and **Channel** cannot be modified when the router is configured as a repeater, as they follow that of the repeated network.
3. When **Channel** is set to **Auto**, the router's Wi-Fi will not automatically switch to the DFS channel.
4. When the **Bandwidth** is set to **160 MHz** (Only available on some models), the Wi-Fi will always use the DFS channel, even if you select a non-DFS channel or set it to Auto.

The 5GHz Guest Wi-Fi allows you to configure simplified settings, including enabling/disabling Wi-Fi, setting Wi-Fi name (SSID), security, password, and SSID visibility.

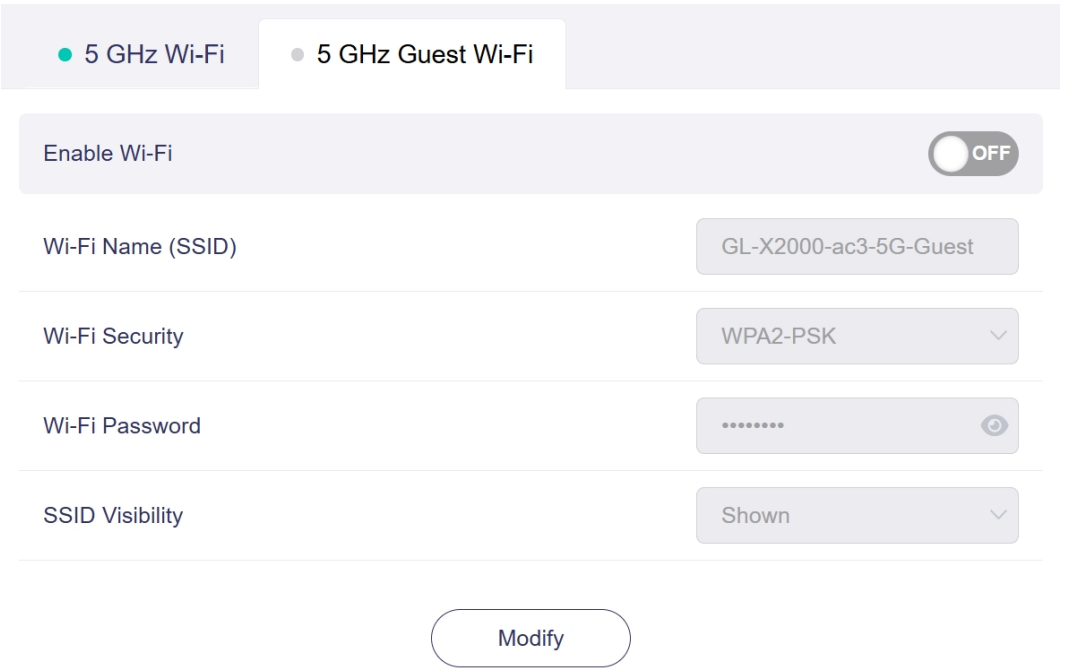

5.2.2 2.4GHz Wi-Fi

The 2.4GHz Main Wi-Fi allows you to configure multiple settings, including enabling/disabling Wi-Fi, setting TX power, enabling/disabling randomized BSSID, setting Wi-Fi name (SSID), security, password, SSID visibility, mode, bandwidth, and channel.

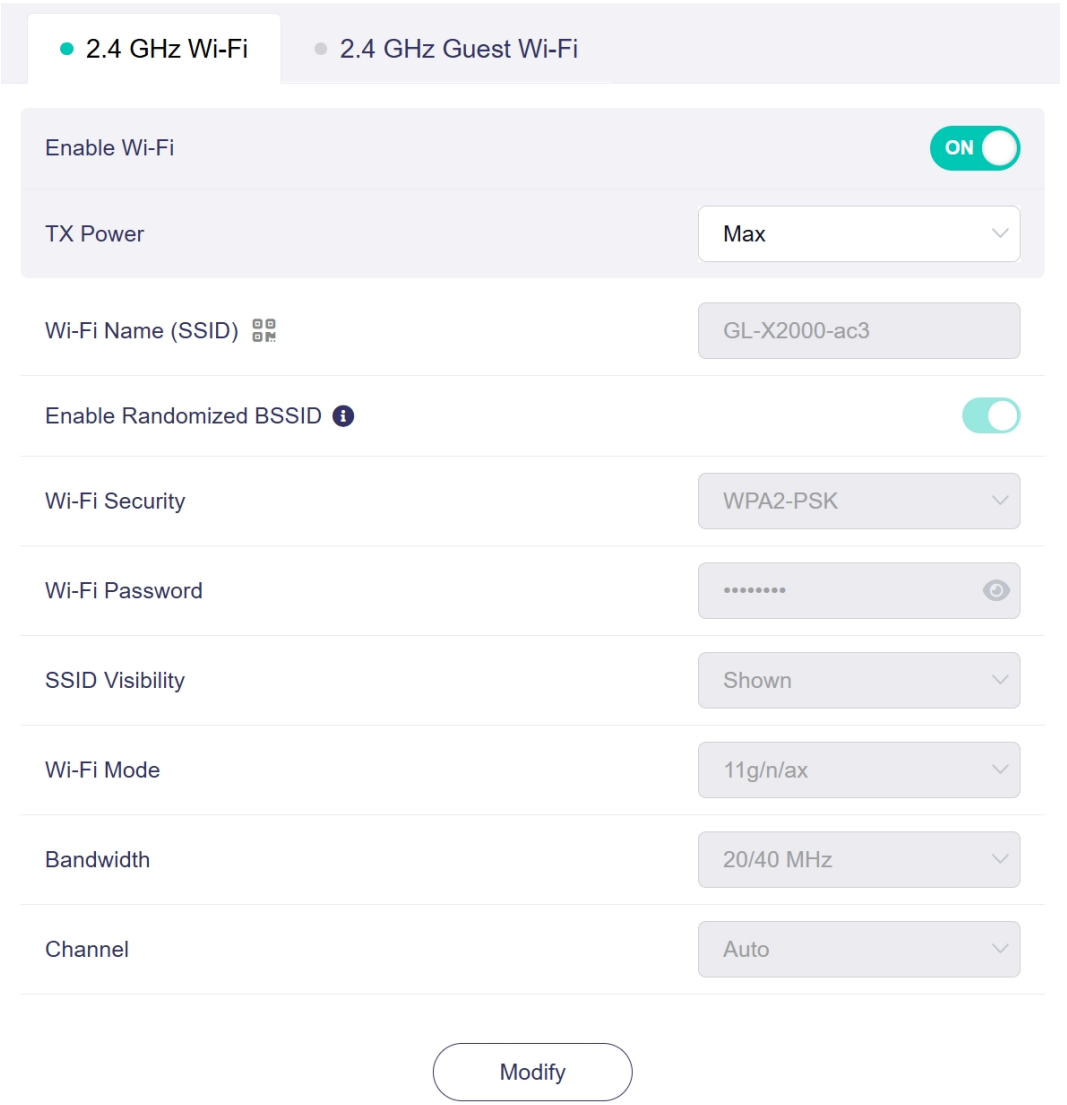


Note:

1. **Randomized BSSID** is enabled by default. It helps prevent the router from being tracked through a fixed BSSID, since client devices may report nearby BSSIDs and their own location data to OS/device vendors, who use them to build a BSSID-to-location database. When it is enabled, the router uses a randomly generated BSSID and renews it at each reboot, so the BSSID cannot be linked to a fixed location.

2. The **Bandwidth** and **Channel** cannot be modified when the router is configured as a repeater, as they follow that of the repeated network.

The 2.4GHz Guest Wi-Fi allows you to configure simplified settings, including enabling/ disabling Wi-Fi, setting Wi-Fi name (SSID), security, password, and SSID visibility.

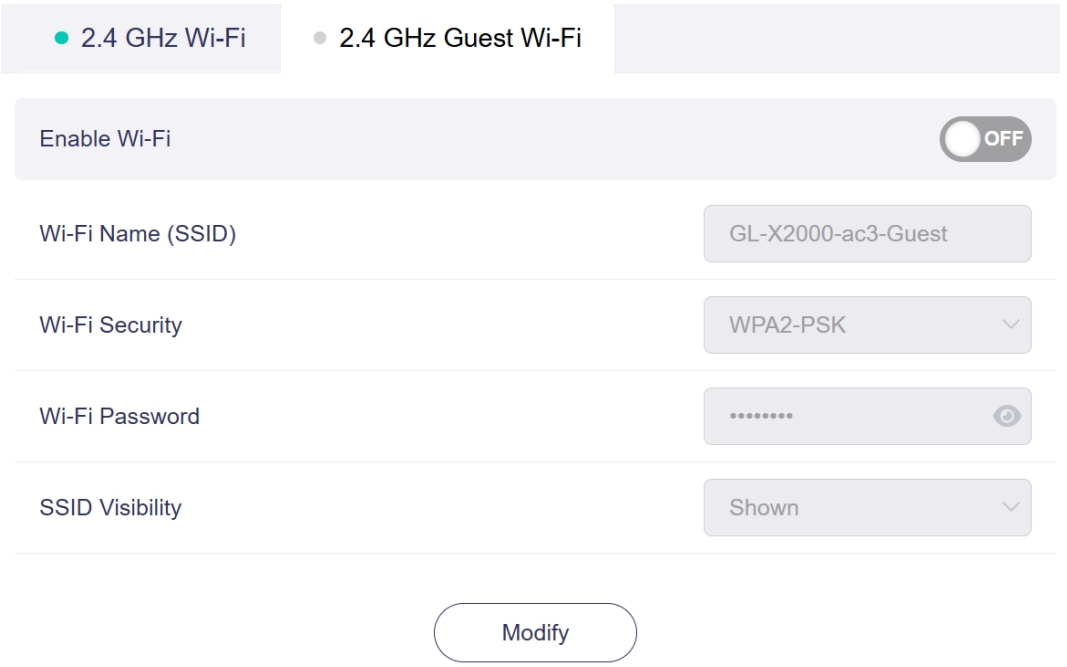


Chapter 6

Clients

This chapter guides you to view details of connected devices and manage their connections.


Log in to the router’s web admin panel and navigate to **CLIENTS**.

The Clients page displays information about connected devices, including device name, connection type, IP and MAC address, speed, and traffic, arranged left to right. It also provides quick access to reserve IP, block client or perform other actions.

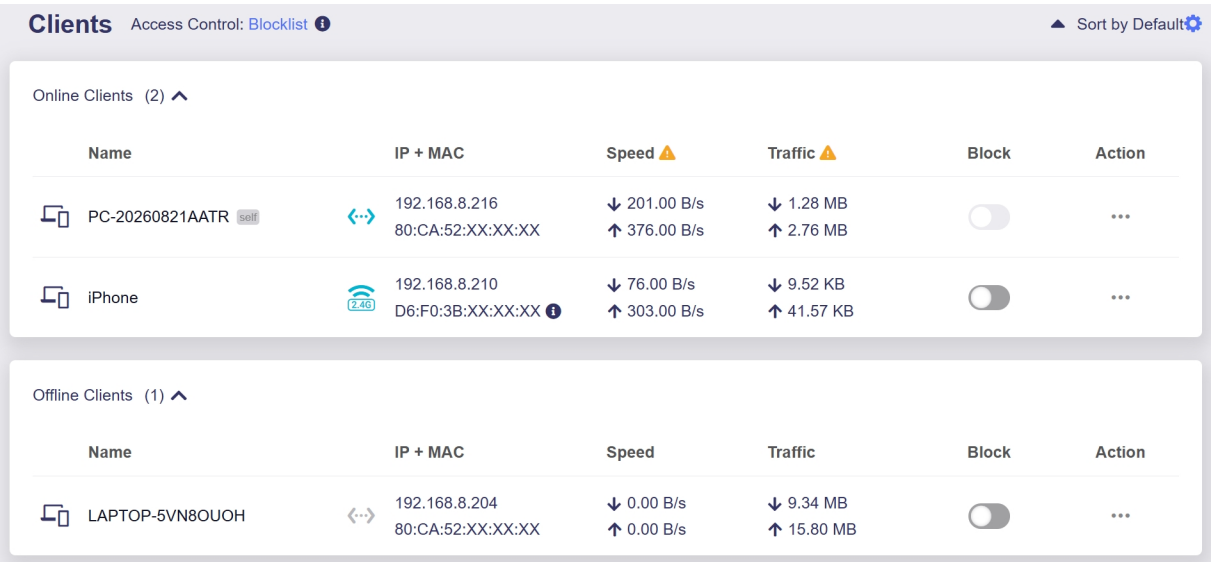

- **Online Clients**: It refers to devices currently connected to the router's network.
- **Offline Clients**: It refers to devices that have previously connected to the router but are now disconnected from the network.

6.1 Device Details

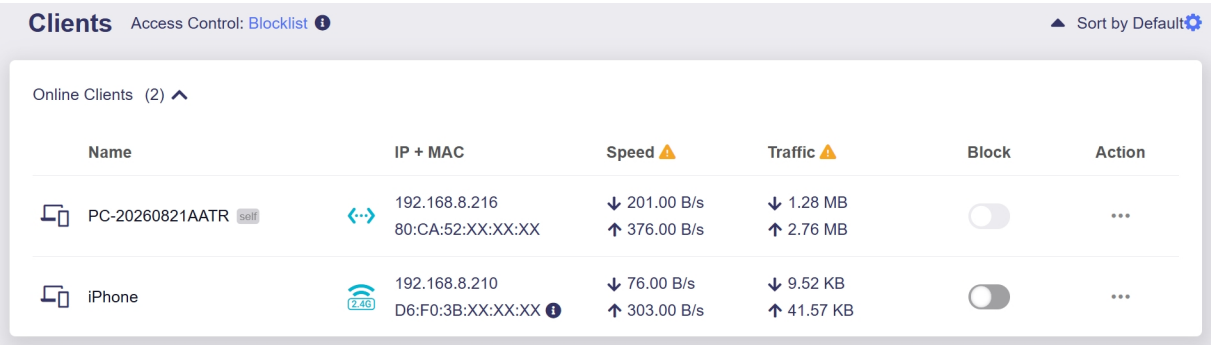

1. **Device Name**

   The first column displays the device name and type, which depends on the hostname of the device operator. The blue icon next to the device name represents the connection method, indicating that the device is connected to the router via an Ethernet cable.

2. **IP and MAC Address**

   The second column lists the IP and MAC addresses of the connected device. If the connected devices use randomized MAC addresses, a prompt will appear, indicating that this is a randomized MAC address.



   If the second character of the MAC address is 2, 6, A or E (Ignore case), it is considered as a randomized MAC address. However, some devices may use a different rule to generate a randomized MAC address, so this detection method may not be accurate.

3. **Speed**

   The third column displays the internet speed of the connected device. This speed represents the average speed over the past 3 minutes. The system starts calculating the average speed when this page is opened (e.g., if the page has only been open for 10 seconds, the average speed will be based on just 10 seconds of data).


4. **Traffic**: The fourth column displays the internet traffic of the connected device.


5. **Reserve IP**

   In the fifth column, you can reserve IP address for connected device with one click. When enabled, it will always receive the same IP address each time it connects to the router.

6. **Blocklist**

In the sixth column, you can block specific connected devices with one click. The Access Control rule defaults to Blocklist, and you can switch it to Allowlist from the top if needed.

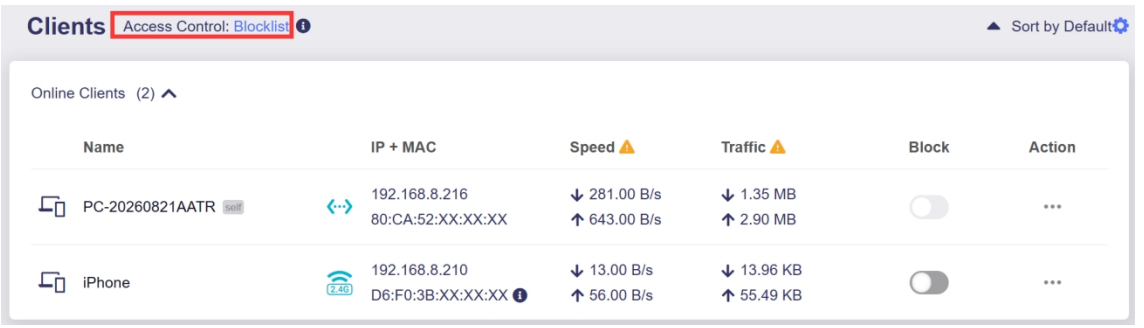

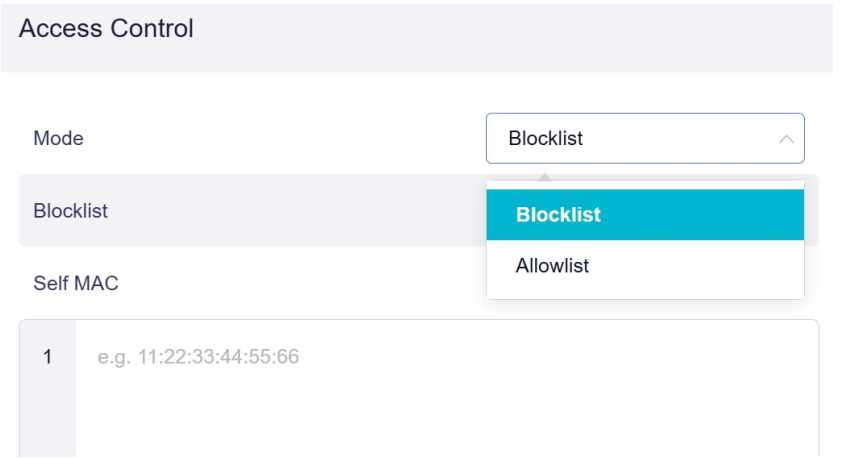



- **Blacklist**: Devices with MAC addresses in the blacklist are not allowed to connect to this router. Please note that blocking client is based on the MAC address of the device. If the blocked device uses different MAC address next time, it can still be able to connect to router.
- **Allowlist**: Only devices with specific MAC addresses are allowed to connect to this router, suitable for IoT devices and enterprise network management.

6.2 Action

1. **View Details**

   Click the three-dot icon in the **Action** column, and click **View Details** from the drop-down menu to view the device details on a single page.

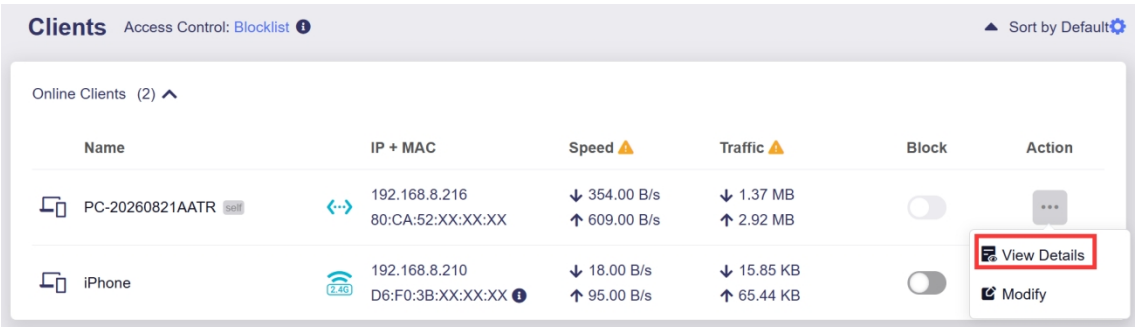


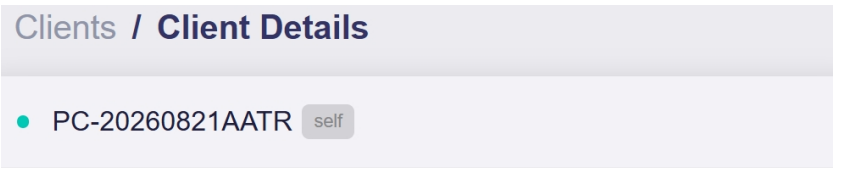


Hostname	PC-20260821AATR
Connection Method	Ethernet
MAC	80:CA:52:XX:XX:XX
Speed	↓ 345.00 B/s ↑ 489.00 B/s
Traffic	↓ 1.40 MB ↑ 2.95 MB
Block	OFF
IP Address	192.168.8.216

2. **Modify**


Click the three-dot icon in the **Action** column, and click **Modify** from the drop-down menu to modify the device name and type.

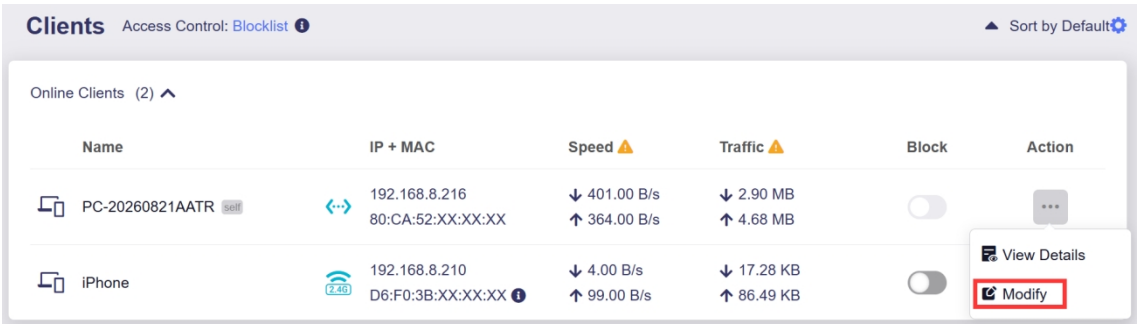

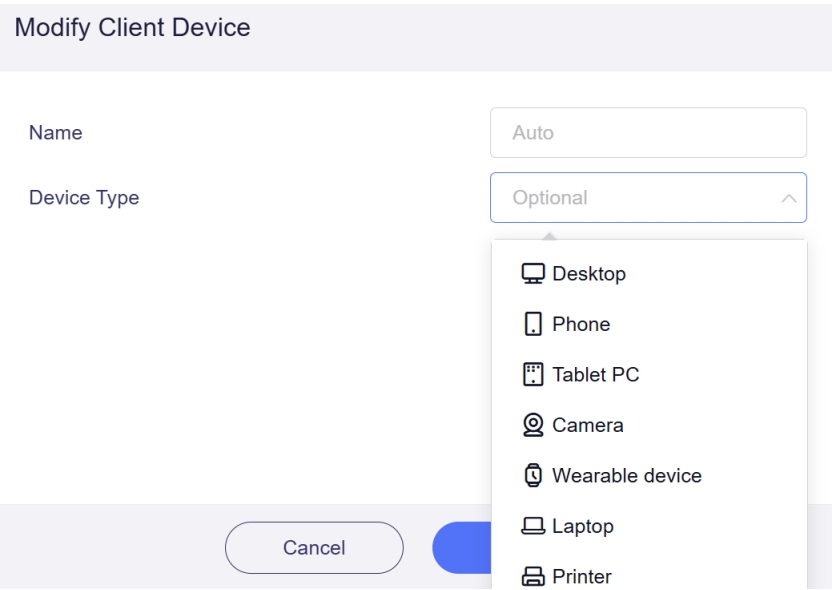


6.3 Remove Clients

In the **Offline Clients** section, you can click **Delete All** in the top right corner to delete all offline clients.

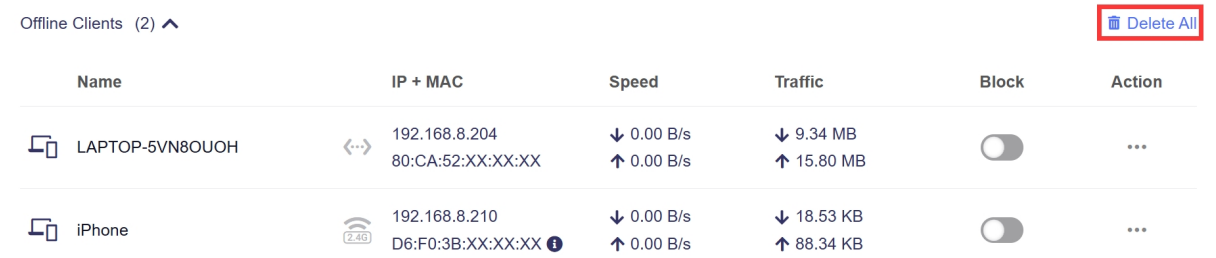


If you want to remove a specific client, click the three-dot icon in the **Action** column, then click **Remove Client** from the drop-down menu.

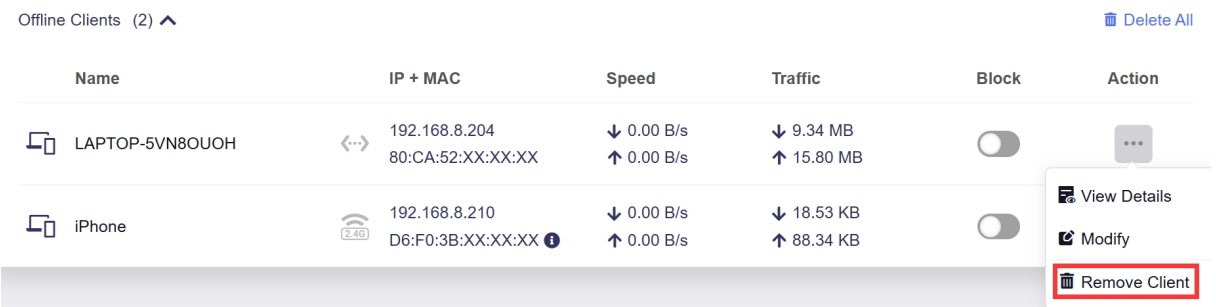

6.4 Sort

You can set the device sorting rule for the Client page in the top right corner.

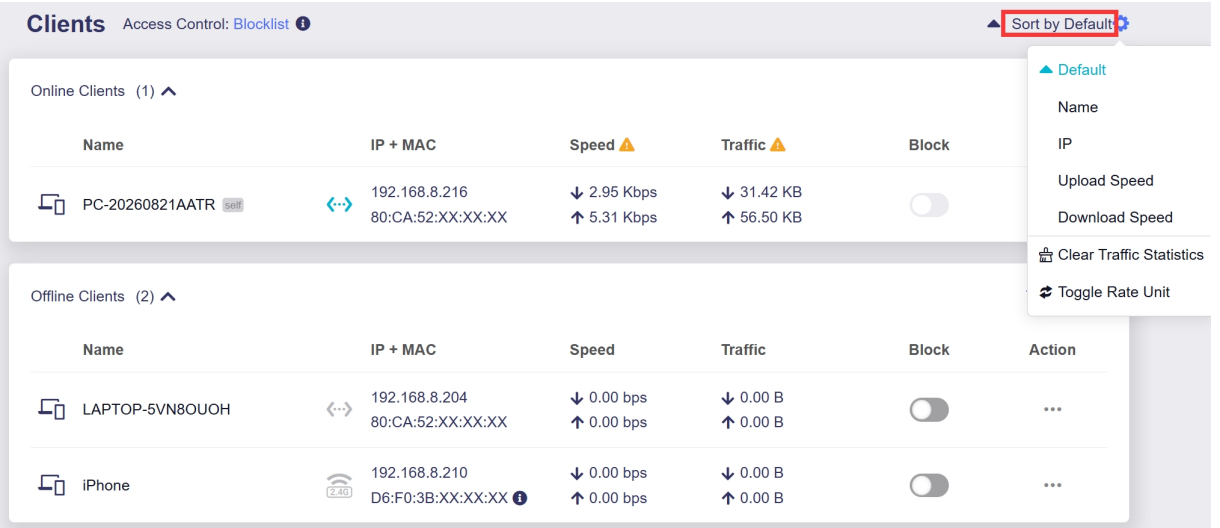

The default sorting order is as follows:

- The self-device (i.e., the device you are using to access the router's Admin Panel) always appears at the top.
- In the **Online Clients** section, devices are listed higher if they connected earlier.
- In the **Offline Clients** section, devices are listed higher if they disconnected earlier.

In addition to sorting rules, the dropdown menu also provides the following functions:

- **Clear Traffic Statistics**: Clear traffic statistics for all online clients with one click. Once applied, the traffic statistics column will be reset to zero and then restart the statistics.



- **Toggle Rate Unit**: Switch the rate unit for the speed column between **KB/s** and **Kbps**.

Chapter 7

Cloud Services

This chapter introduces the cloud service: GoodCloud.

7.1 GoodCloud

GL.iNet GoodCloud is a platform designed to simplify the remote deployment and management of connected devices. It provides an easy way to remotely access and manage GL.iNet routers. By centralizing network devices on the cloud, users can efficiently perform batch management tasks, such as deploying network configurations and performing software upgrades. They can also remotely access the router's web admin panel or connect to the router's terminal via SSH, achieving cross-regional and end-to-end network device management.


With GoodCloud, you can:

- Check your router’s status in real-time
- Manage groups of routers
- Set up routers remotely
- Monitor connected clients
- Operate routers in batch
- Establish Site-to-Site connection


Some features are available in Enterprise and VAR (Value Added Reseller) Plan. See here for details.

7.1.1 Enable GoodCloud


1. Log in to your router’s web admin panel, navigate to **CLOUD SERVICE** > **GoodCloud**, and click **Get Started.**

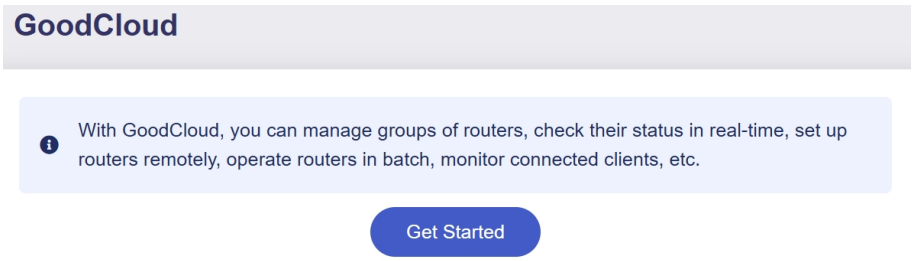

2. In the pop-up window, click **Enable**.

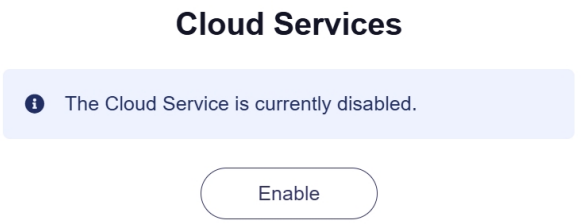

3. Log in with your GL.iNet account. If you don't have an account, sign up for one and log in.

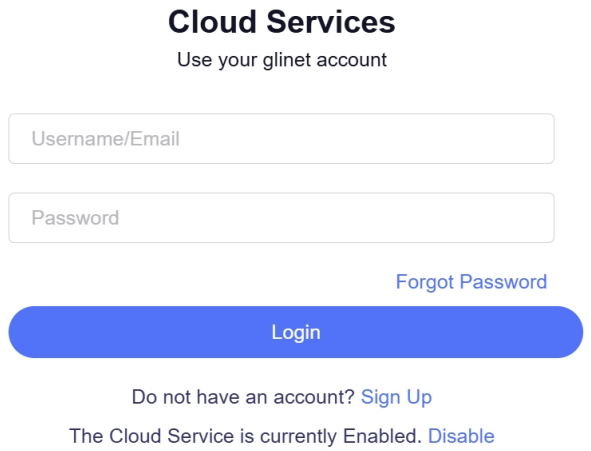


4. Confirm your account and device information in the next step, then click **Bind**. You can log in to the GoodCloud platform to verify that your router is bound to your account.




Tips:

- The GoodCloud binding steps differ by firmware version.
- If you do not receive the verification email during sign-up, check your spam folder or try again later. For further assistance, contact us at support@gl-inet.com.

5. After binding successfully, click the **Cloud icon** in the upper right corner of the web admin panel. You will see the bound device details, including the bound account, binding date, Device ID, Device MAC, and Device S/N.

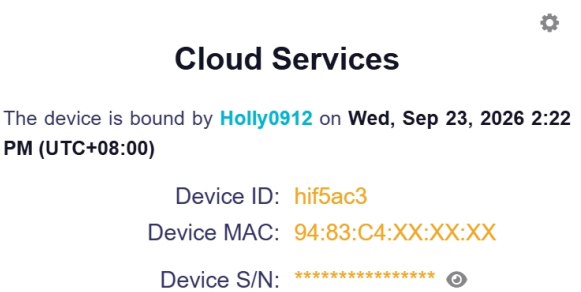

6. In the router’s web admin panel, navigate to **CLOUD SERVICES** > **GoodCloud** and enable remote access to the bound router’s web admin panel and terminal. This is particularly useful for remote management and troubleshooting.

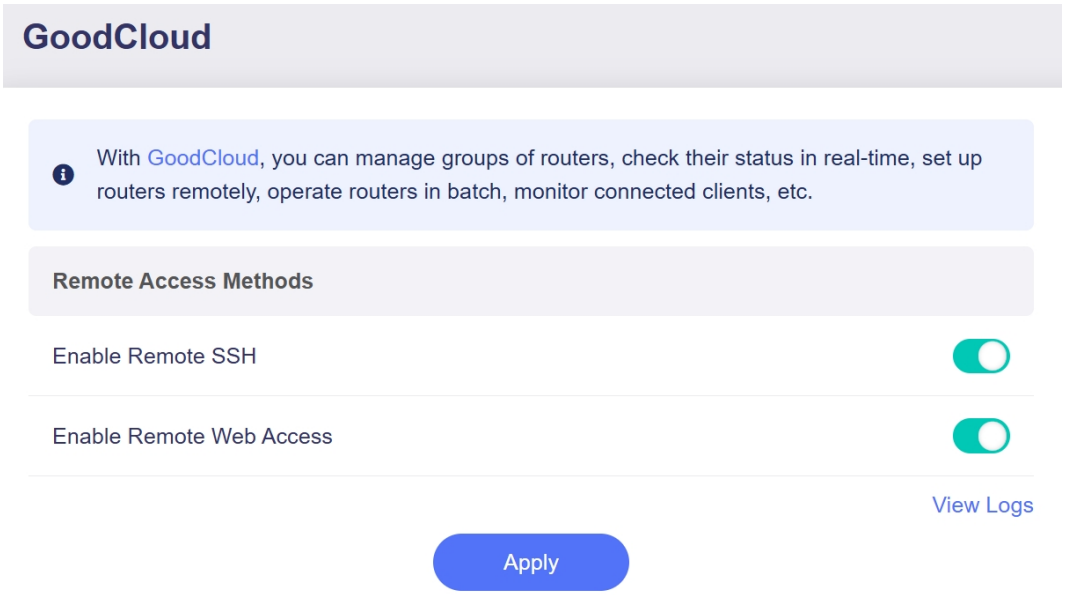


- **Remote SSH**: Remotely access the router's terminal from GoodCloud using SSH.
- **Remote Web Access**: Remotely access to the router's web admin panel from GoodCloud via HTTP/HTTPS.
- **View Logs**: Redirect to the Log page and display Cloud log.


7.1.2 Manage Your Router

Check Device Details

Log in to the GoodCloud platform and navigate to **Devices** > **Bound Devices**. You can view the device's basic information, such as host name, status (online/offline), model, firmware version, and MAC address.

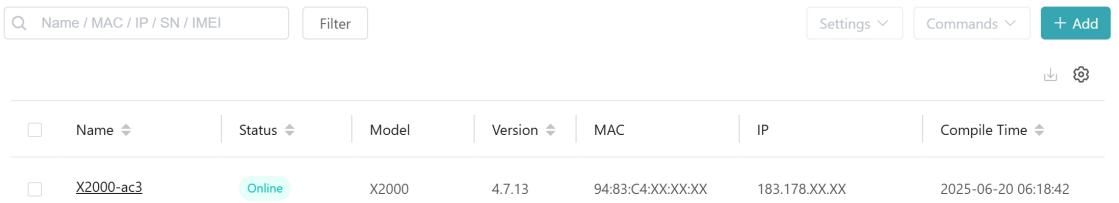


Click the device name to enter the device details page, which displays basic information, statistical data, network overview, client list, and timeline. You can also perform advanced operations, such as remotely accessing the router, and rebooting the device.

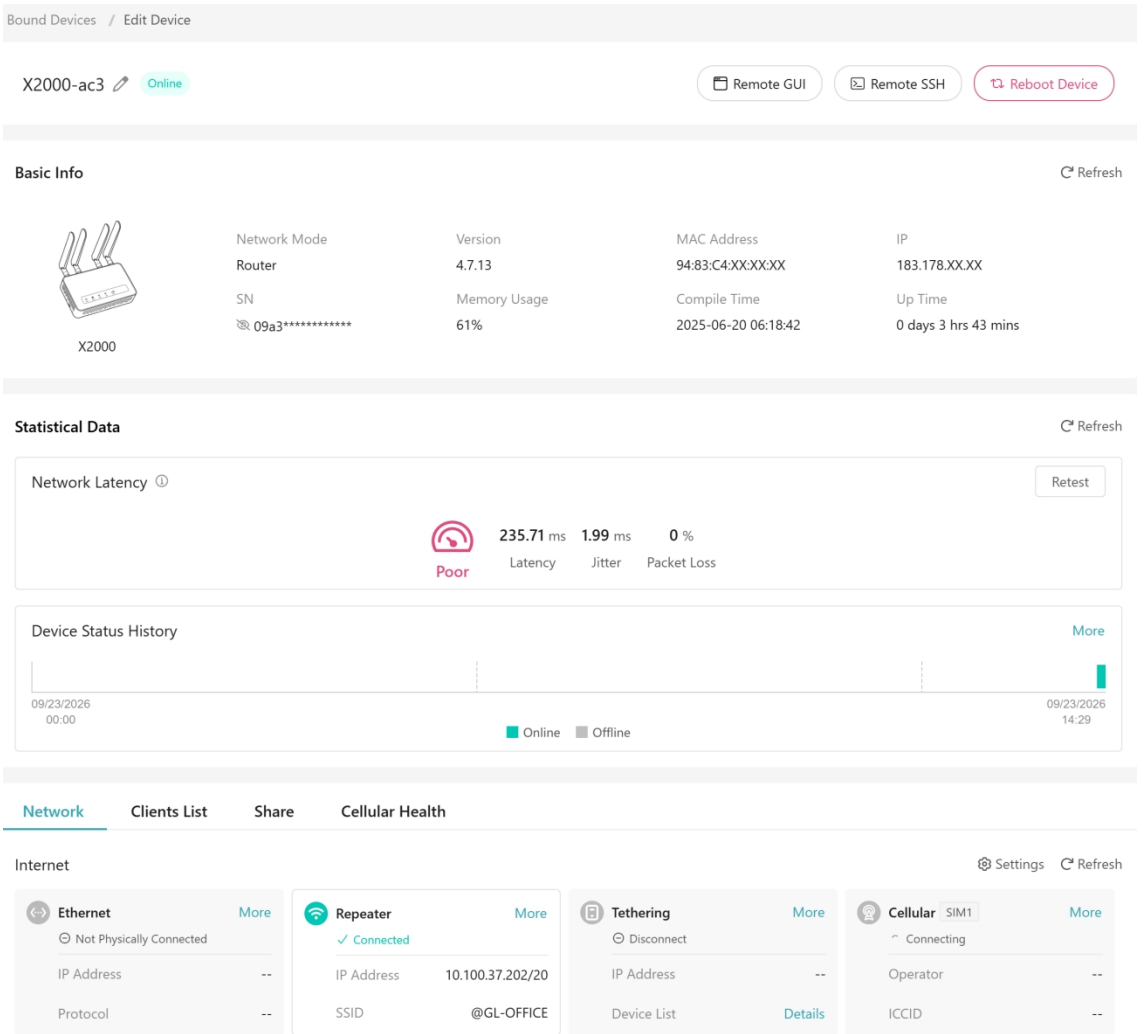


Remote Access Web


1. Log in to the router's web admin panel, navigate to **CLOUD SERVICES** > **GoodCloud**, enable **Remote Web Access**, then click **Apply**.

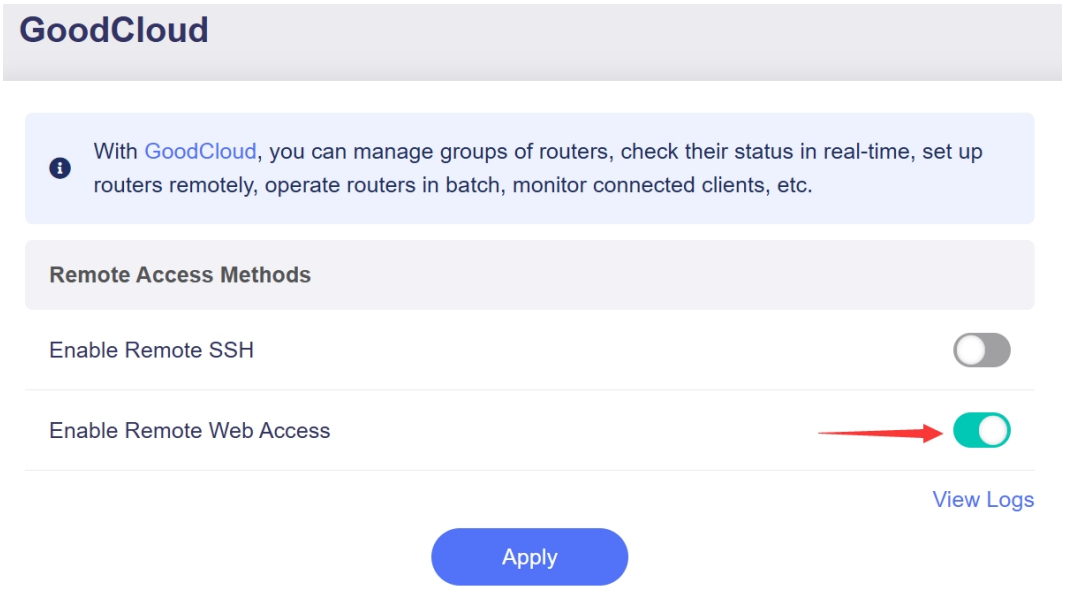


2. Log in to the GoodCloud platform and navigate to **Devices** > **Bound Devices**. Click the device you want to access, and you will enter the device details page.
3. On the device details page, click the **Remote GUI** button in the upper right corner.

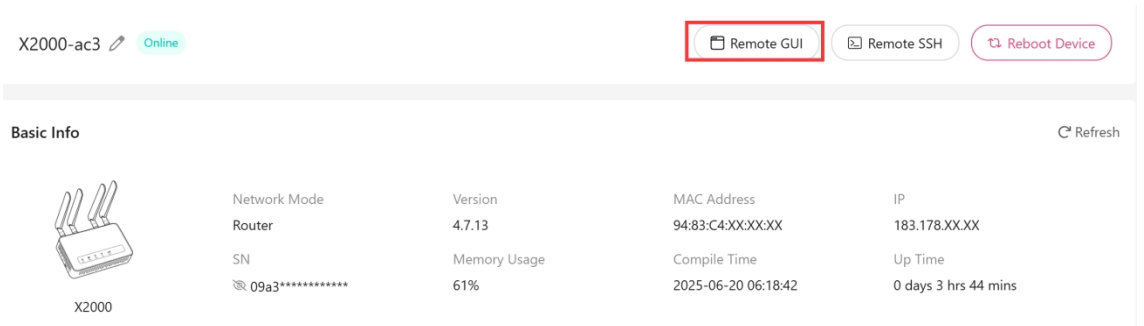

4. Select the transfer protocol and port. The defaults are **HTTP** and Port **80**. You can switch the protocol to HTTPS if needed, and the port will automatically change to 443. Then click **Apply**.

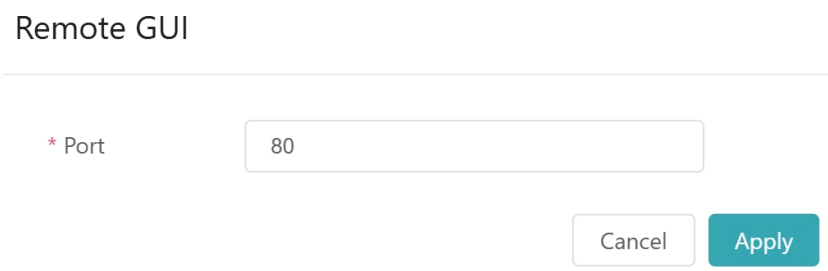


5. You will be re-directed to the router’s login page. Enter the admin password to remotely access the router’s web admin panel.

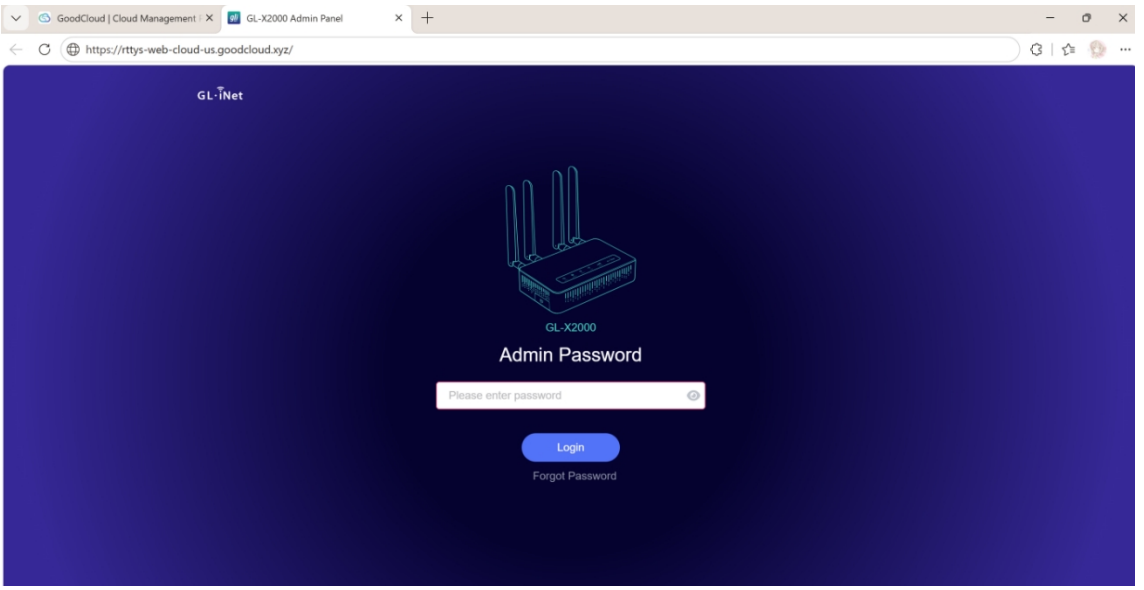


Remote Access Terminal


1. Log in to the router's web admin panel, navigate to **CLOUD SERVICES** > **GoodCloud**, enable **Remote SSH**, then click **Apply**.

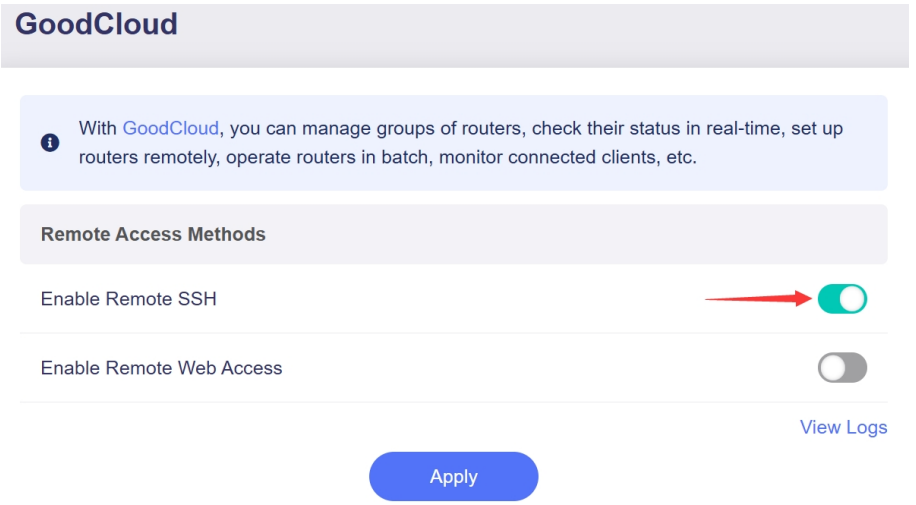

2. Log in to the GoodCloud platform and navigate to **Devices** > **Bound Devices**. Click the device you want to access, and you will enter the device details page.
3. On the device details page, click the **Remote SSH** button in the upper right corner.

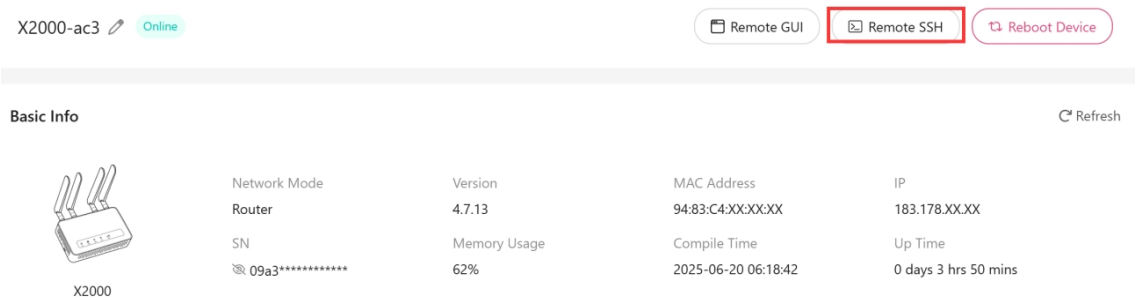


4. Log in as **root** and input the password to access the terminal of your router.

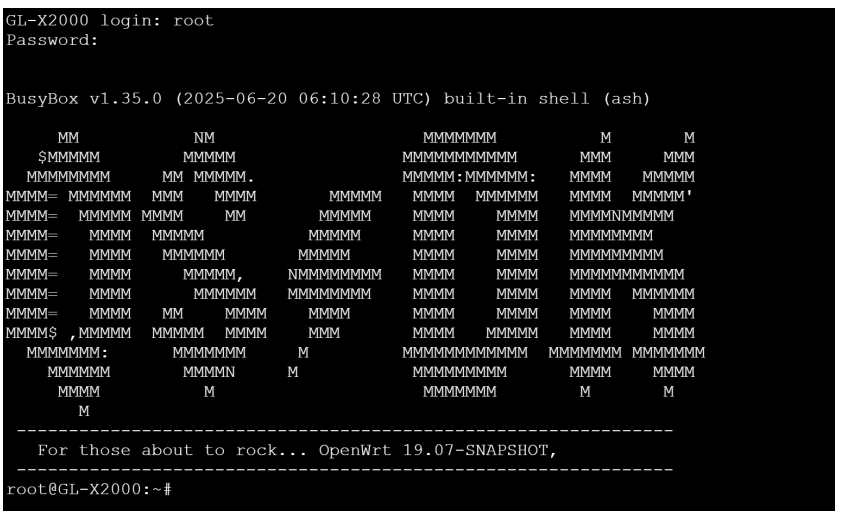


7.1.3 Unbind Device

In the router's web admin panel, click the Cloud icon in the upper right corner. In the drop-down menu, click the gear icon and select **Unbind**. Your device will then be unbound from your GoodCloud account.

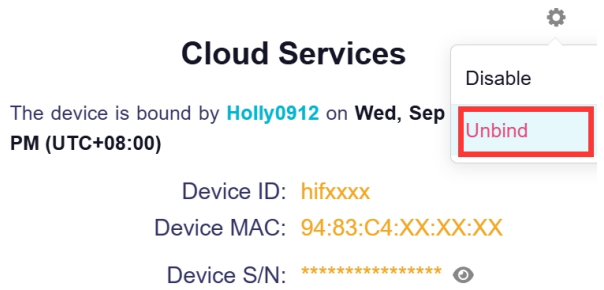


Alternatively, log in to the Cloud platform and navigate to **Devices** > **Bound Devices**. Select the device you want to unbind, click **Settings** in the upper right corner, then select **Delete**. Your device will then be unbound from your GoodCloud account.

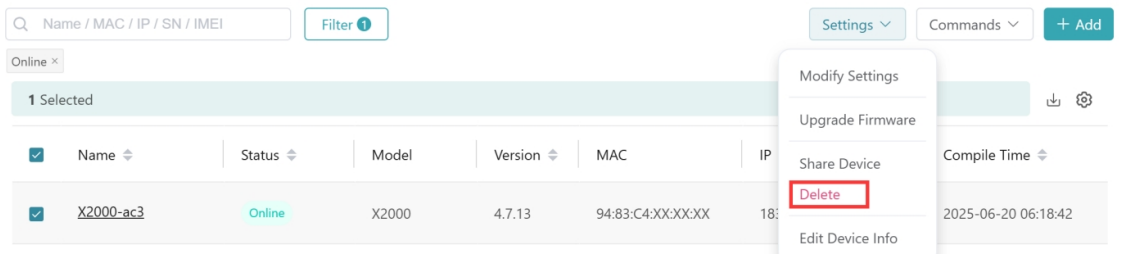

7.1.4 Disable GoodCloud

If you no longer want the device connected to the Cloud, click the Cloud icon in the upper right corner. In the drop-down menu, click the gear icon and select **Disable**.

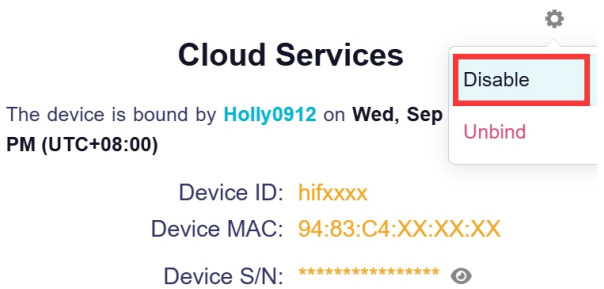

The Cloud service will then be disabled.

Chapter 8

Get To Know VPN

This chapter introduces VPN concepts and common use scenarios.

8.1 Introduction

VPN

VPN, short for Virtual Private Network, establishes an encrypted and private tunnel between a device and a remote server, protecting data transmission and enabling secure access to private or restricted networks.

VPN Router

A VPN router features preinstalled VPN functionality, protecting all connected devices via VPN. Unlike setting up VPN on individual devices, configuring the router as a VPN client routes all traffic through an encrypted tunnel, with no separate setup needed per device. This secures multiple devices at once, saves time, and ensures consistent VPN configurations, reducing risks from improper individual settings.

GL.iNet routers support over 30 popular commercial OpenVPN and WireGuard VPN services. Upload your VPN configuration files to activate the VPN connection for secure networking. See here for the full list of third-party VPN providers.

OpenVPN

OpenVPN is an open-source VPN protocol using SSL/TLS-based security for point-to-site or site-to-site connections. It supports multiple encryption methods, TCP/UDP, and easy firewall/NAT bypass.

WireGuard

WireGuard is a lightweight, fast VPN protocol simpler and more efficient than OpenVPN. It features modern cryptography for efficiency, a small codebase for easier auditing and security, and state-of-the-art algorithms (ChaCha20/Poly1305) for encryption and data integrity.

8.2 Application Scenarios


1. **Personal Data Privacy**

   The VPN service is compatible with a wide range of devices via our router, including not just laptops, phones and tablets, but also gaming consoles, TVs, and streaming devices. Your data will be protected whether over wireless or wired connections. You can even customize VPN policies to achieve flexible protection for certain devices.




2. **Unrestricted Access Worldwide**

   Accessing some sites may be restricted by location. With VPN enabled, you can unblock any sites when necessary. By connecting to different third-party servers, you will be assigned different IP addresses for surfing or accessing region-blocked sites.

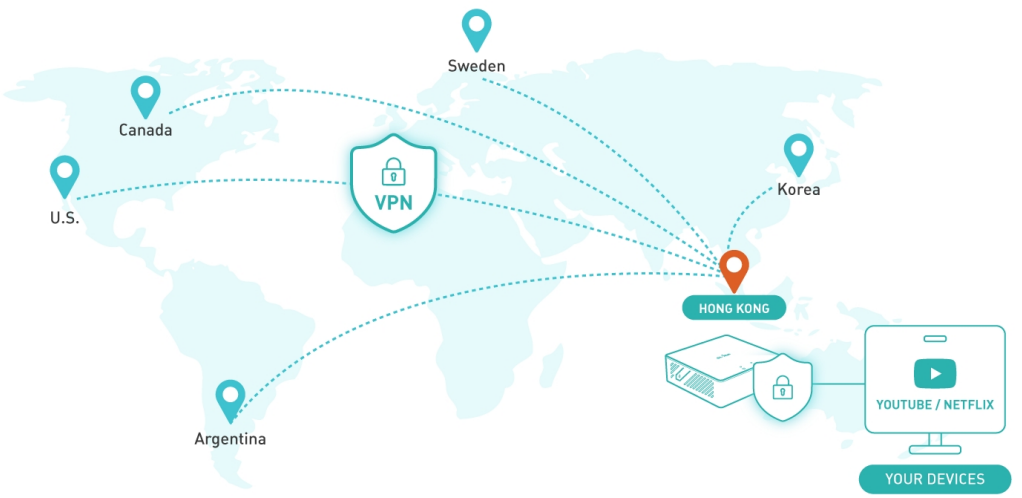


3. Small Business Data Security

Many people work in co-working spaces or cafes and rely on free public Wi-Fi. Such networks are vulnerable to cybercriminal attacks. By configuring your travel router as a VPN client, you can enjoy secure connectivity for work anywhere.

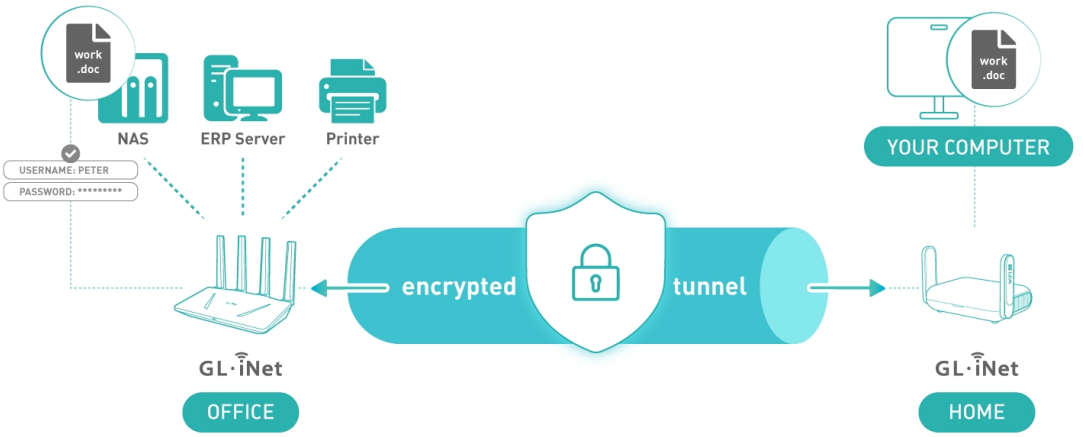

4. Secure Payment Infrastructure

Small retail owners need to handle customers' payment credentials when conducting on-site business. Using a VPN router, their POS machines can upload credit card information via an encrypted VPN tunnel to ensure payment security.

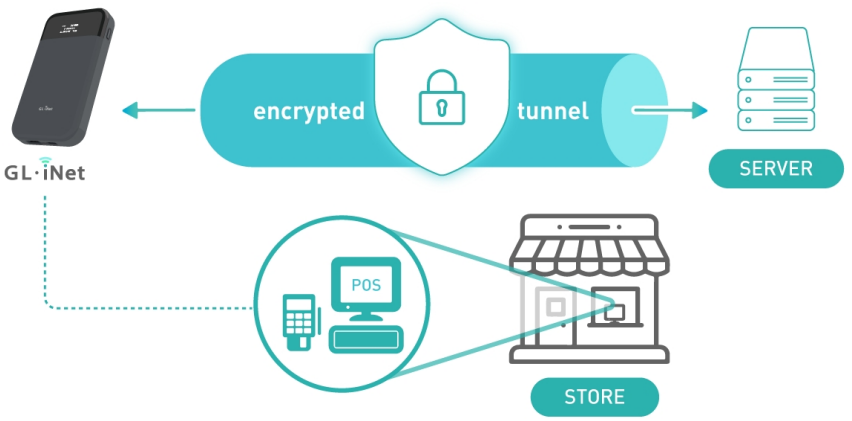

Chapter 9

VPN Dashboard

This chapter introduces how to manage VPN connections via the web admin panel.


Log in to the router's web admin panel and navigate to **VPN** > **VPN Dashboard**.

When the router is set as an active VPN client, the VPN dashboard displays VPN connection details, such as server address, traffic statistics, client virtual IP, and connection log. It also allows you to configure advanced settings such as the Block non-VPN traffic, Allow Access WAN, and Services from GL.iNet Use VPN.

9.1 VPN Setup Wizard

To begin with, click the book icon in the upper left corner and follow the VPN Setup Wizard to complete the VPN configuration quickly.



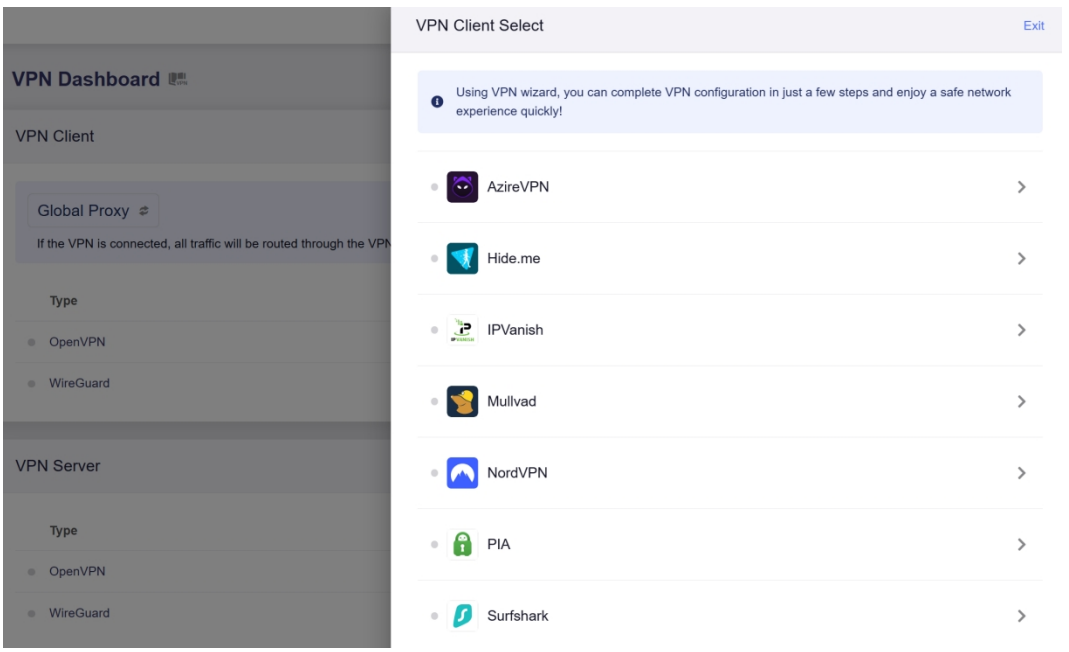


Note: The VPN Setup Wizard is only for the integrated VPN services, including AzireVPN, Hide.me, IPVanish, Mullvad, NordVPN, PIA and Surfshark. For other VPN providers, skip the wizard and go to **VPN** > **OpenVPN Client** or **WireGuard Client** to set up VPN manually.


Here's an example with **Hide.me**. Log in with Hide.me credentials.



Select a VPN server and click **Apply**. This is the server you will connect to, and your public IP address will appear to be from the selected server's location.

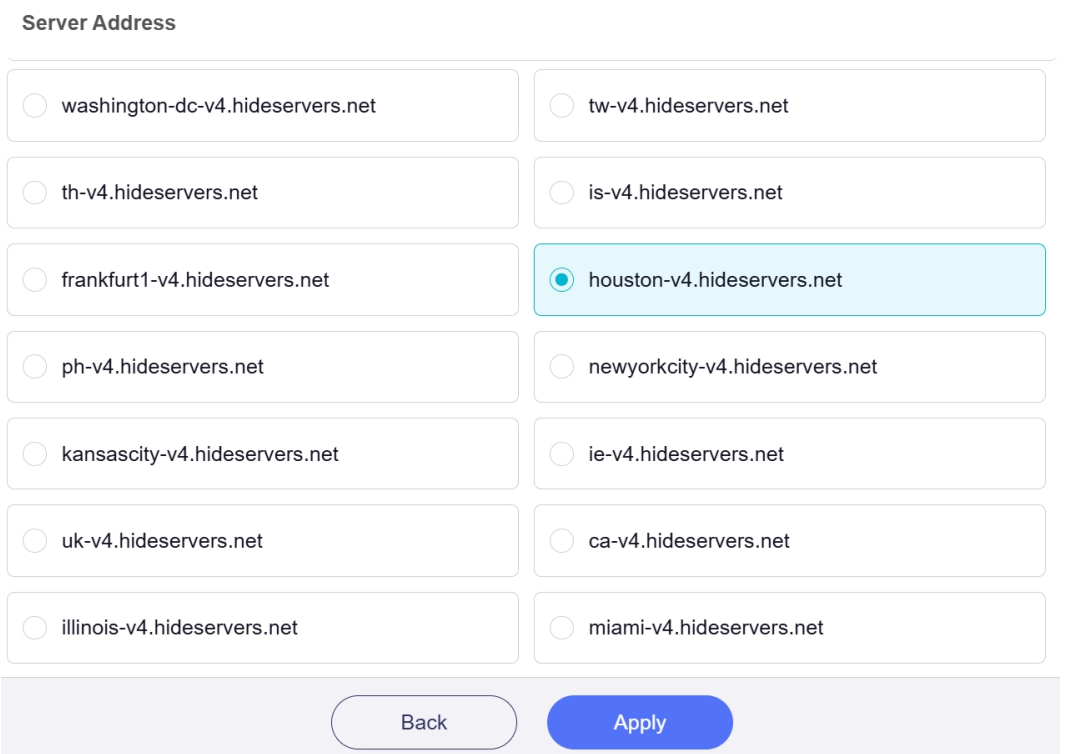


It will connect automatically. Once connected, go to the **VPN Dashboard**. You will see that a VPN tunnel has been enabled, displaying details including the VPN protocol (e.g., WireGuard), configuration file, server address, server listen port, traffic statistics, and the client virtual IP address. You can also view the connection logs in the lower right corner.

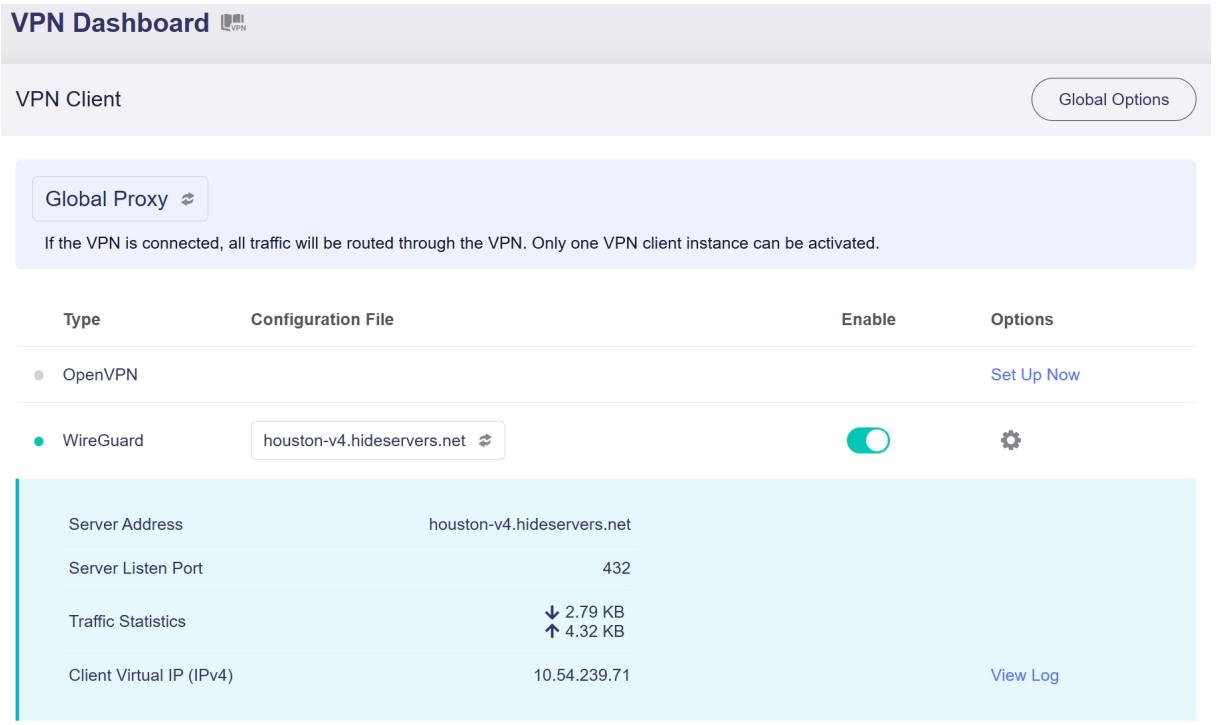


9.2 VPN Client

When you enter the **VPN Dashboard** for the first time and no OpenVPN or WireGuard configuration files are available, the page displays as follows. Click **Set Up Now** and you will be directed to the **OpenVPN Client** or **WireGuard Client** page to upload your VPN configuration files.

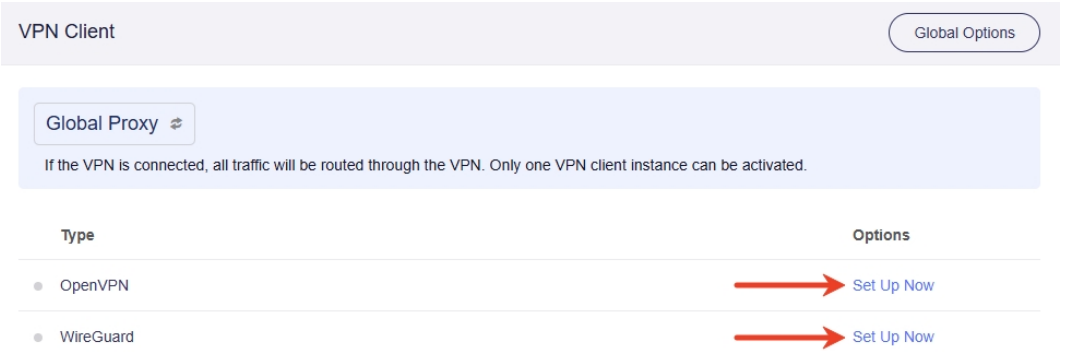


Once uploaded, your configuration will be shown in the **Configuration File** column. If you have multiple configuration files uploaded, you can switch files by clicking on the box.

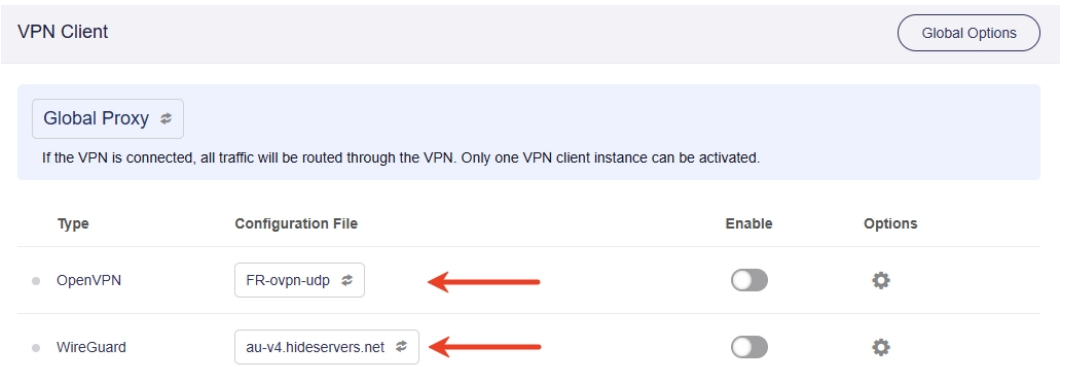


9.2.1 Client Options


Click the gear icon on the right to access OpenVPN or WireGuard client options.

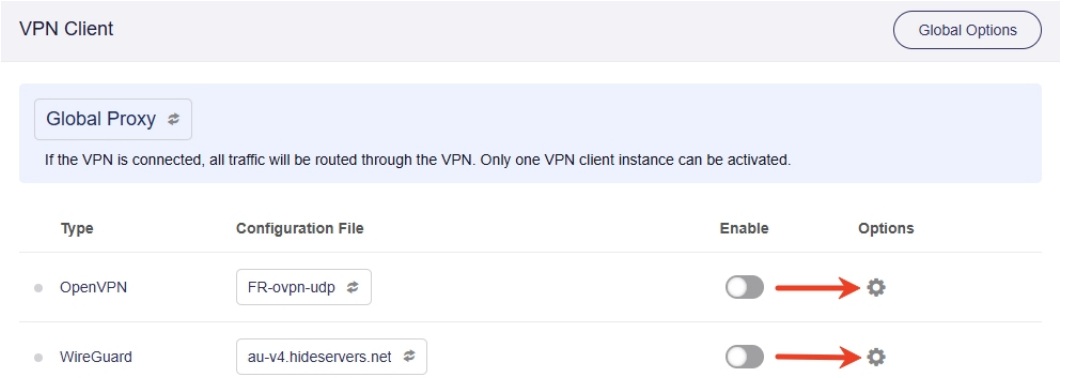

The OpenVPN Client Options displays as follows.

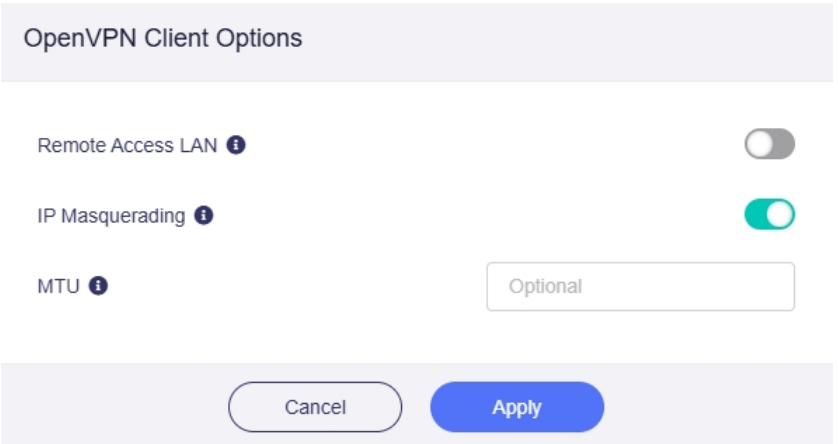


The WireGuard Client Options displays as follows.

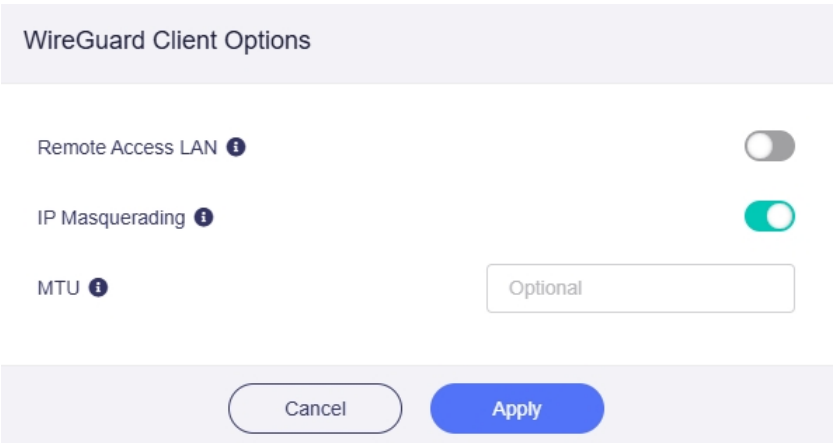

- **Remote Access LAN**: If enabled, remote access to this router and its LAN devices via VPN will be allowed. The VPN server must advertise a route to the LAN subnet of this router.


For example, as shown in the diagram below, the GL.iNet router runs as a VPN client and connects to a VPN server over the VPN tunnel. When this option is enabled, both the GL.iNet router and its LAN-side devices can be accessed by devices on the VPN server side (e.g. NAS). This requires you to add a routing rule on the VPN server to reach the LAN subnet of the GL.iNet router.

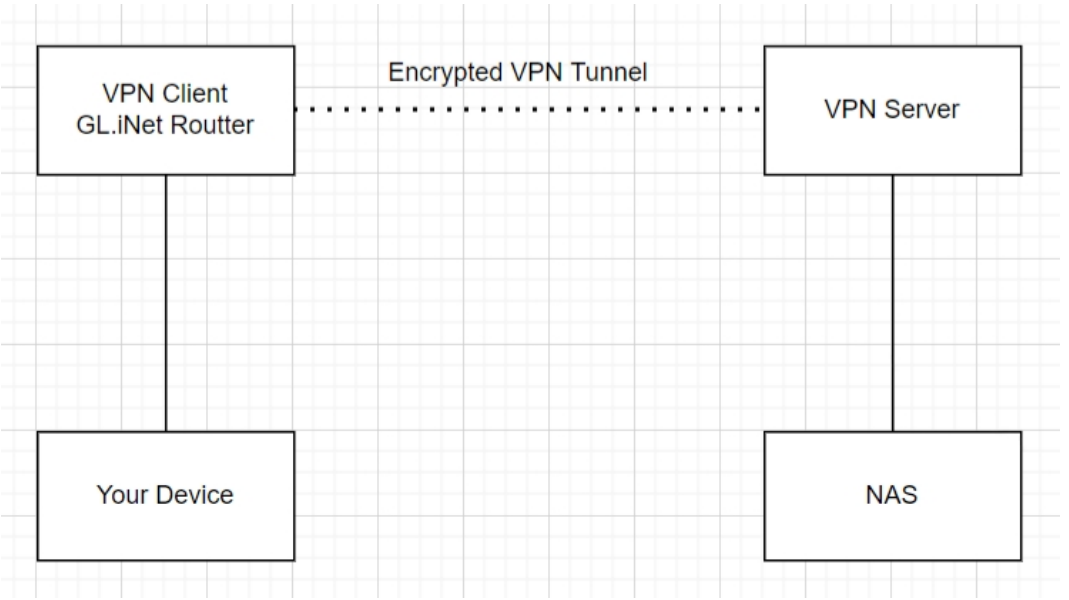

- **IP Masquerading**: If enabled, the source IP addresses of LAN clients will be rewritten to the router's VPN tunnel IP. Disable this only for Site-to-Site setups where the remote peer knows your LAN subnets.
- **MTU**: Short for Maximum Transmission Unit. This optional setting lets you customize the VPN tunnel MTU, which overrides the value defined in the configuration file.

9.2.2 Policy Mode

The default proxy mode for VPN connection is **Global Proxy**. You can click the box in the upper right to switch to other proxy modes.

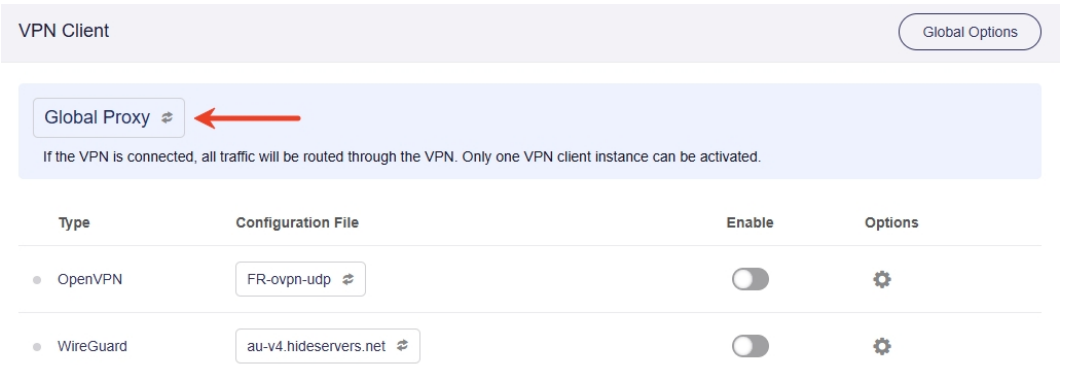

Three proxy modes are available: Global Proxy, Policy Mode and Route Mode.

1. **Global Proxy**

   In this mode, all traffic will be routed through the VPN. Only one VPN client instance can be activated.

2. **Policy Mode**

   This mode can be further divided into three policies.

   - **Based on the Target Domain or IP**

     In this mode, only the traffic of certain websites identified by IP address or domain name will be routed through VPN. Only one VPN client instance can be activated.

   - **Based on the Client Device**

     In this mode, only the traffic of certain LAN devices identified by MAC addresses will be routed through VPN. Only one VPN client instance can be activated.

   - **Based on the VLAN**

     In this mode, only the traffic of certain VLAN will be routed through VPN. Only one VPN client instance can be activated.

3. **Route Mode**

   - **Auto Detect**


     The routing rules defined in each VPN client configuration file or issued by the VPN server will be used.

   - **Customize Routing Rules**

     You can manually configure routing rules for each VPN client instance.

9.2.3 Global Options

Click **Global Options** in the upper right corner to configure advanced settings for your VPN client.

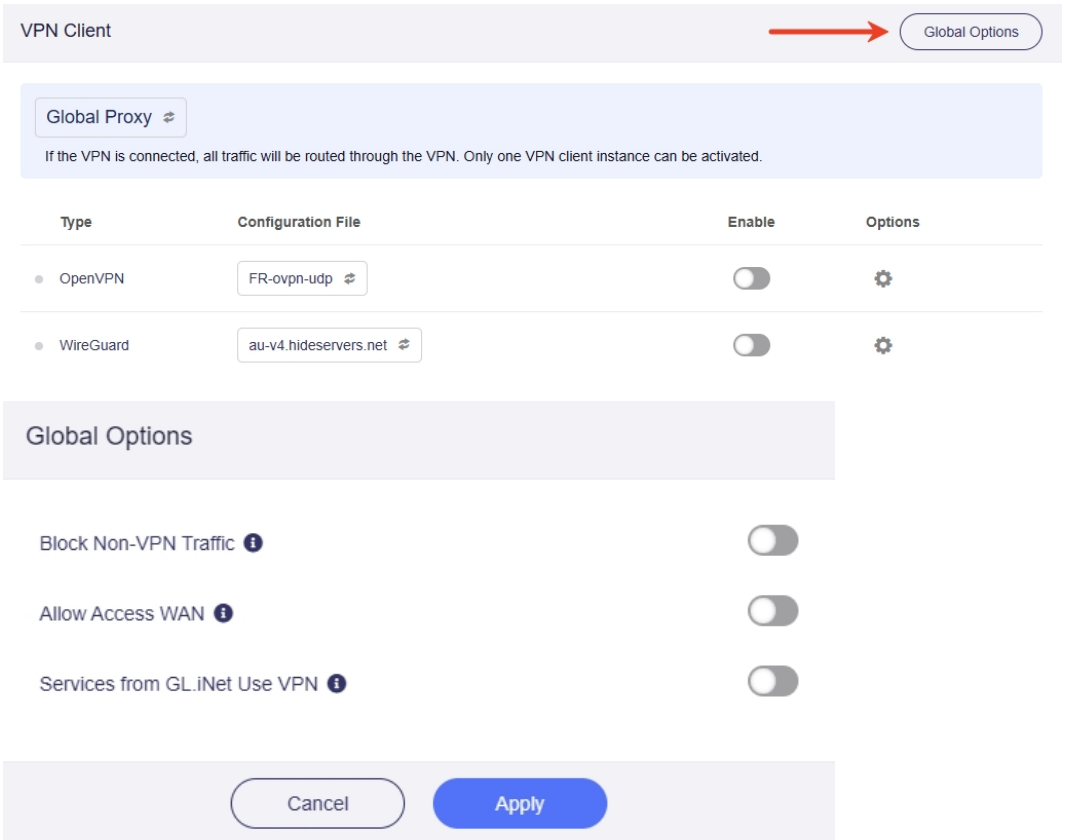

- **Block Non-VPN Traffic**: If enabled, all internet traffic is forced to pass exclusively through the VPN tunnel and cannot be routed via other interfaces such as the local ISP WAN. If the VPN connection drops unexpectedly, all internet traffic is fully blocked to prevent fallback to the regular WAN. This avoids VPN leaks caused by VPN failures, incorrect client DNS settings, and similar issues.


  This feature is also known as VPN Kill Switch. It prevents user data from being exposed online. A typical Kill Switch automatically cuts off internet access when the VPN connection fails. The Block Non-VPN Traffic feature on GL.iNet routers provides broader leak protection and covers the following scenarios:

  a. DNS Leak
  b. IPv6 Leak
  c. WebRTC Leak
  d. VPN Connection Drop

e. Applications Launched Before VPN Establishment

f. Per-Application Traffic Leaks

- **Allow Access WAN**: If enabled, local client devices can still access WAN-side services (e.g., printers, NAS and other devices in the upstream subnet) while the VPN is active.

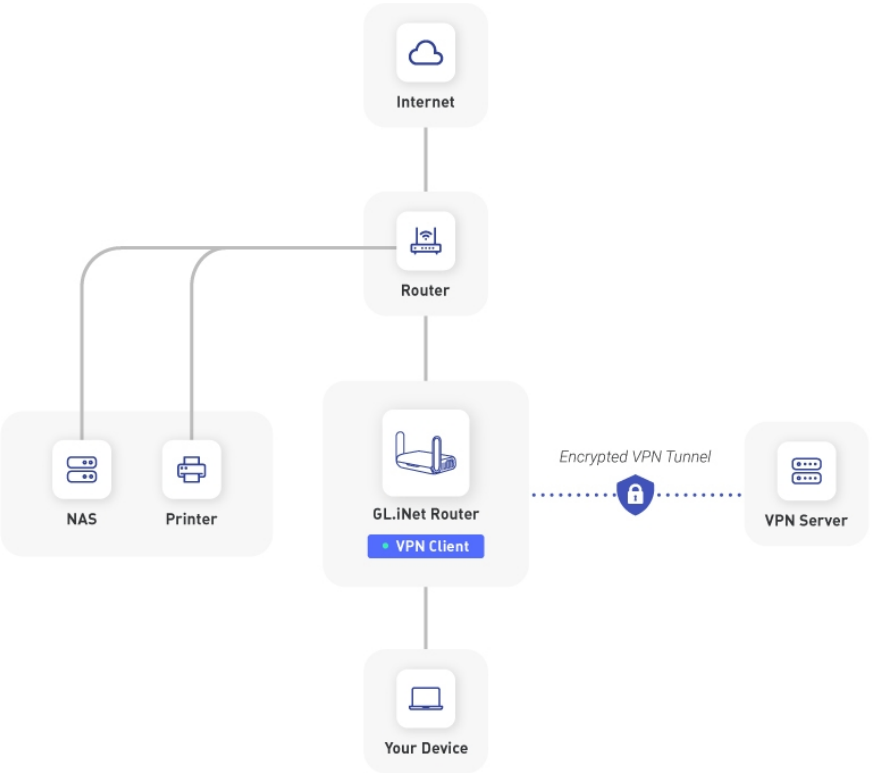


As shown in the diagram above, enabling this feature allows your local devices to reach hosts on the upstream subnet, such as printers and NAS.

This option is primarily designed to let clients access devices within the upstream subnet. However, the router cannot distinguish upstream subnet traffic from regular Internet traffic. If client devices access resources directly via public IPs, there is a potential traffic leakage risk. For this reason, **Allow Access WAN** and **Block Non-VPN Traffic** are mutually exclusive and cannot be enabled simultaneously.


- **Services From GL.iNet Use VPN**: If enabled, GoodCloud, DDNS, and rtty services will transmit packets through VPN tunnels. This option is disabled by default, as these services normally require the device's real IP address to work properly.

9.3 VPN Server

If the router has never been configured as an OpenVPN or WireGuard server, the page will appear as shown below. Click **Set Up Now** and you will be directed to the **OpenVPN Server** or **WireGuard Server** page to initialize your VPN server.

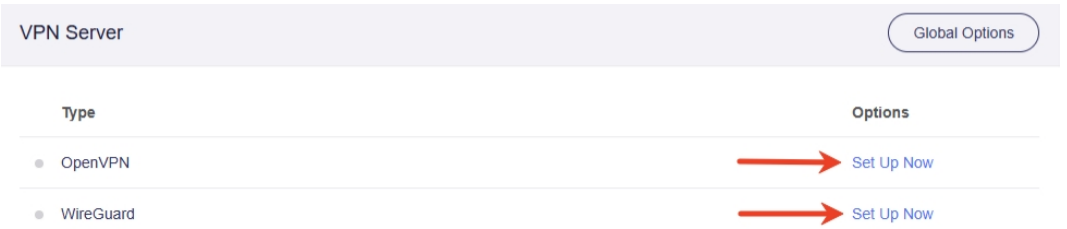


After the OpenVPN Server or WireGuard Server is enabled, the page will display the server status as follows.

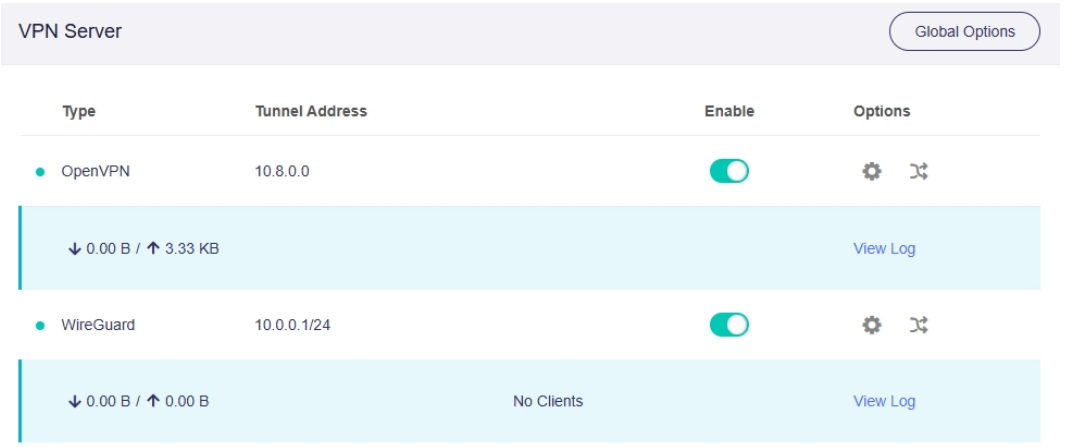


9.3.1 Server Options


Click the gear icon on the right to access OpenVPN or WireGuard server options.

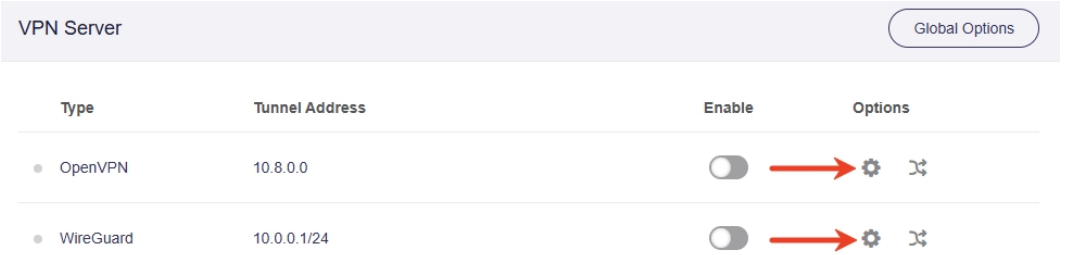

The OpenVPN Server Options displays as follows.

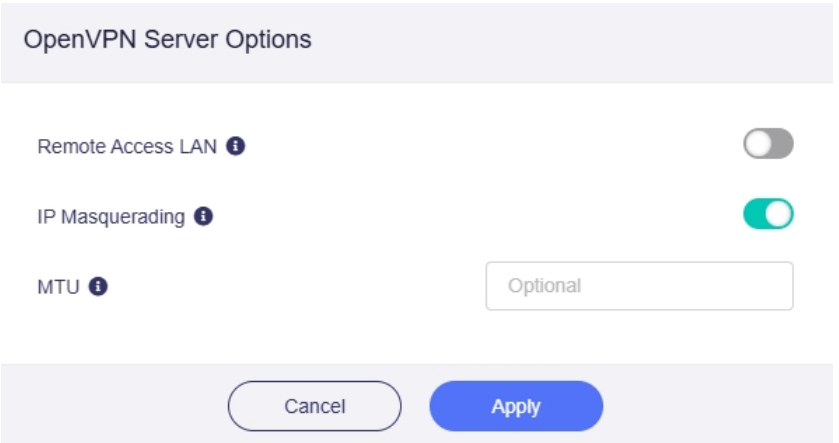

The WireGuard Server Options displays as follows.

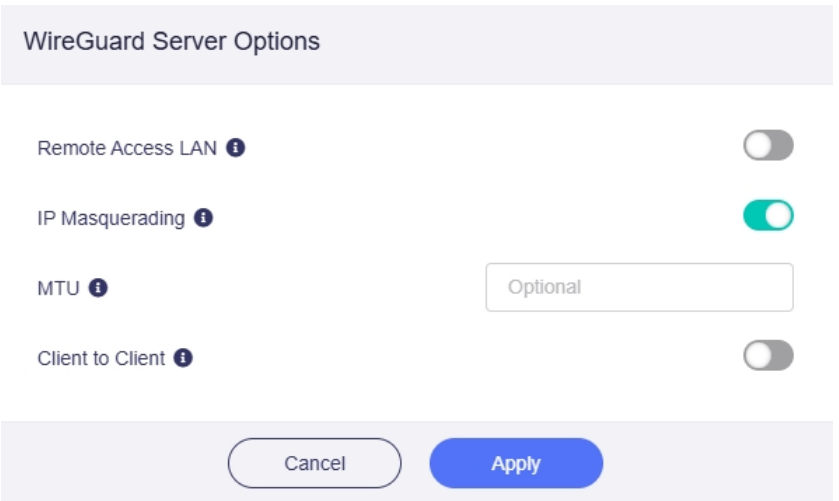


- **Remote Access LAN**: If enabled, resources inside the server's LAN subnet can be accessed through the VPN tunnel.
- **IP Masquerading**: If enabled, the source IP addresses of LAN clients will be rewritten to the router's VPN tunnel IP. Disable this only for Site-to-Site setups where the remote peer knows your LAN subnets.


- **MTU**: Short for Maximum Transmission Unit. The MTU value you set for the tunnel will override the MTU settings in the configuration file.
- **Client to Client**: If enabled, VPN clients connected to this server can access each other via their VPN tunnel IPs. If you want to allow clients to also access one another's LAN subnets, you need to add routing rules on the VPN server to advertise those remote LAN subnets.

9.3.2 Server Route Rule


Click the route icon on the right to customize OpenVPN or WireGuard route rules as needed.

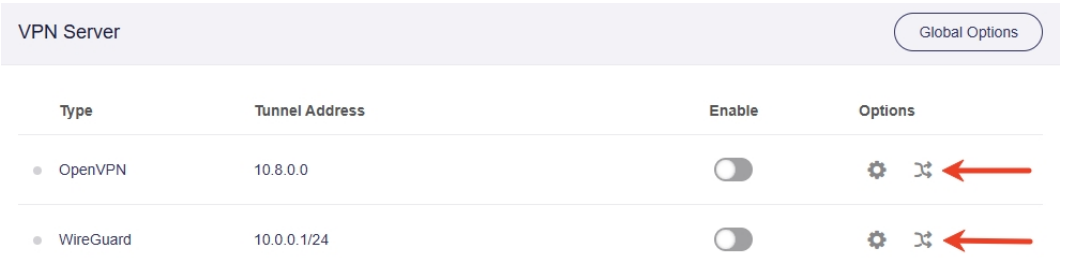

The OpenVPN Server Route Rule displays as follows. Click **Add Route Rule**, enter the **Target Address** and **Gateway**, then click the green check icon to apply.

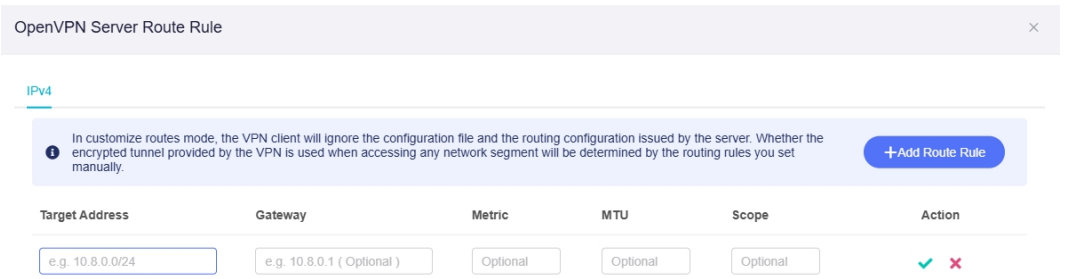


The WireGuard Server Route Rule displays as follows. Click **Add Route Rule**, enter the **Target Address** and **Gateway**, then click the green check icon to apply.

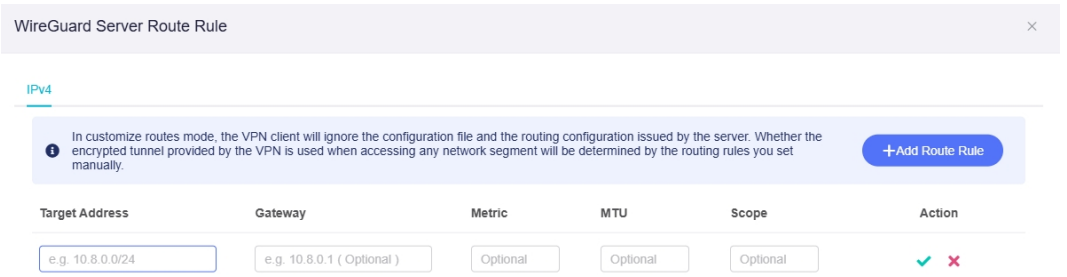

Note: In customize routes mode, the VPN client will ignore the configuration file and the routing configuration issued by the server. Whether to use the VPN encrypted tunnel when accessing any network segment is determined by the routing rules you manually set.

9.3.3 Global Options

Click **Global Options** in the upper right corner to configure advanced settings for your VPN server.

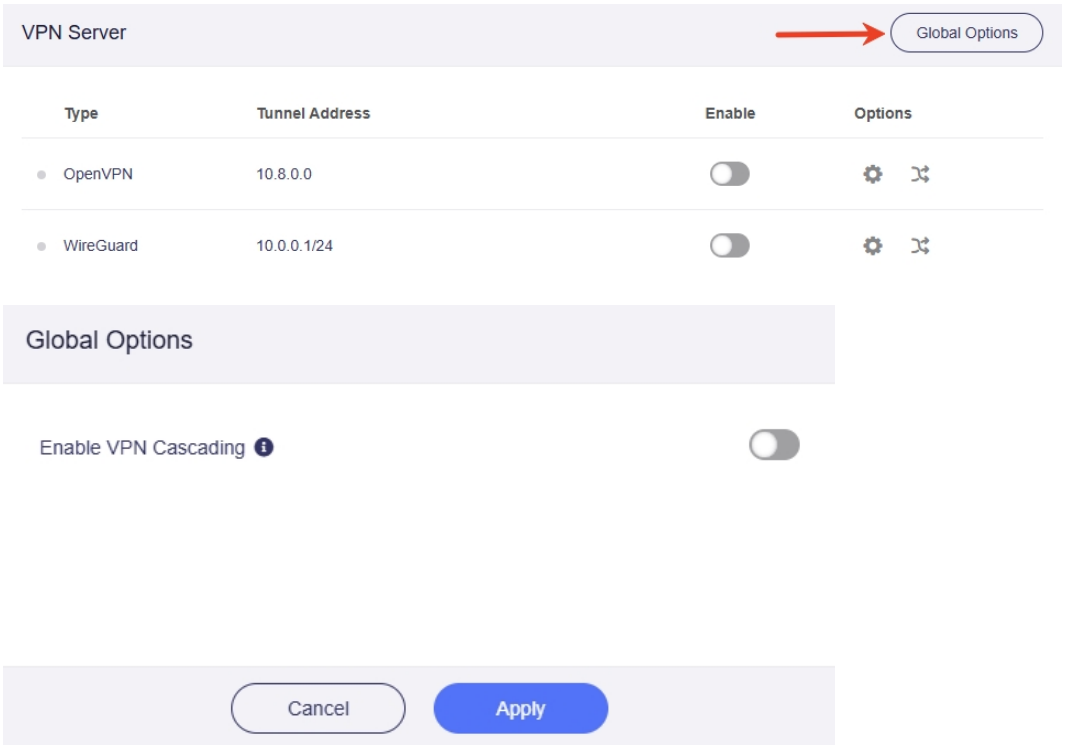

- **VPN Cascading**: If enabled, when this router acts as a VPN server and a VPN client simultaneously, remote VPN clients connected to this router's VPN server will have their traffic routed through the upstream VPN tunnel that this router is using as a VPN client. Learn more about VPN Cascading.

Chapter 10

Set Up VPN Server

This chapter introduces how to set up a GL.iNet router as OpenVPN or WireGuard server.

10.1 Set Up OpenVPN Server

OpenVPN is an open-source VPN protocol that utilizes SSL/TLS encryption for secure point-to-point and site-to-site connections. To set up OpenVPN server on a GL.iNet router, watch this video or refer to the steps below.

10.1.1 Preparation

1. **Make sure you have a public IP address**

   Click here to verify if your Internet Service Provider (ISP) assigns you a public IP address.

   If not, your router cannot be set as an OpenVPN server.

   Alternative methods:

   - If you have a primary router upstream of your GL.iNet router, log in to it and verify it has a public IP address assigned by your ISP.
   - Ask your ISP for a public IP address. This may incur an extra fee.


2. **Confirm if Port Forwarding is required**

   - If your GL.iNet router is the primary router in your network, no port forwarding setup is required. Proceed to the next step.
   - If a primary router is already in use and your GL.iNet router is configured as a secondary router, you will need to configure port forwarding on the primary router.
   - If your GL.iNet router is multiple levels downstream from the primary router, configure port forwarding on each intermediate device.

10.1.2 Setup Steps

1. Log in to the router's web admin panel, navigate to **VPN** > **OpenVPN Server**, then click **Generate Configuration** (for VPN server initial setup only).
2. Apply the configuration.

   The default configuration works for most cases. Click **Export Client Configuration** at the bottom and proceed to step 3. If you have modified the configuration, click **Apply** before exporting it.

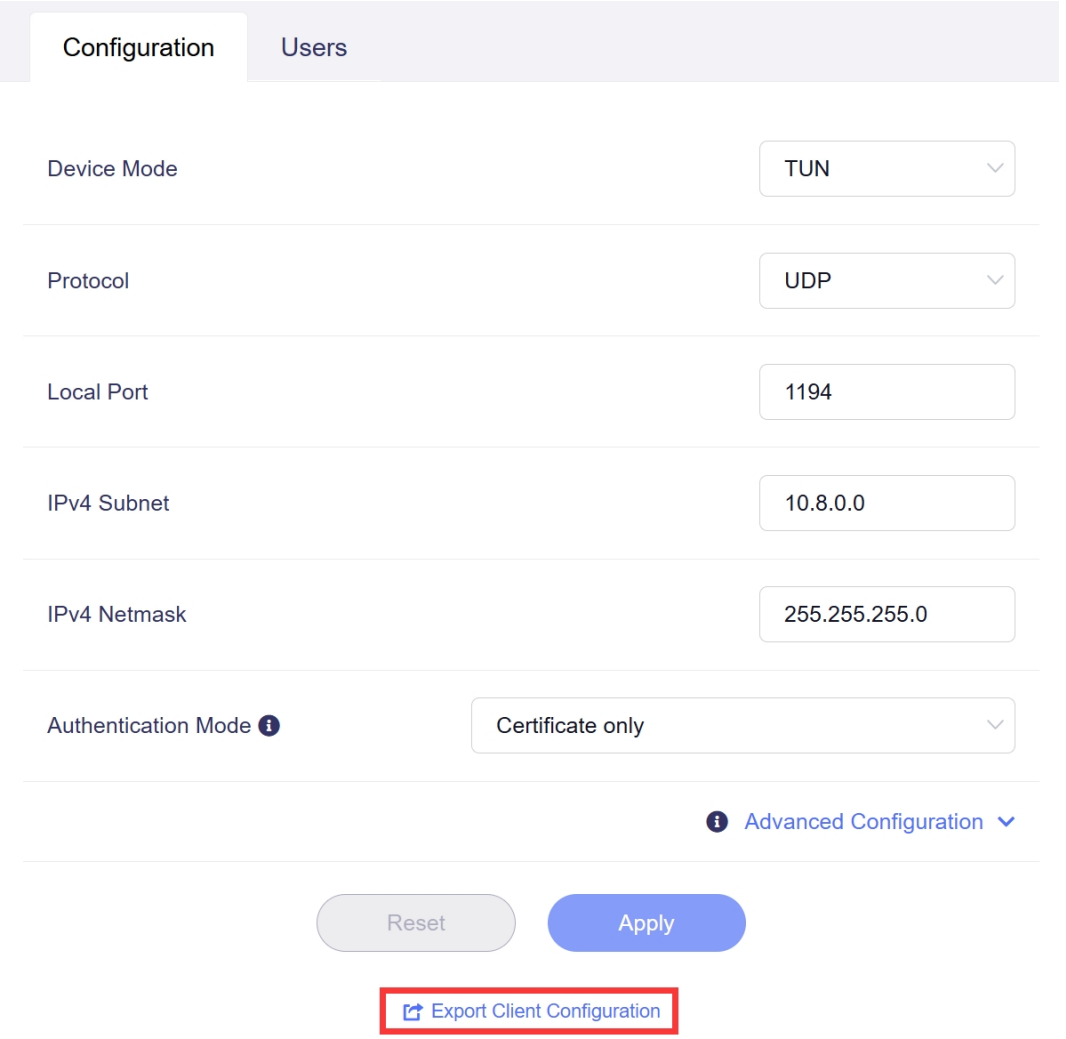


- **Device Mode**: TAP-S2S or Tun. See here for the differences.
- **Protocol**: UDP or TCP. See here for the differences.
- **Authentication Mode**: This determines the authentication method used when the client connects to the server. There are three options:

- **Certificate Only**: If selected, the router will automatically generate a server and client certificate keys and embed them in the configuration file. When you upload the configuration to the client, no additional credentials are required.
- **Username/Password Only**: If selected, the router will generate client configuration without certificate keys. You need to first add a username and password in the **Users** tab before exporting the client configuration. When uploading the configuration to the client, enter these credentials for authentication.
- **Username/Password and Certificate**: If selected, you need to first add a username and password in the **Users** tab before exporting the client configuration; second, the router will automatically generate server and client certificate keys and embed them in the configuration file. When uploading the configuration to the client, the certificate-key will be verified first, followed by username/password authentication for 2FA security.

- **Advanced Configuration**: Customize more server settings if needed.

3. Export Client Configuration.

   After clicking **Export Client Configuration** at the bottom of the Configuration tab (or applying the modified configuration), a window will pop up as follows. Click **Download** to export the configuration.

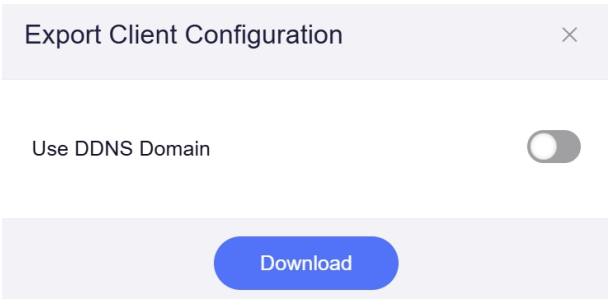


   Tip:If your public IP address changes frequently, go to **APPLICATIONS** > **Dynamic DNS** and enable DDNS. You can then use the DDNS domain as your server address.

4. Start OpenVPN server.


   On the **OpenVPN Server** page, click the **Start** button in the upper right corner to start the server.



If you want to view the server connection status, click **View Status**.

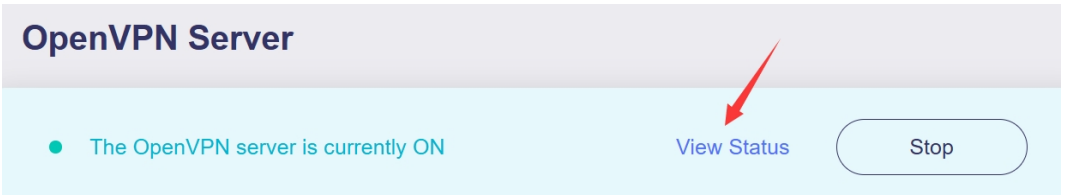

You will be redirected to the VPN Dashboard. If theupload and download traffic statistics are displayed in this page, the OpenVPN server is running.

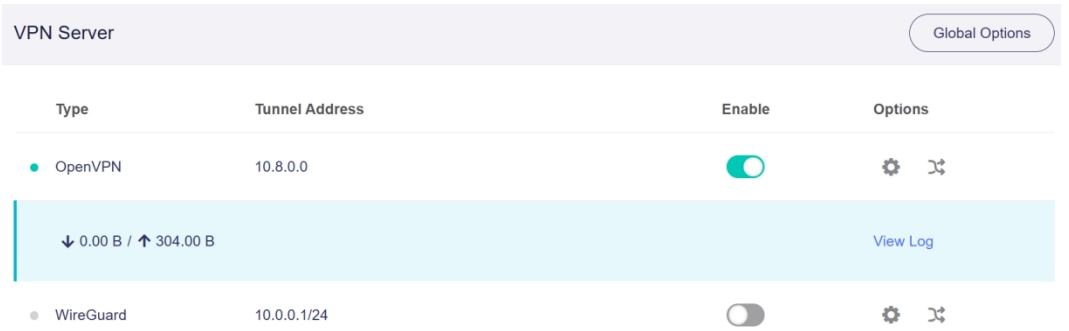

10.1.3 Troubleshooting

If the connection fails, there are several common reasons:

- The VPN server does not have a public IP address. See here for troubleshooting.
- You may need to set up port forwarding. See here for troubleshooting.
- The port used for the OpenVPN Server is blocked by your Internet Service Provider. Change to another port, or contact your ISP for assistance.
- The VPN connection may be blocked in certain countries or regions.

10.2 Set Up WireGuard Server

WireGuard® is a simple yet fast and modern VPN that utilizes state-of-the-art cryptography. It aims to be faster, simpler, and more useful than IPSec, while avoiding the massive headache. It intends to be considerably more performant than OpenVPN. To set up WireGuard server on a GL.iNet router, watch this video or refer to the steps below.

10.2.1 Preparation

1. **Make sure you have a public IP address**

   Click here to verify if your Internet Service Provider assigns you a public IP address.
   If not, your router cannot be set as a WireGuard Server.

   Alternative methods:

   - If you have a primary router upstream of your GL.iNet router, log in to it and verify it has a public IP address assigned by your ISP.
   - Ask your ISP for a public IP address. This may incur an extra fee.


2. **Confirm if Port Forwarding is required**

   - If your GL.iNet router is the primary router in your network, no port forwarding setup is required. Proceed to the next step.
   - If a primary router is already in use and your GL.iNet router is configured as a secondary router, you will need to configure port forwarding on the primary router.
   - If your GL.iNet router is multiple levels downstream from the primary router, configure port forwarding on each intermediate device.


10.2.2 Setup Steps

1. Log in to the router's web admin panel, navigate to **VPN** > **WireGuard Server**, then click **Generate Configuration** (for VPN server initial setup only).
2. Apply the configuration.

   The default configuration works for most cases. No need to modify the IPv4 address unless it conflicts with your upstream router's gateway.

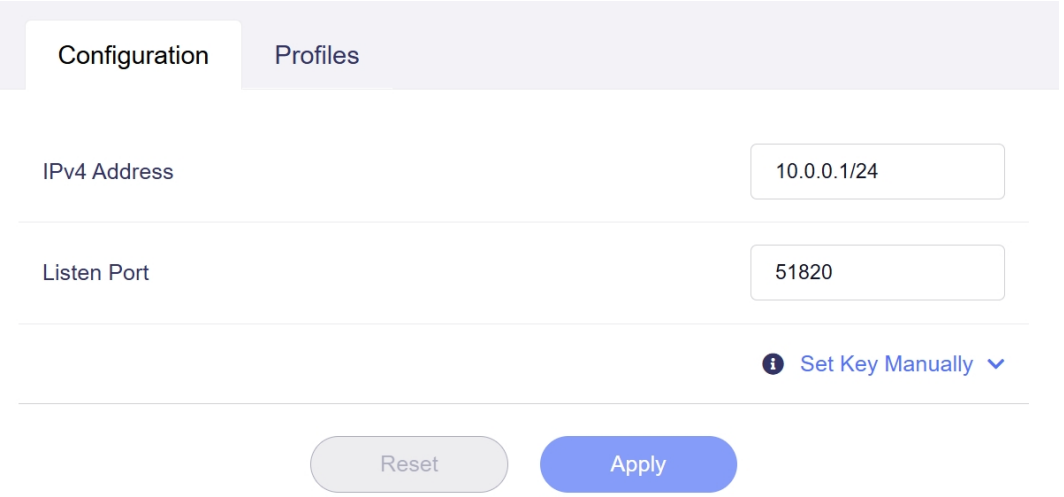


   If the IPv4 address conflicts with your upstream router's gateway, modify the IPv4 address to another one (e.g., **10.1.0.1/24**) and click **Apply**. Ensure the "/24" CIDR notation is included to avoid connectivity issues.

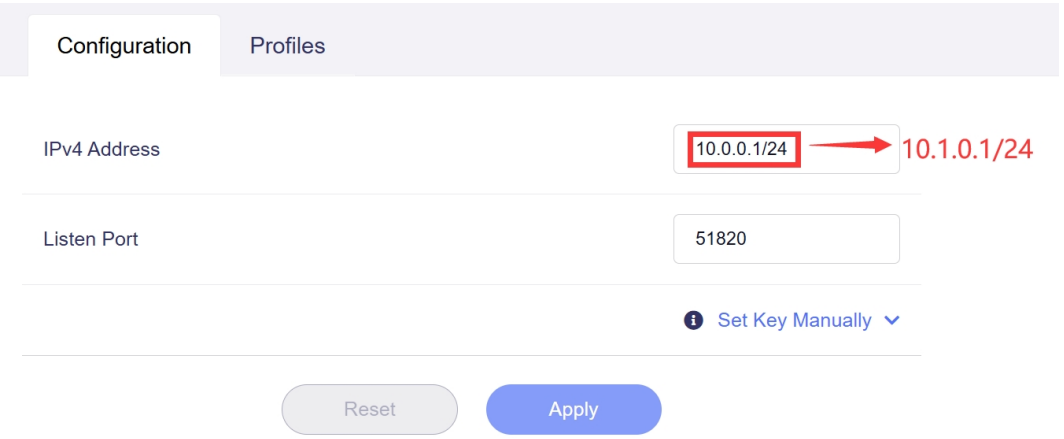


3. Add a profile.

   Switch to **Profiles** tab, click the **Add** button to generate a profile for your device.

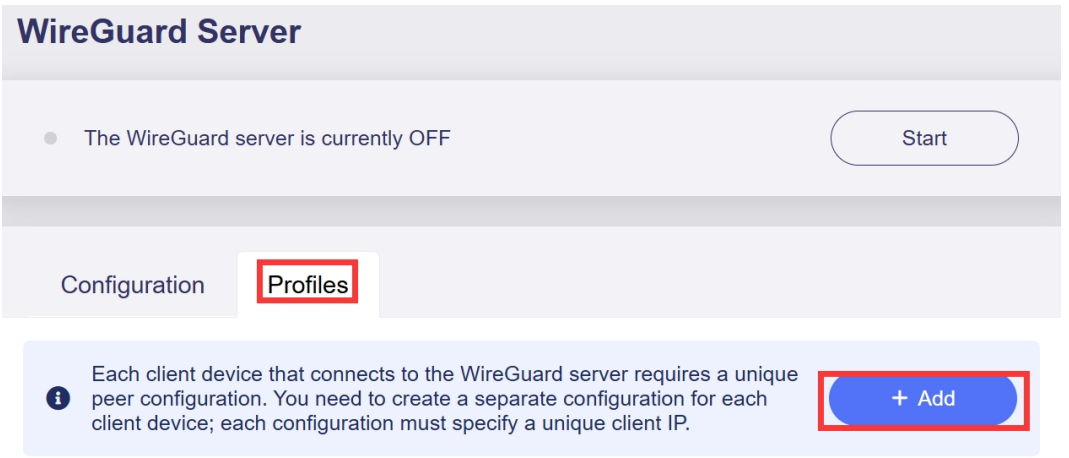

Set a descriptive name and click **Apply** to continue.

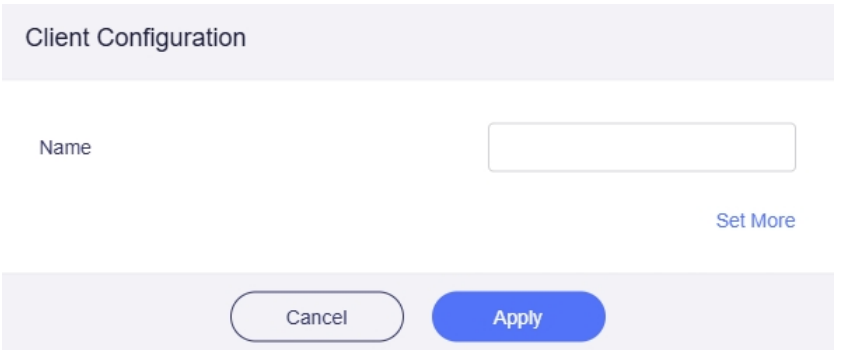


Tip: If you want to access the WireGuard client's LAN devices from your WireGuard server, switch to the **Route Rules** tab to configure route rules. See here for details.

4. Download configuration.


   After adding a profile, the router will generate a configuration file in three formats: QR code, plain text, and .conf file. Choose your preferred method to obtain the configuration file.

   - **QR code**: Suitable for devices (e.g., smartphones, tablets, laptops) with the WireGuard App installed. If you want to set a specific device as a WireGuard client, simply open the WireGuard App and scan the QR code to import a configuration file.
   - **Plain text**: In plain text format, you can review configuration details and conveniently copy-paste them elsewhere for manual configuration, such as the WireGuard App or a GL.iNet router.
   - **.conf file**: Click the **Download** button to save the .conf file to your local device. It is also convenient and can be directly uploaded to the WireGuard app or a GL.iNet router.

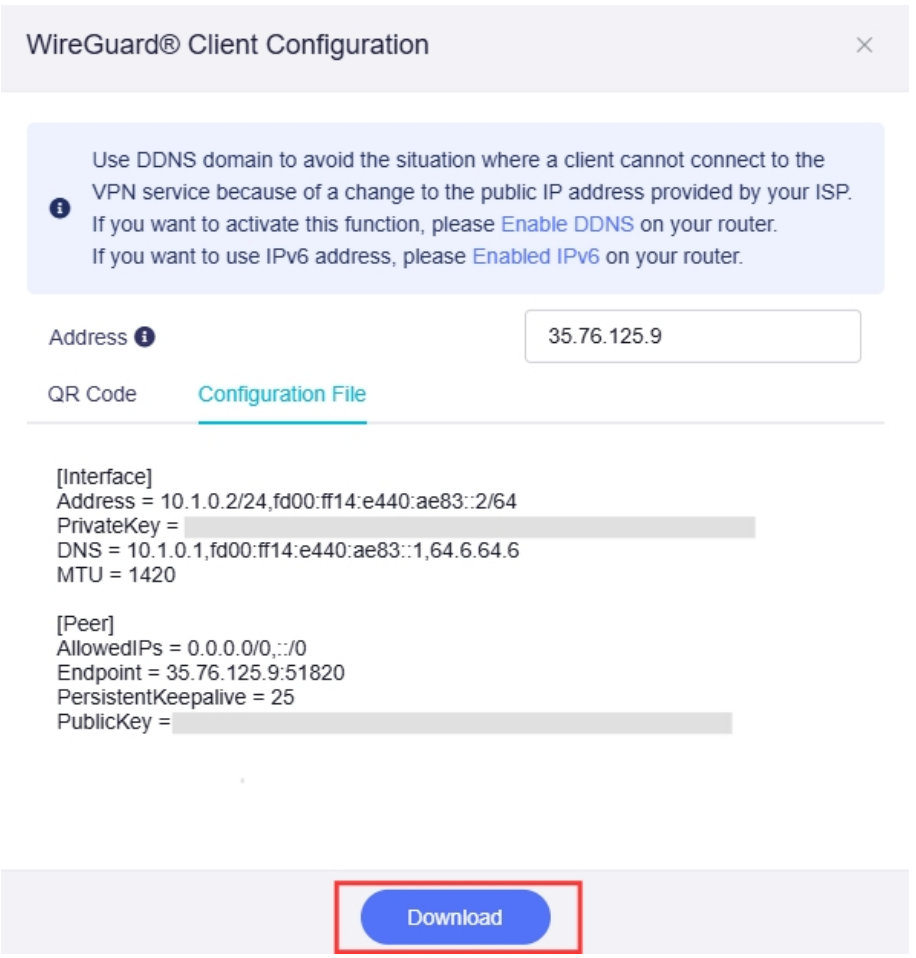


Tips:

- If your public IP address changes frequently, go to **APPLICATIONS** > **Dynamic DNS** and enable DDNS. You can then use the DDNS domain as your server address.
- Since firmware v4.8, you can select the server address from a drop-down list before exporting the configuration file: Public IP, DDNS domain, and current WAN IP address. Once selected, the server address in the configuration file will be updated automatically. Re-download the configuration file if the server address is changed.

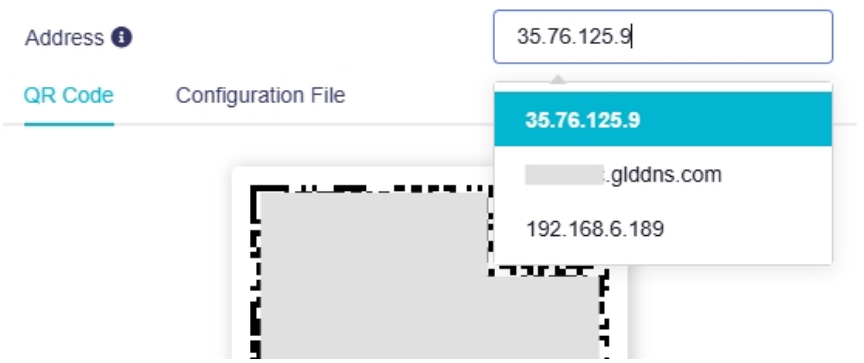


5. Start WireGuard server.


   On the **WireGuard Server** page, click the **Start** button in the upper right corner to start the server.

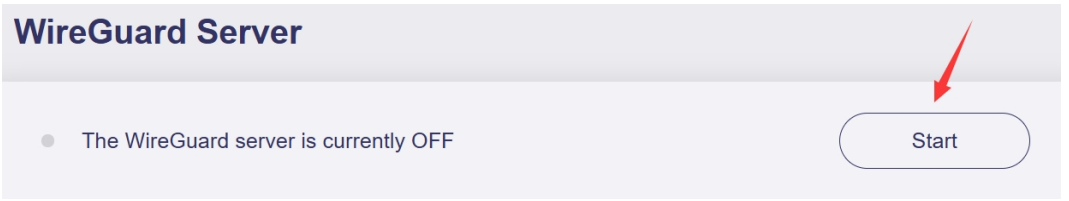

   If you want to view the server connection status, click **View Status**.

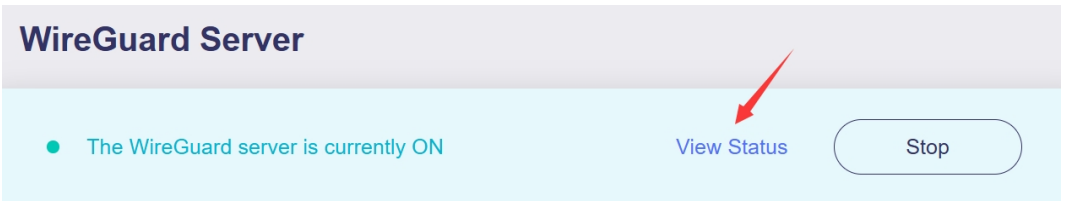

   You will be redirected to the VPN Dashboard. If theupload and download traffic statistics are displayed in this page, the OpenVPN server is running.

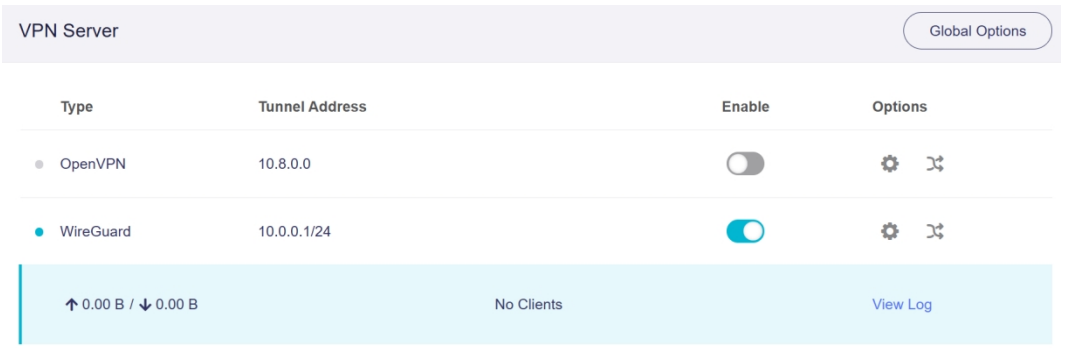

10.2.3 Troubleshooting

If the connection fails, there are several common reasons:

- The VPN server does not have a public IP address. See here for troubleshooting.
- You may need to set up port forwarding. See here for troubleshooting.
- The port used for the WireGuard Server is blocked by your Internet Service Provider. Change to another port, or contact your ISP for assistance.
- The VPN connection may be blocked in certain countries or regions.

Chapter 11

Set Up VPN Client

This chapter introduces how to set up a GL.iNet router as OpenVPN or WireGuard client.

11.1 Set Up OpenVPN Client

11.1.1 Preparation

First, ensure you have an active subscription with a VPN service provider that supports manual OpenVPN configuration. See here for the OpenVPN providers compatible with GL.iNet.


Next, visit the official website of the VPN service provider you subscribed and obtain service credentials or configuration file. If you don't know how to get the configuration file, refer to this link or contact their support.

11.1.2 Set Up NordVPN


NordVPN is integrated into the GL.iNet web admin panel. You can acquire configuration files for all NordVPN servers by entering your account credentials (obtained from the NordVPN Dashboard) in the router's web admin panel or GL.iNet mobile app, eliminating the need for manual file uploads.

Follow the steps below to set your router as a NordVPN client.


1. Log in to your NordVPN web account here.
2. On the Nord Dashboard, click **NordVPN**, then click **Set up NordVPN manually**.

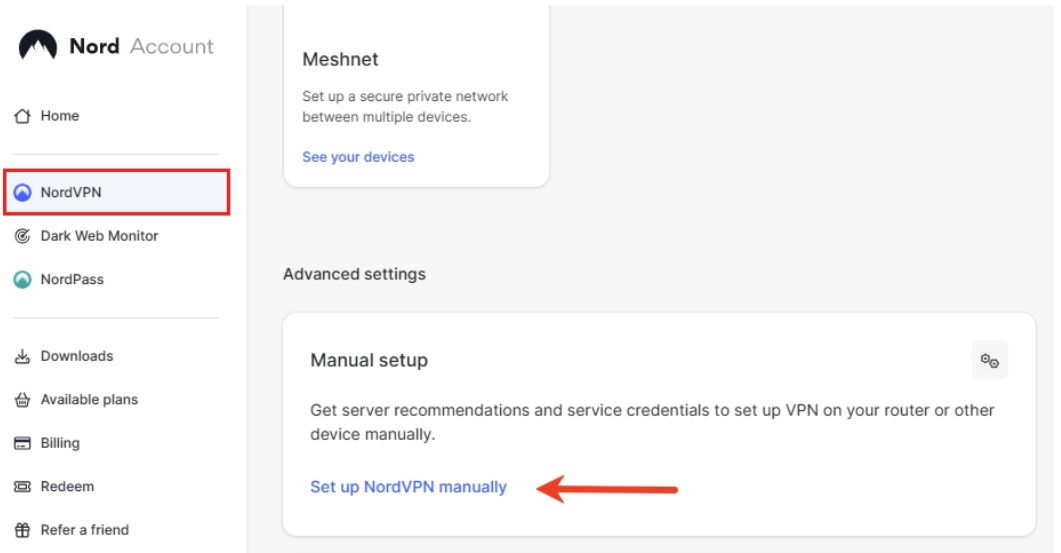


You will find the **service credentials**. Copy them for later use.

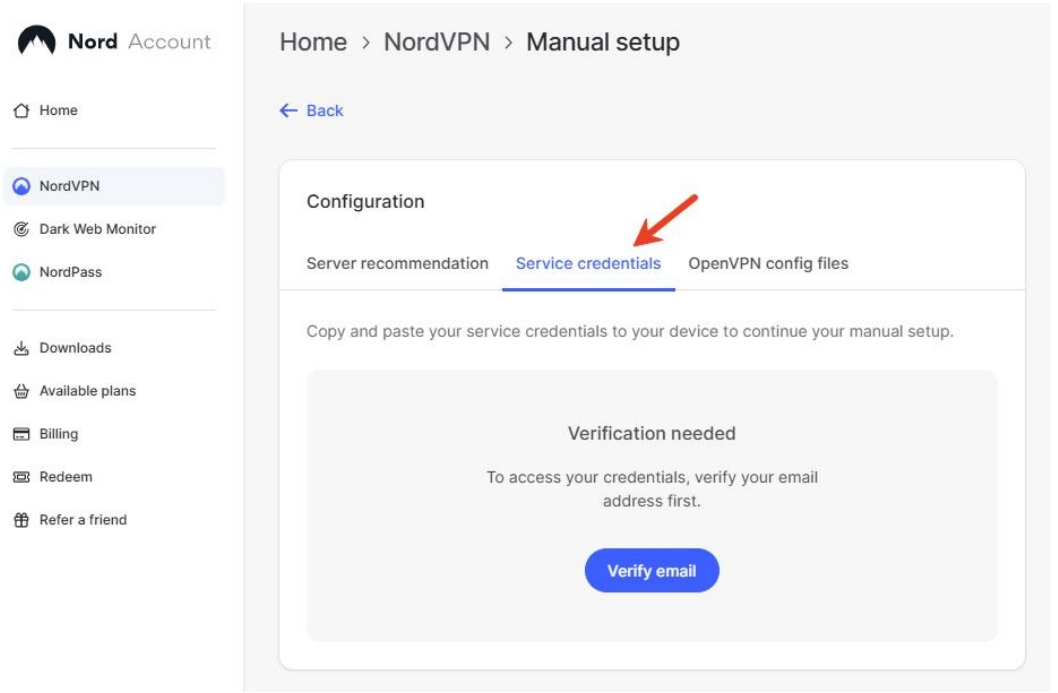


3. Log in to your router's web admin panel and navigate to **VPN** > **OpenVPN Client** > **NordVPN**. Input the service credentials (Note: It is NOT the login account email/password), then click **Save and Continue**.

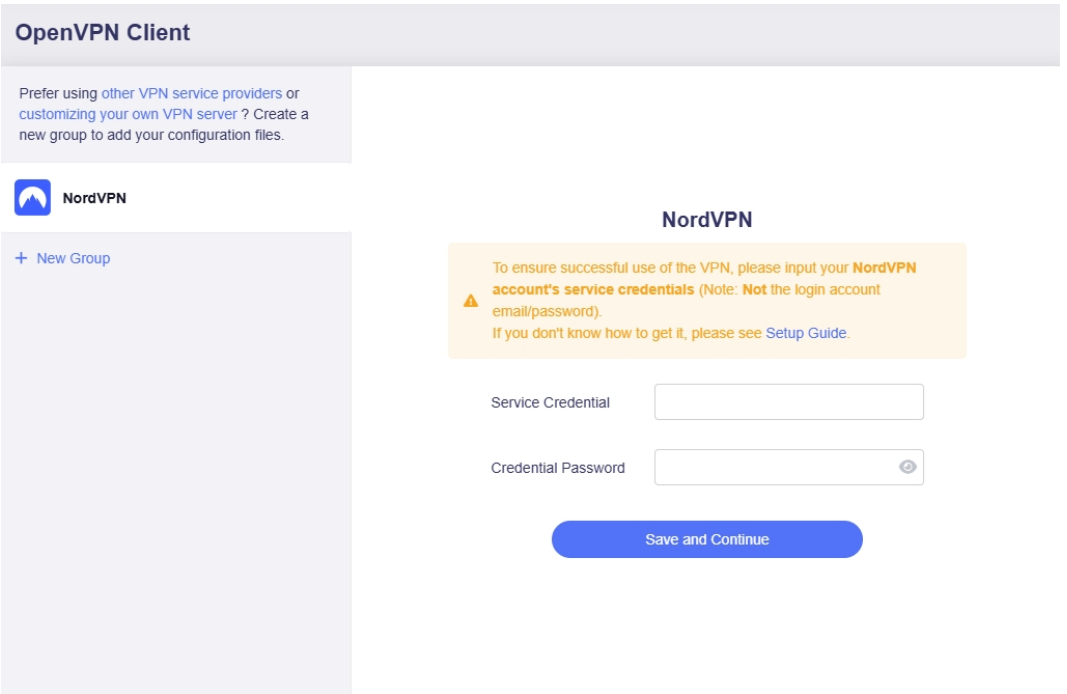

4. Select protocol, max server count of each location and locations, then click **Apply**.

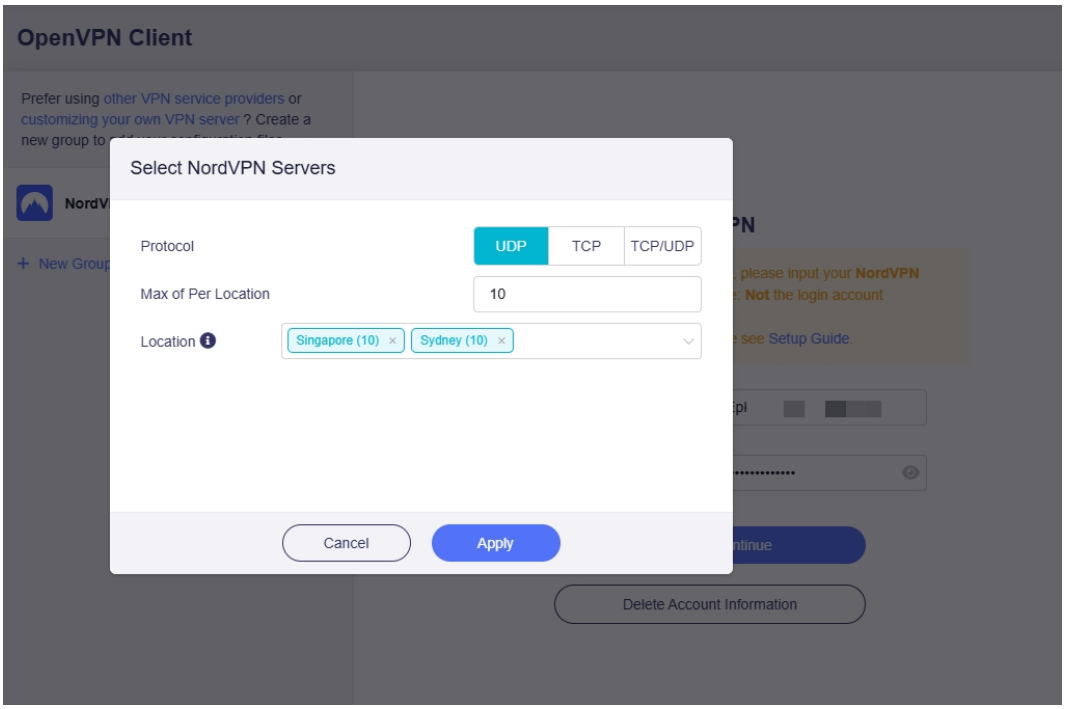


It will download configuration files.

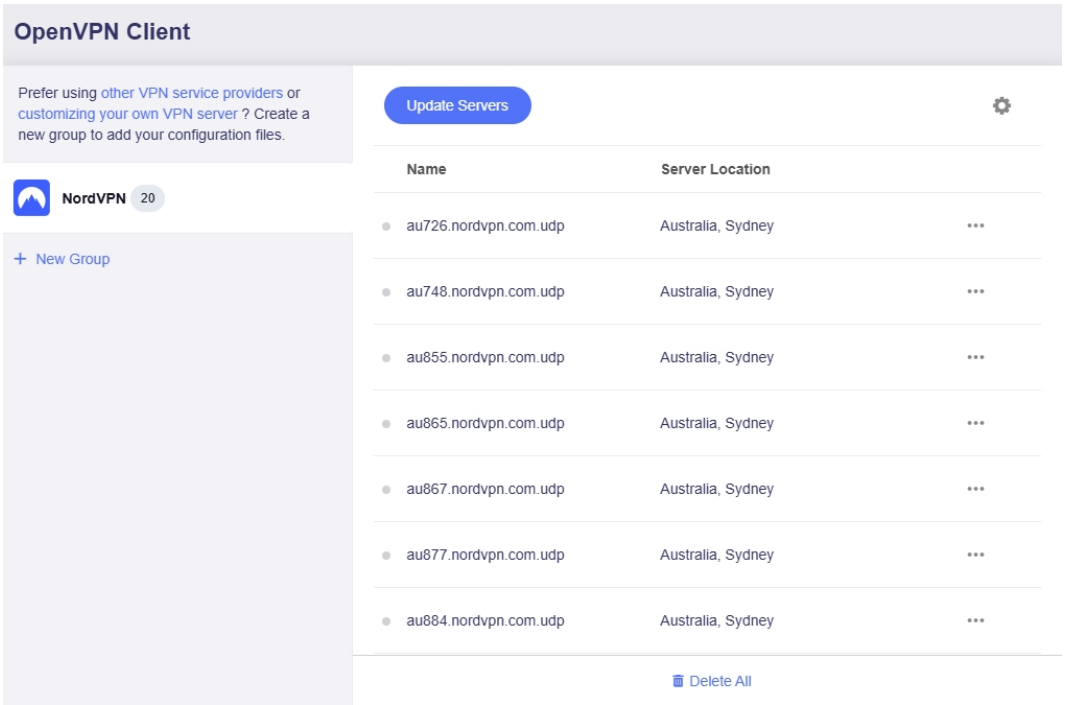


5. Start a connection.

   Select a server, and click the three-dot icon on the right to start a connection.

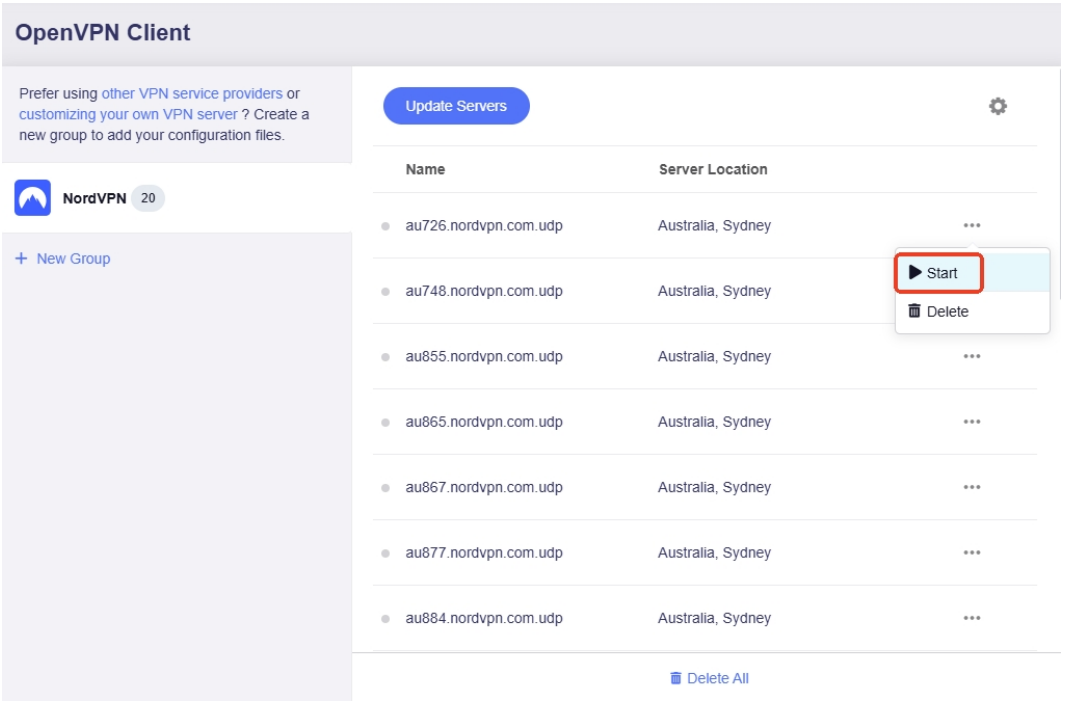


6. Once connected, a green dot will appear next to the configuration file.

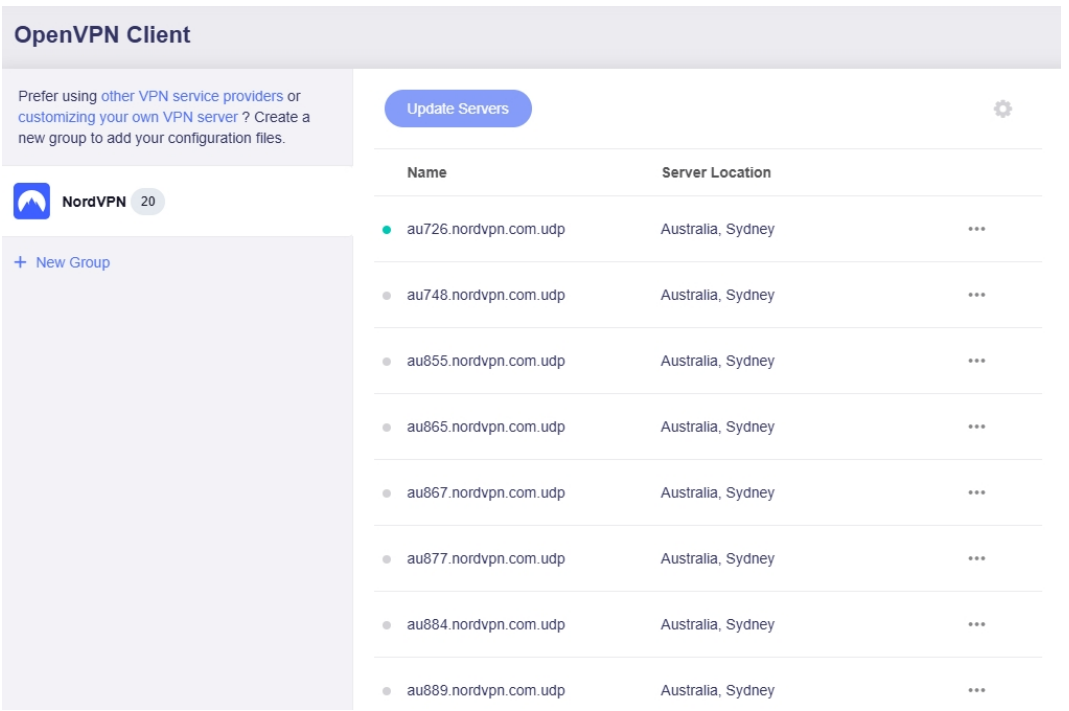

You can also check the VPN connection details on the **VPN Dashboard**.


7. Update servers.

   You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

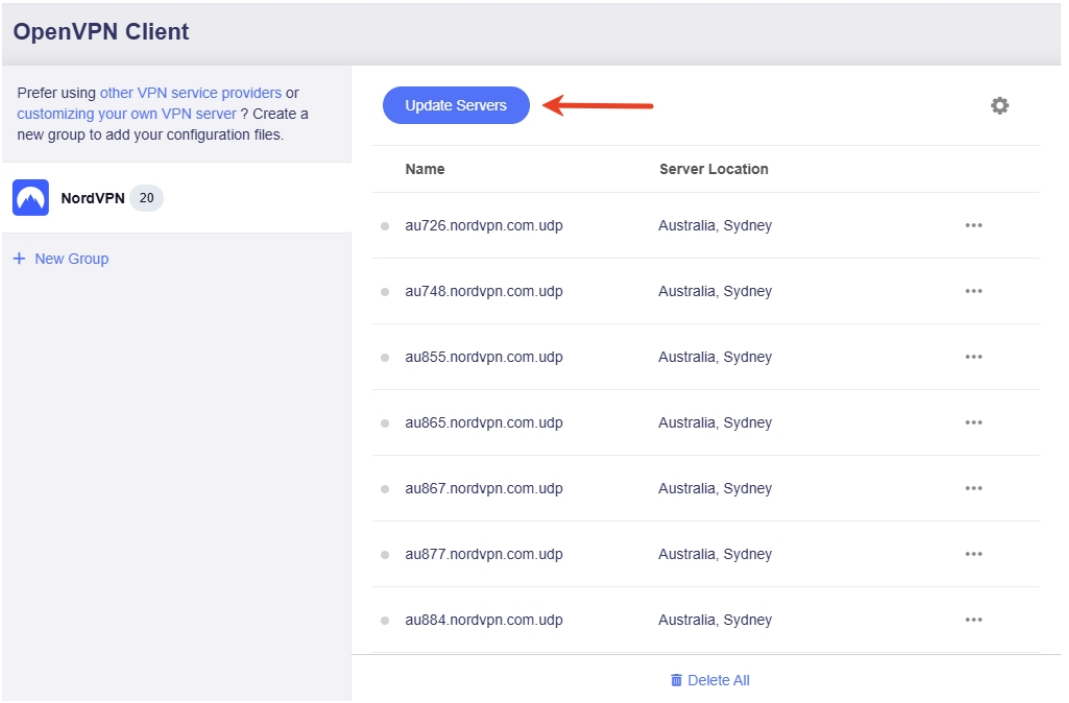


8. Edit credentials.

   Click the gear icon to edit your login credentials.

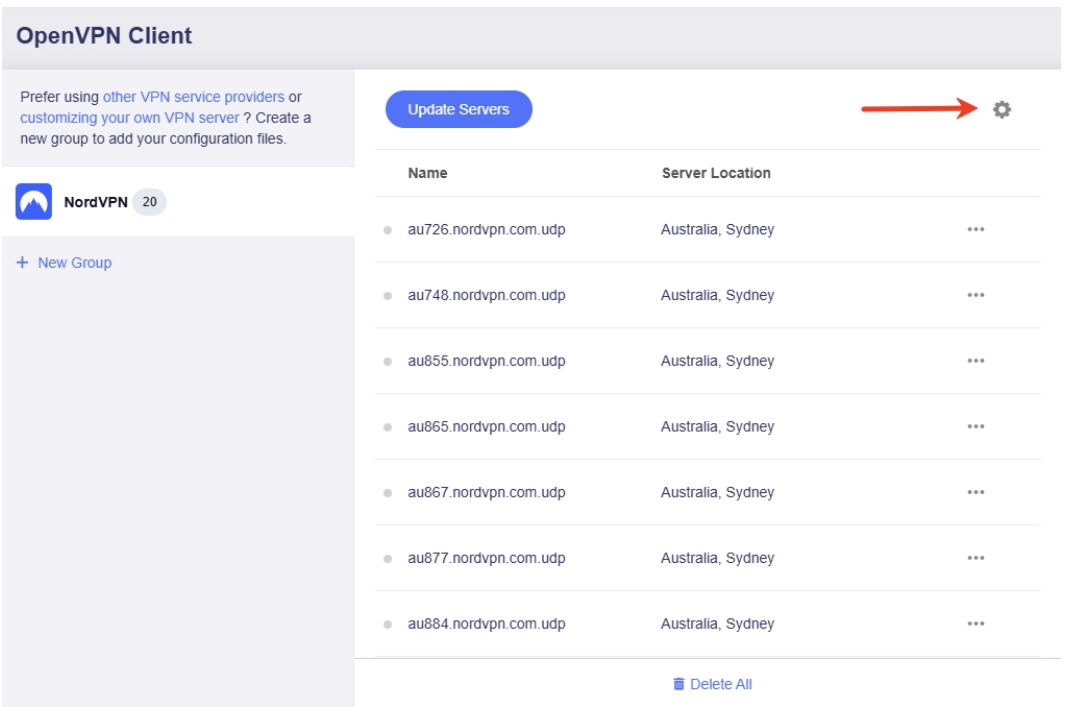

9. Delete all files.

   You can click **Delete All** to delete all configuration files with one click.

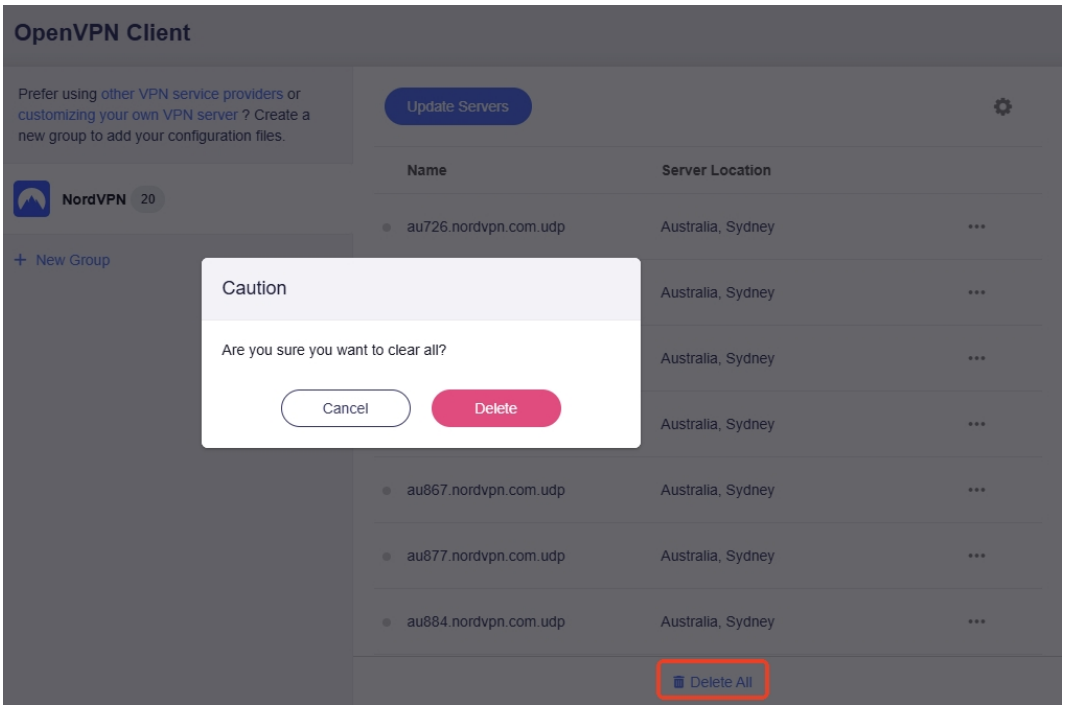

OpenVPN Client
Prefer using other VPN service providers or customizing your own VPN server ? Create a new group to add your configuration files.
NordVPN 20
+ New Group
Update Servers
Name
Server Location
au726.nordvpn.com.udp
Australia, Sydney
Australia, Sydney
Australia, Sydney
Australia, Sydney
au867.nordvpn.com.udp
Australia, Sydney
au877.nordvpn.com.udp
Australia, Sydney
au884.nordvpn.com.udp
Australia, Sydney
Delete All
Caution
Are you sure you want to clear all?
Cancel
Delete

11.1.3 Set Up OpenVPN Client Manually (for other providers)


If your OpenVPN service provider is not integrated into our admin panel, please first visit the official website of your subscribed service provider to obtain the configuration file. Then upload it to the router to set up an OpenVPN client.

In the following steps, we will use PIA (Private Internet Access) as an example.


1. Download a configuration file from Private Internet Access official website.
2. Log in to your router's web admin panel, navigate to **VPN** > **OpenVPN Client**, and click **Add Manually**.

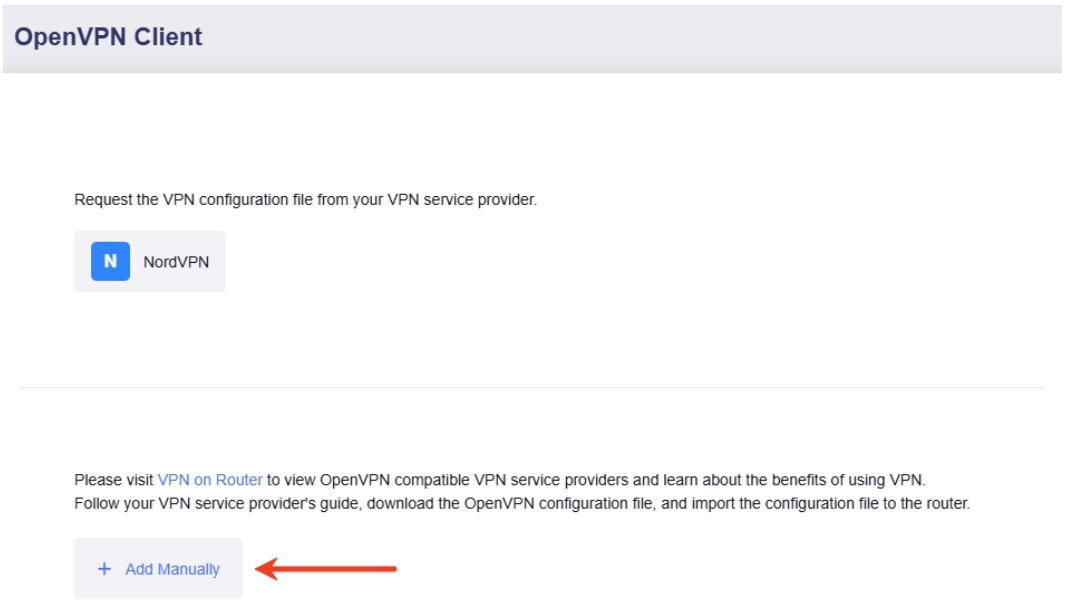


3. It will create a group on the left sidebar. Set a descriptive name for the group.

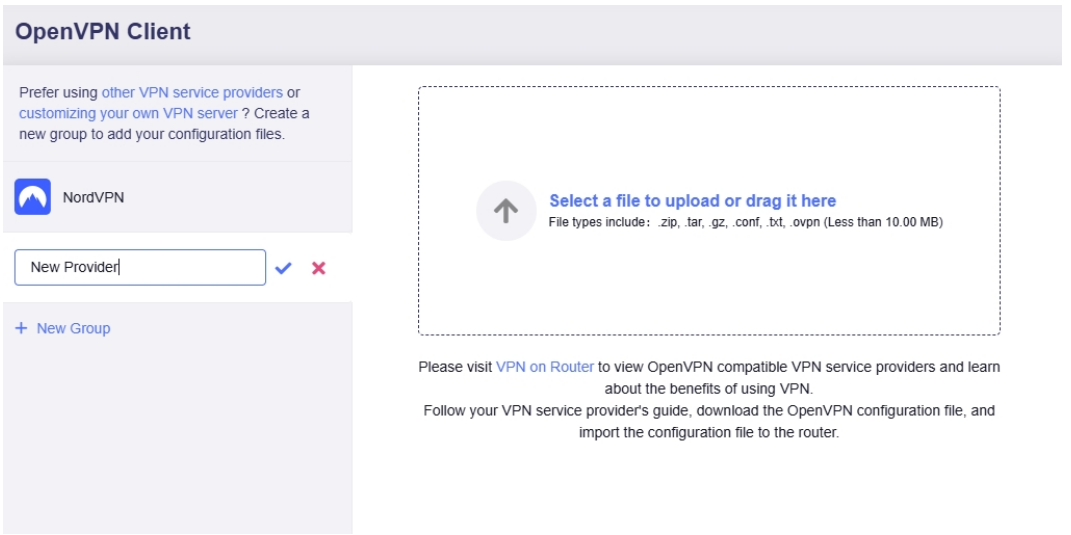


4. Upload your OpenVPN configuration file. Input the credentials if required, then click **Apply**.

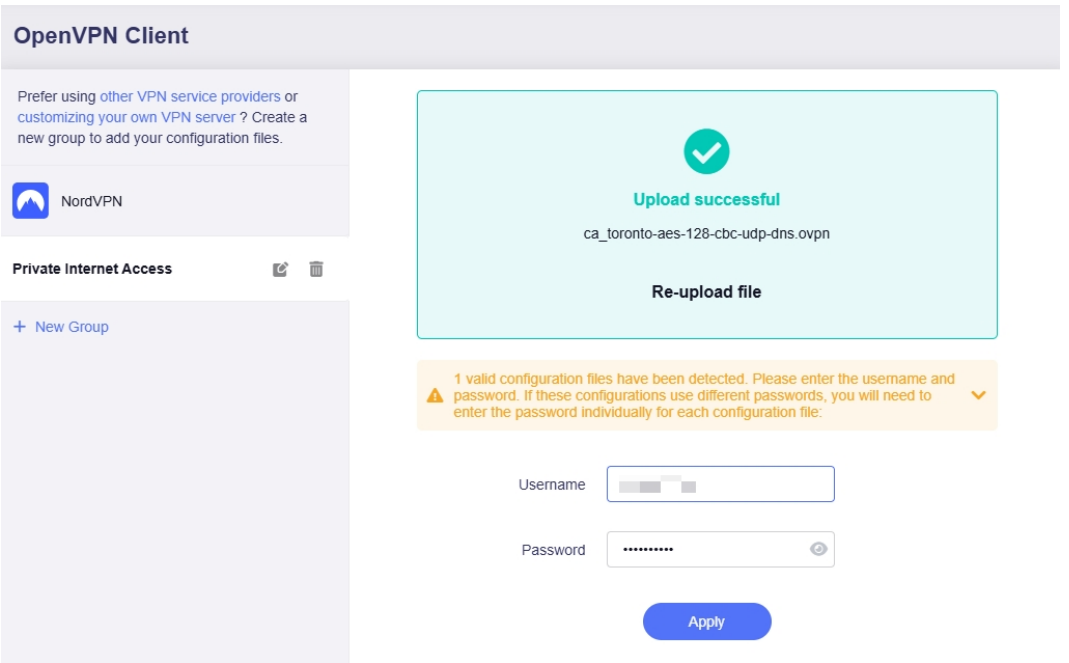


You will see the configuration file uploaded.

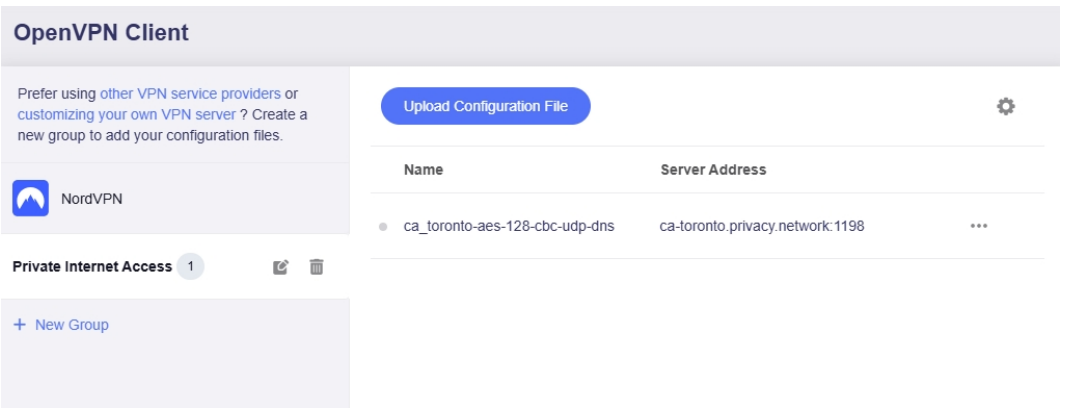

5. Click the three-dot icon on the right to start a connection.

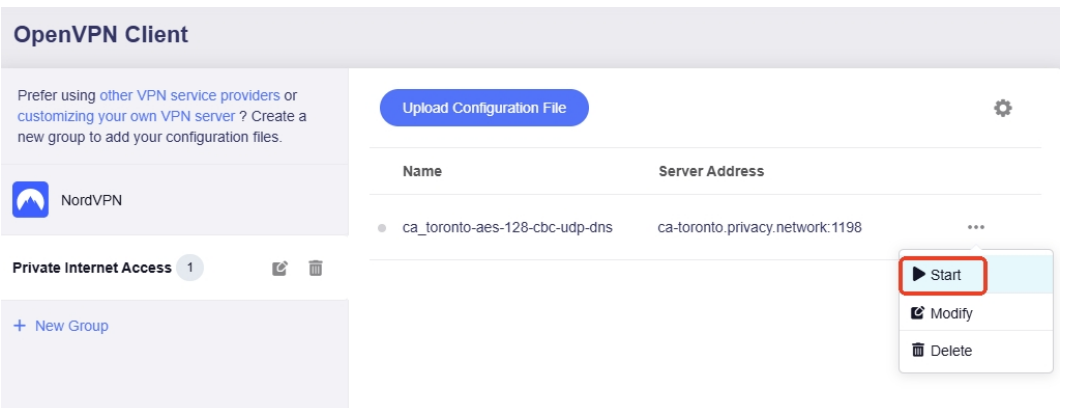

6. Once connected, a green dot will appear next to the configuration file.

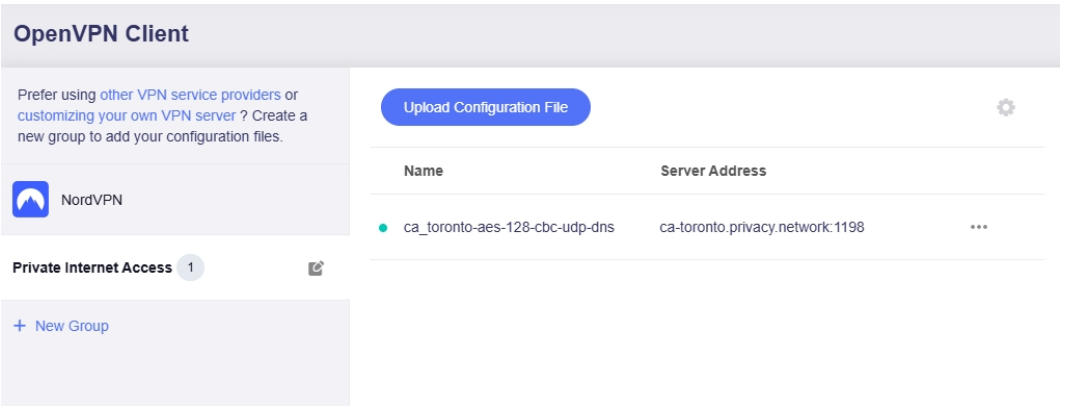

You can also check the VPN connection details on the **VPN Dashboard**.

11.2 Set Up WireGuard Client

You can set up WireGuard Client via the GL.iNet mobile app or the web admin panel.

- The mobile app integrates some WireGuard service providers, such as AzireVPN, Mullvad VPN, OVPN, StrongVPN, PIA VPN. You can set it up easily by entering the login credentials of the WireGuard service you subscribed to. Open the app and follow the on-screen instructions to set up.
- The web admin panel not only integrates some WireGuard service providers, but also provides an entry for manual configuration. You can either enter the credentials of your subscribed WireGuard service for quick setup, or manually upload a configuration file to complete the setup.

11.2.1 Preparation

First, ensure you have an active subscription with a VPN service provider that supports manual WireGuard configuration. See here for the WireGuard providers compatible with GL.iNet.


Next, select the corresponding WireGuard service provider below to quickly locate the step-by-step instructions.

- Set Up AzireVPN
- Set Up Hide.me
- Set Up IPVanish
- Set Up Mullvad
- Set Up NordVPN
- Set Up PIA (Private Internet Access)
- Set Up Surfshark
- Set Up WireGuard Client Manually (for other providers)


11.2.2 Set Up AzireVPN

Follow the steps below to set your router as an AzireVPN client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **AzireVPN**.
2. Input Username and Password, then click **Save and Continue**. It will generate configuration files for each server.

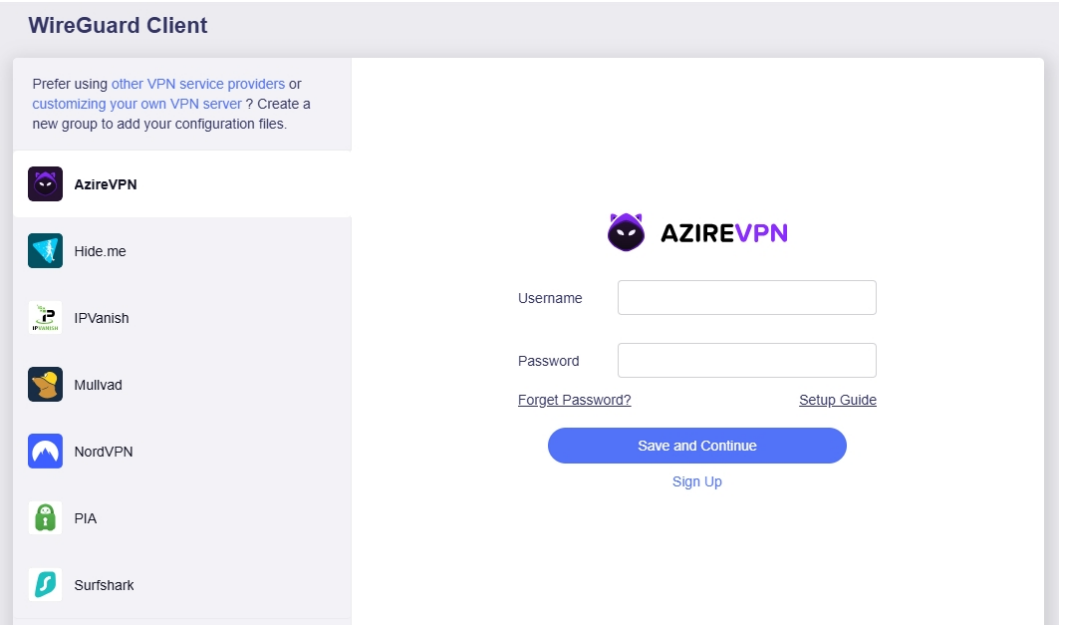

3. Select a preferred server, and click the three-dot icon on the right to start a connection.

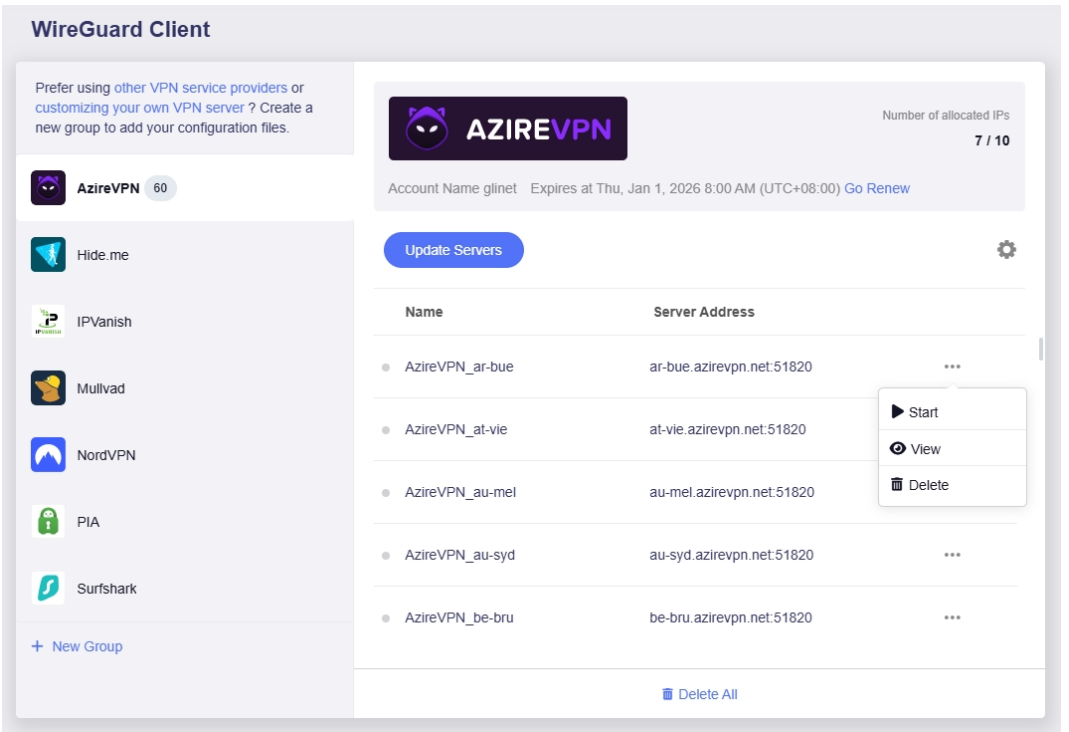


4. Once connected, a green dot will appear next to the configuration file.

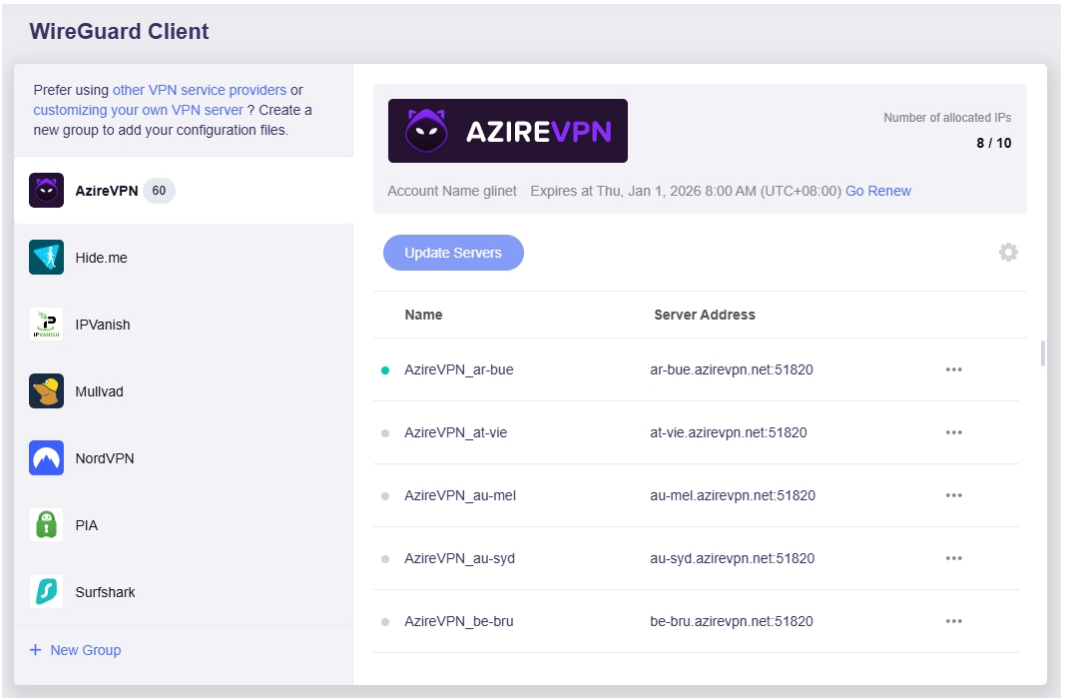

You can also check the VPN connection details on the **VPN Dashboard**.


5. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

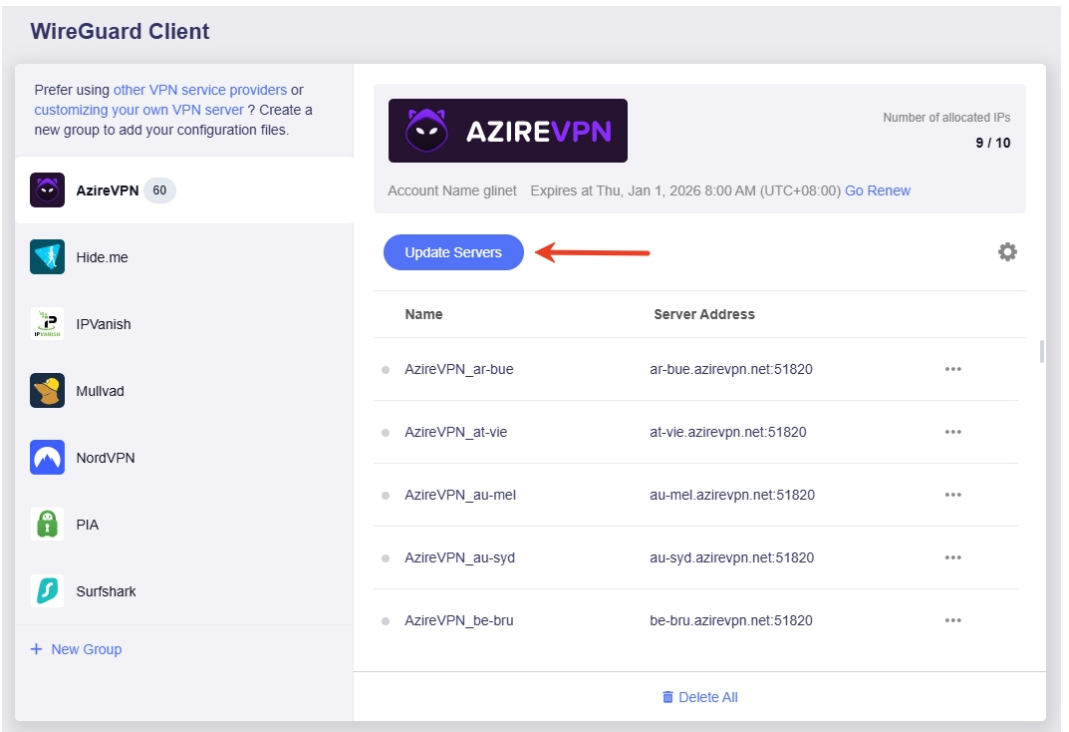


6. Edit credentials or logout.

Click the gear icon to edit your login credentials or log out.

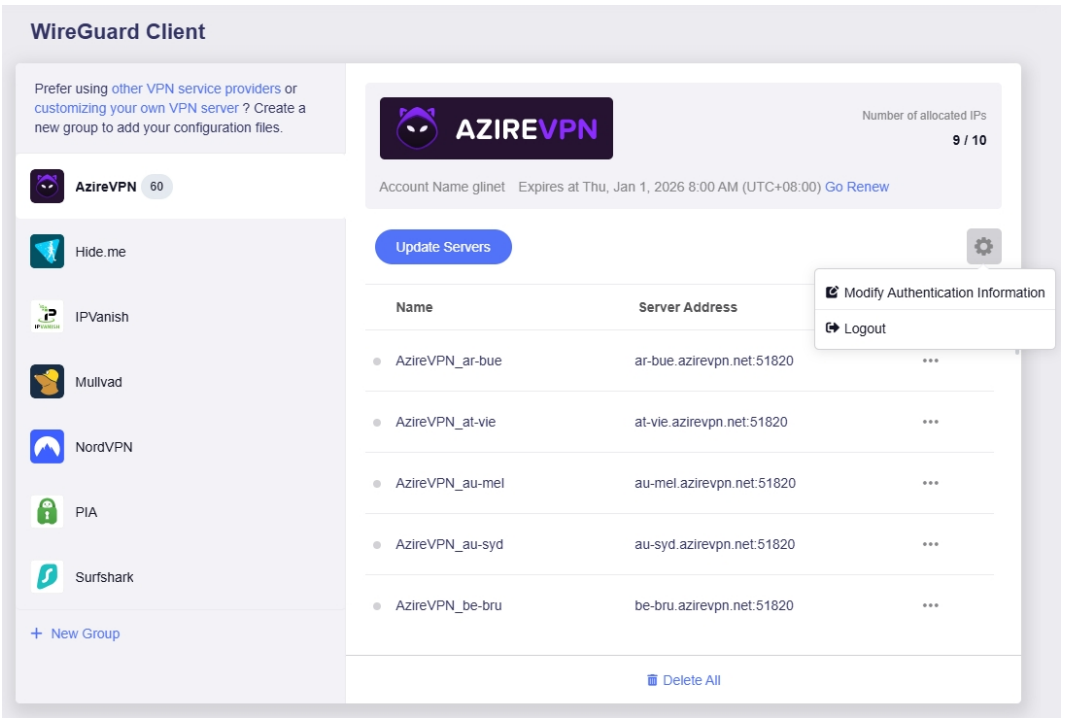


7. Go renew.

If you click **Go Renew**, you will be re-directed to the official website to renew your subscription.

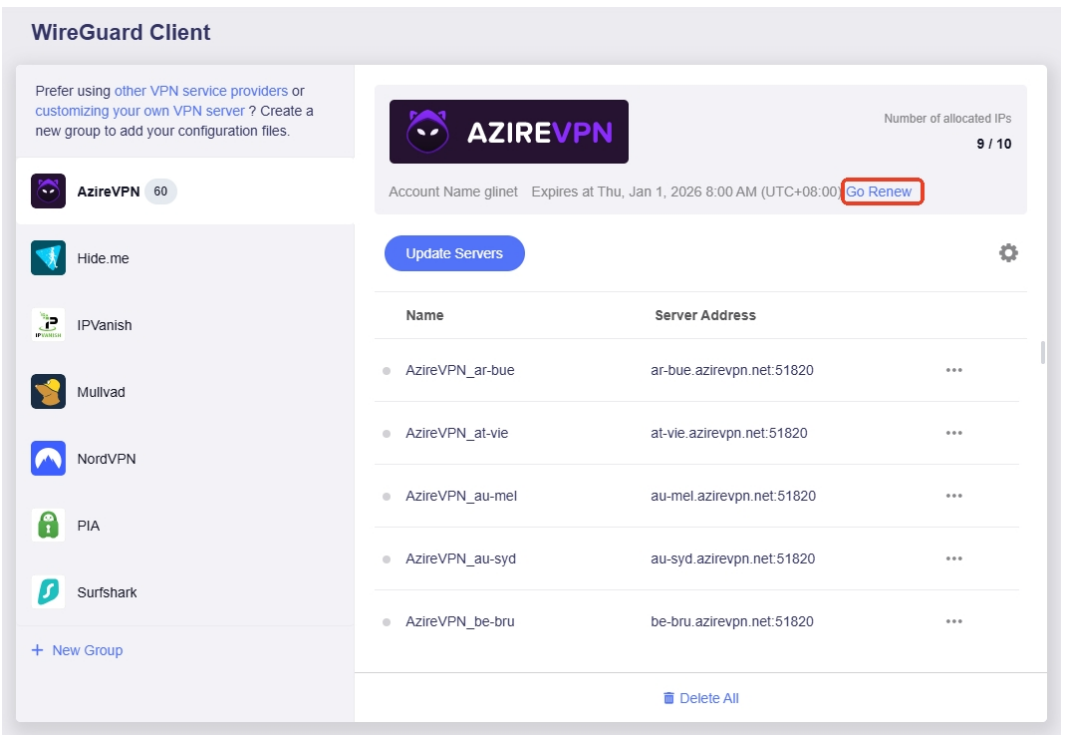

8. Delete all files.


You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

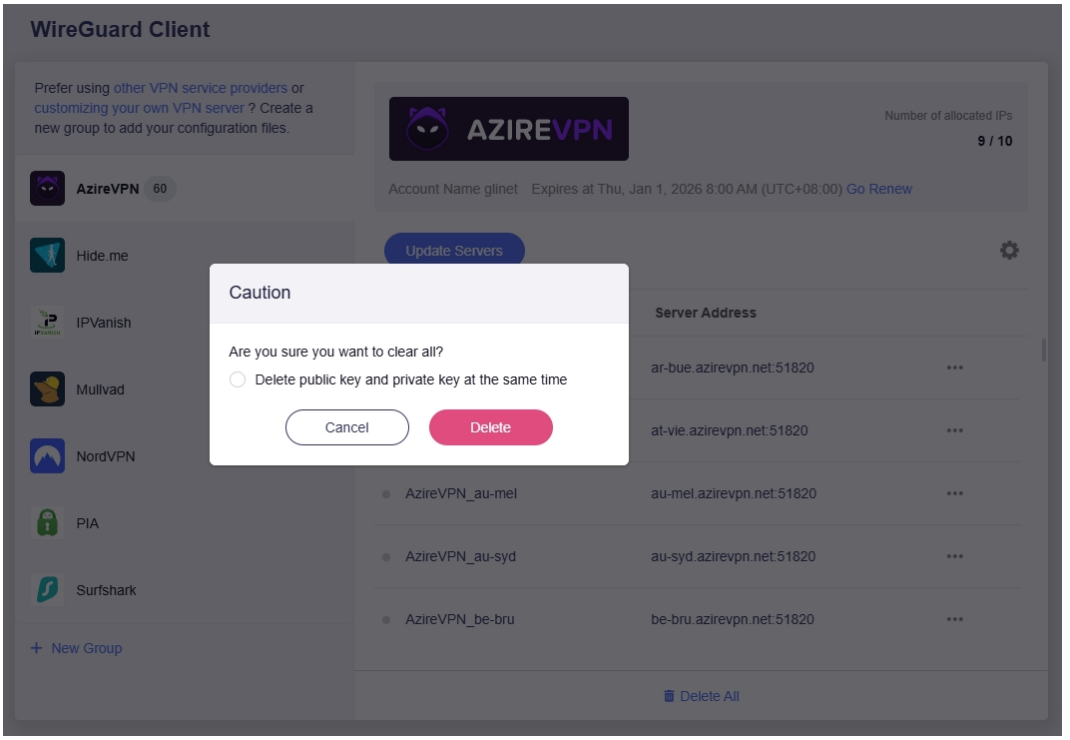


11.2.3 Set Up Hide.me

Follow the steps below to set your router as a Hide.me client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **Hide.me**.
2. Input Username and Password, then click **Save and Continue**. It will generate configuration files for each server.

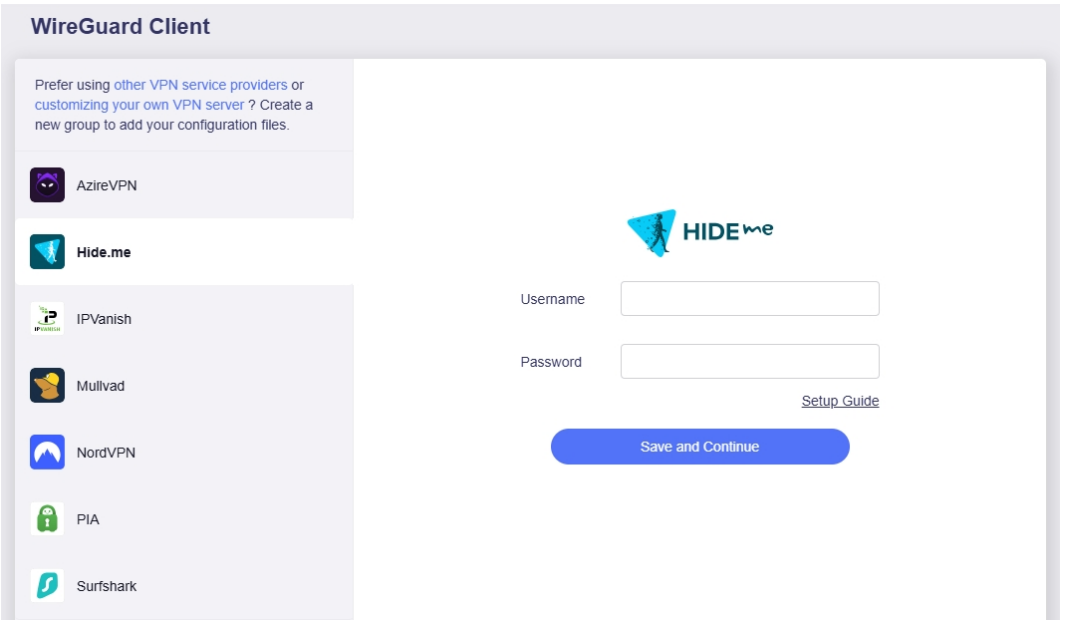

3. Select a preferred server, and click the three-dot icon on the right to start a connection.

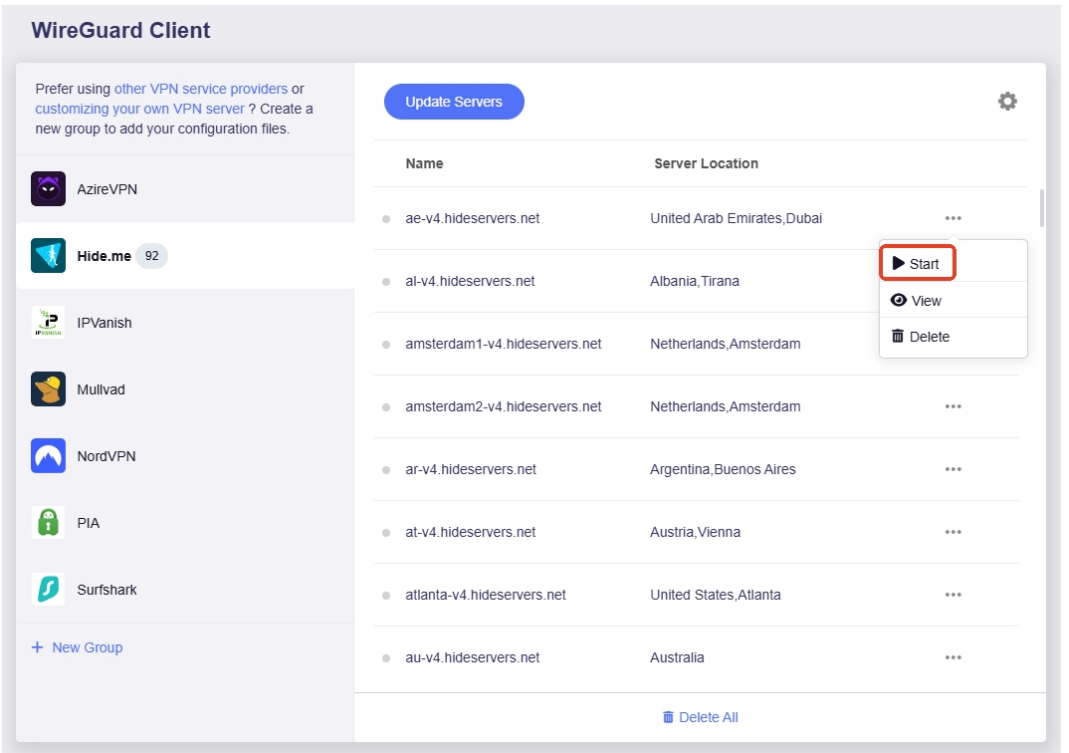


4. Once connected, a green dot will appear next to the configuration file.

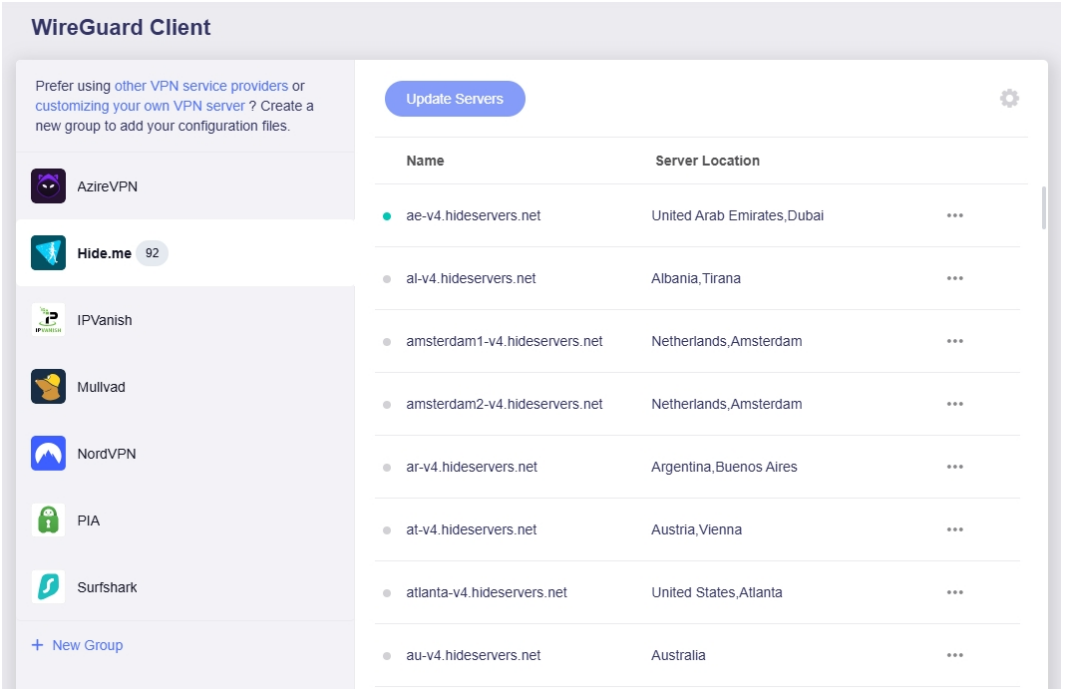

You can also check the VPN connection details on the **VPN Dashboard**.


5. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

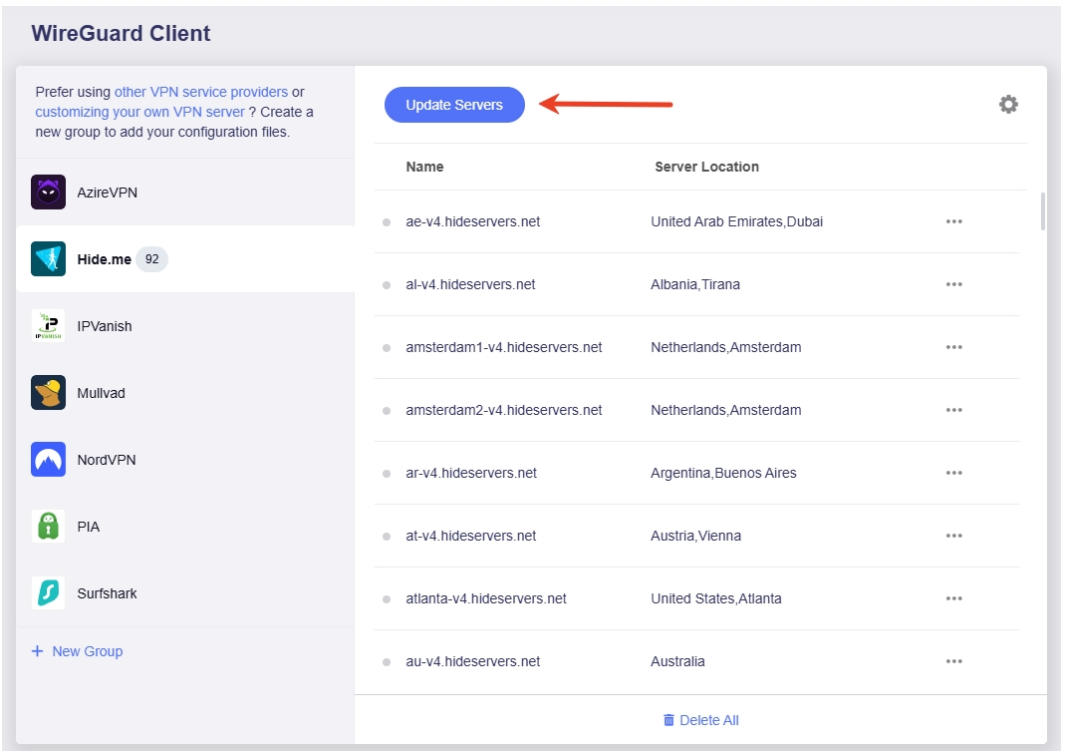


6. Edit credentials or logout.

Click the gear icon to edit your login credentials or log out.

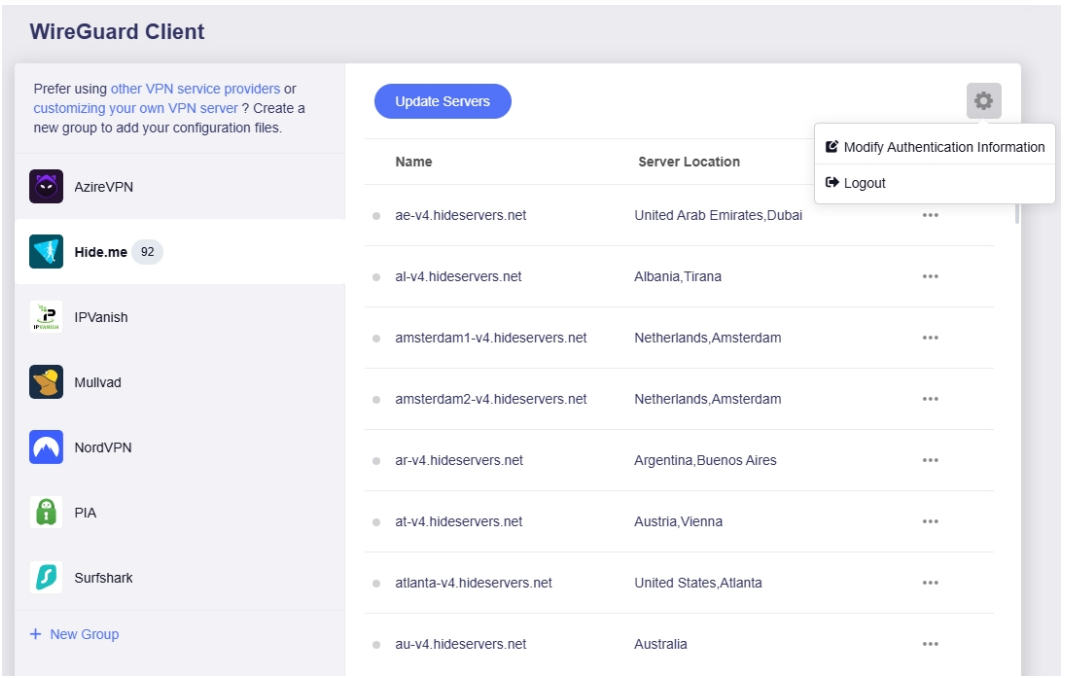

7. Delete all files.


You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

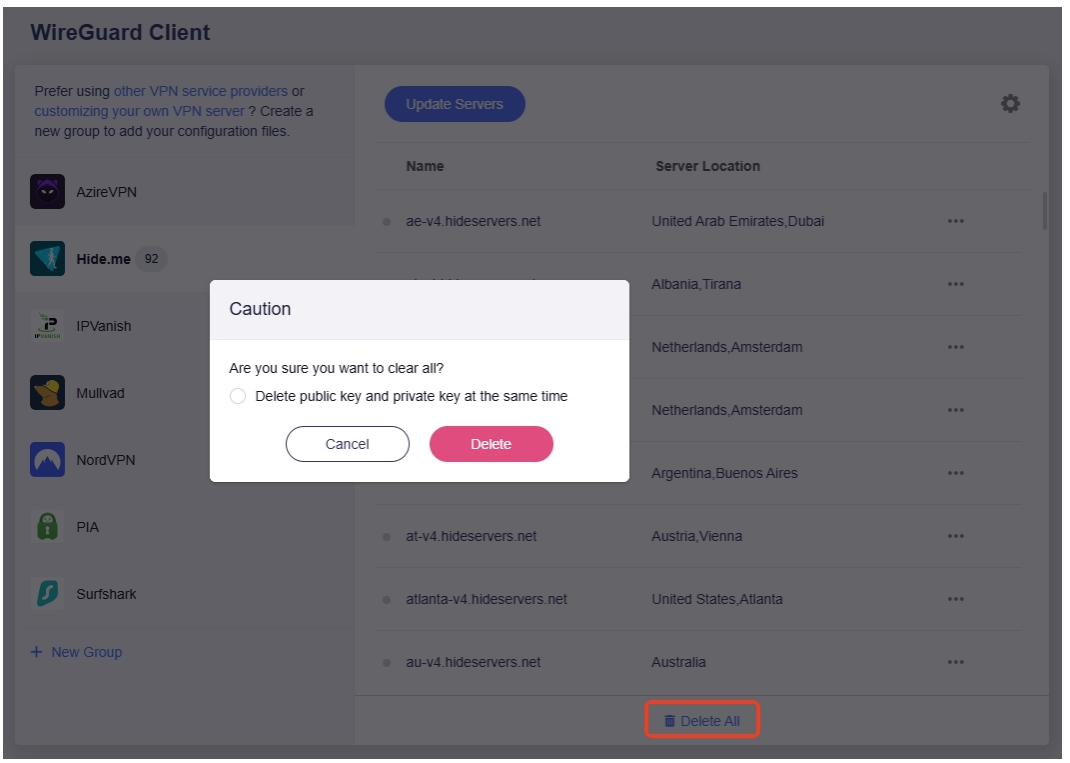


11.2.4 Set Up IPVanish

Follow the steps below to set your router as an IPVanish client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **IPVanish**.
2. Input Username and Password, then click **Save and Continue**.

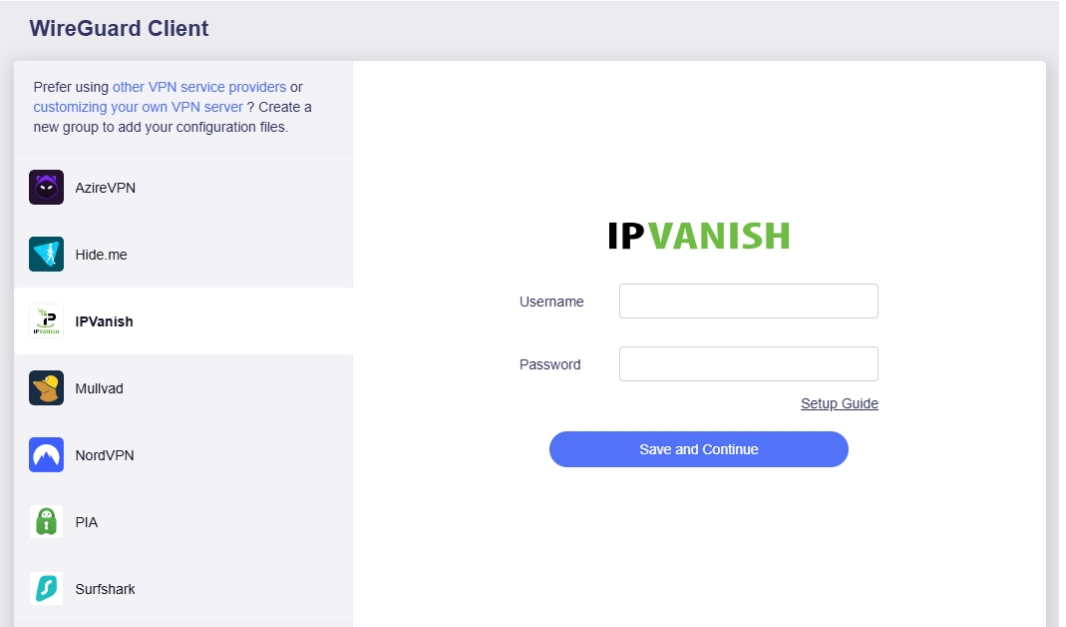


3. Select the server(s) you want to connect to, and click **Apply**.

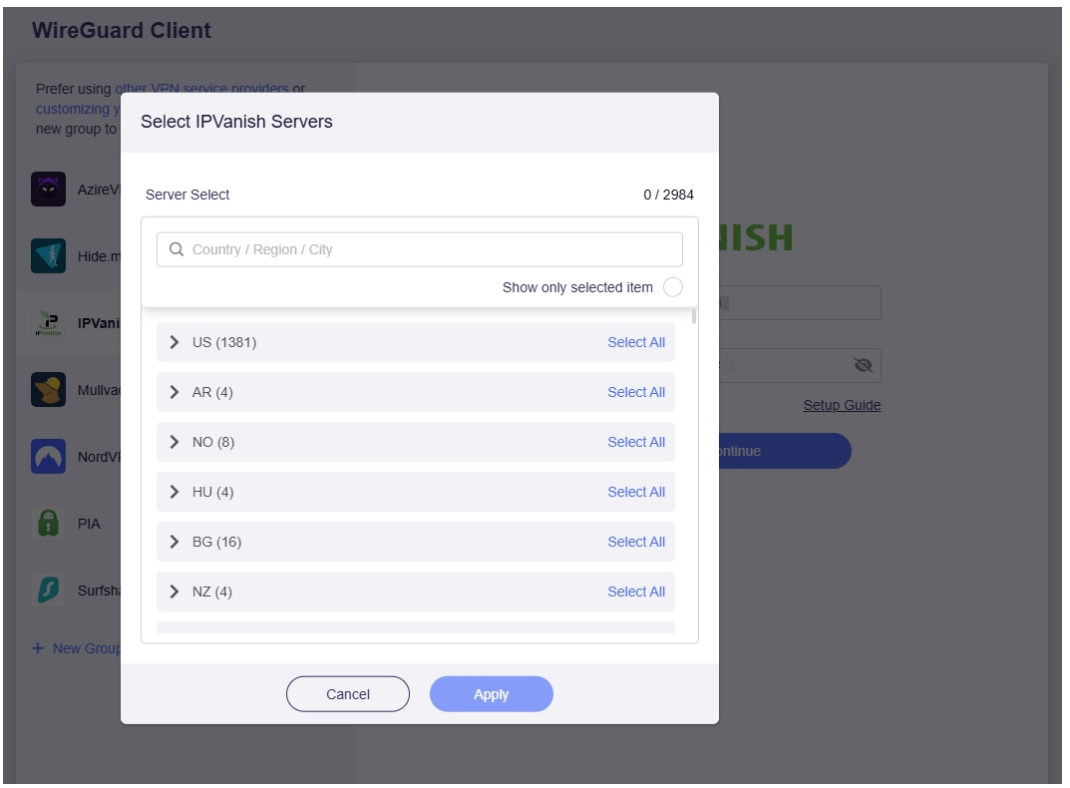

4. Select a preferred server, and click the three-dot icon on the right to start a connection.

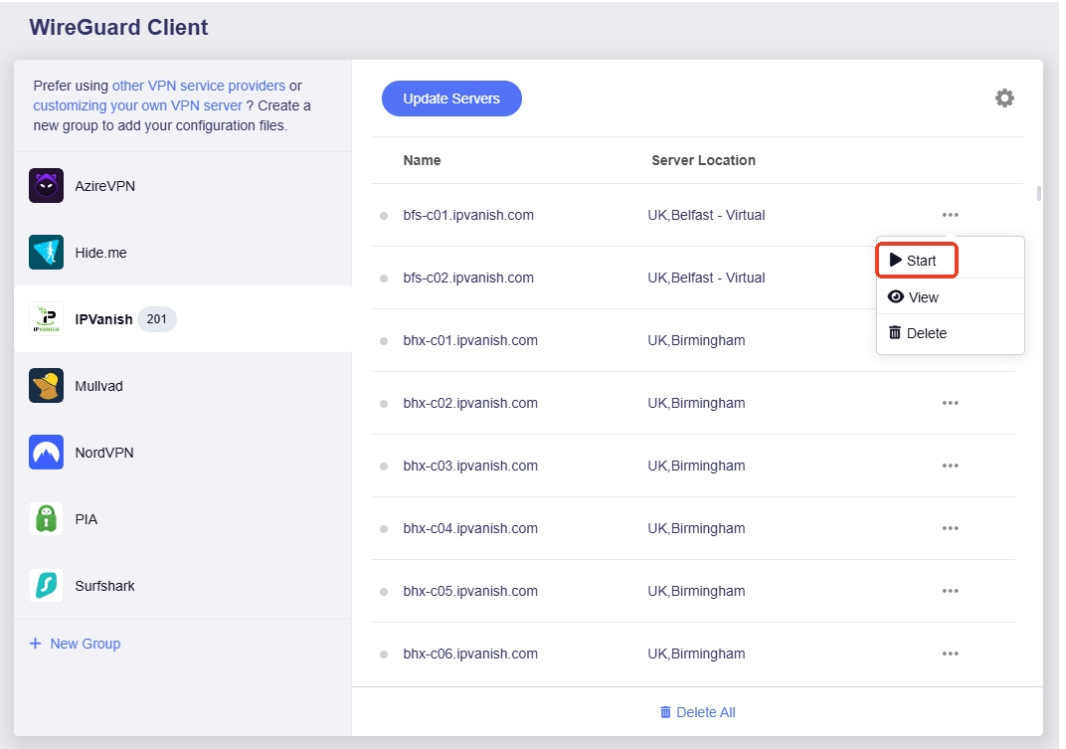


5. Once connected, a green dot will appear next to the configuration file.

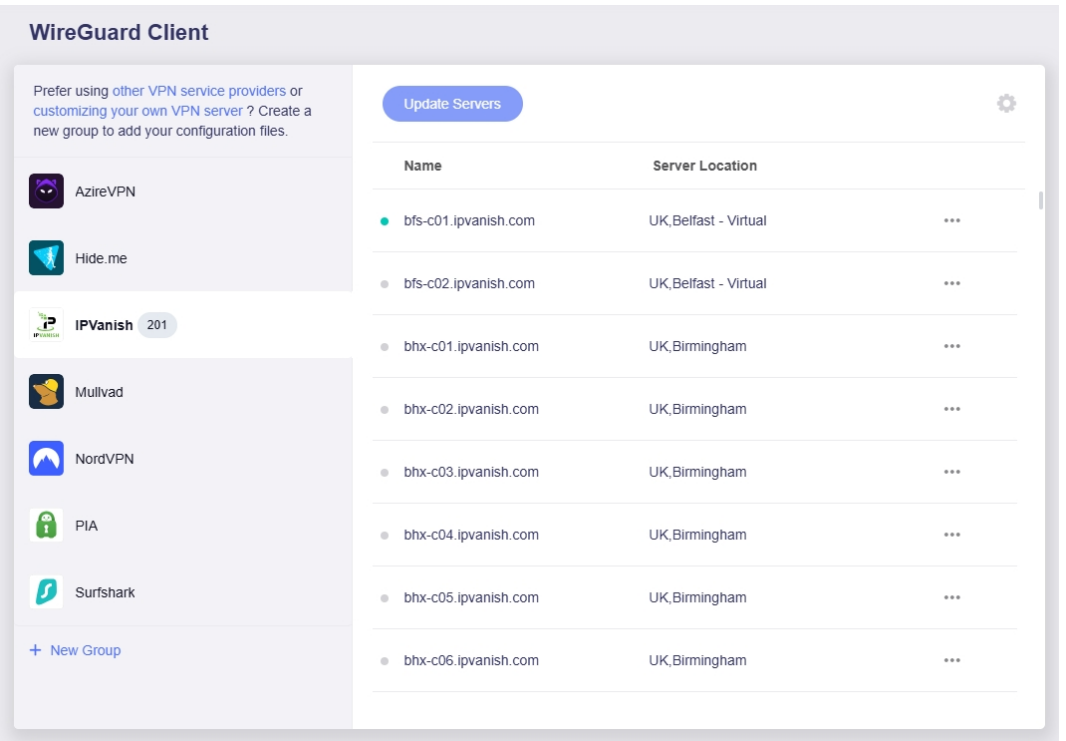

You can also check the VPN connection details on the **VPN Dashboard**.


6. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

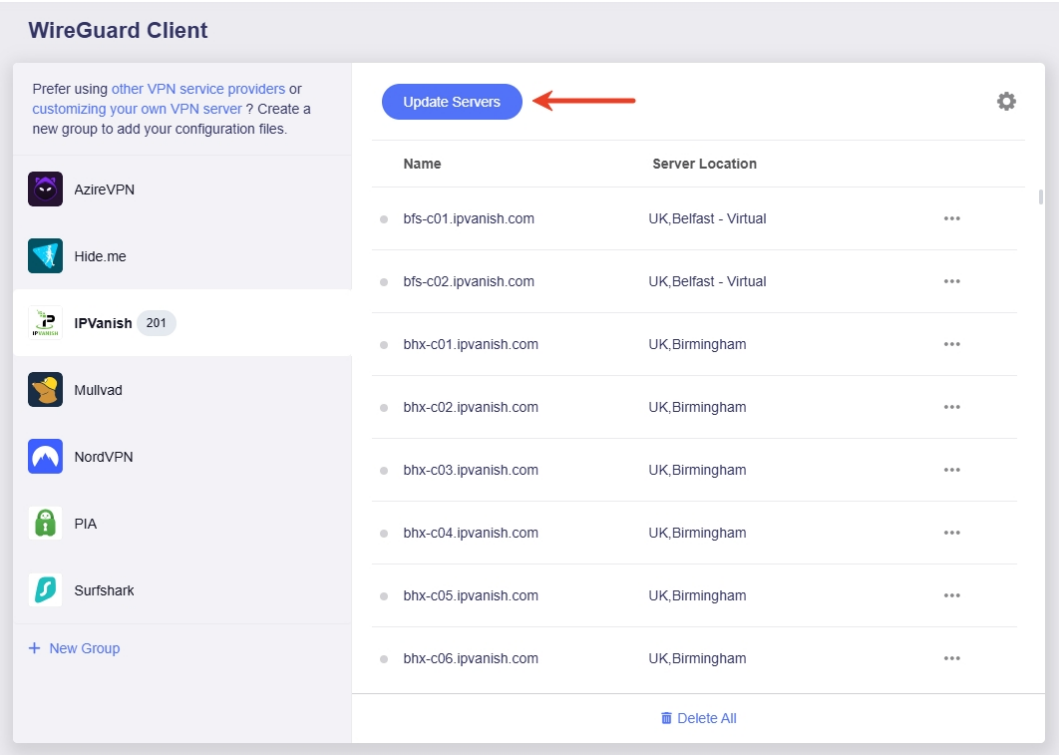


7. Edit credentials or logout.

   Click the gear icon to edit your login credentials or log out.

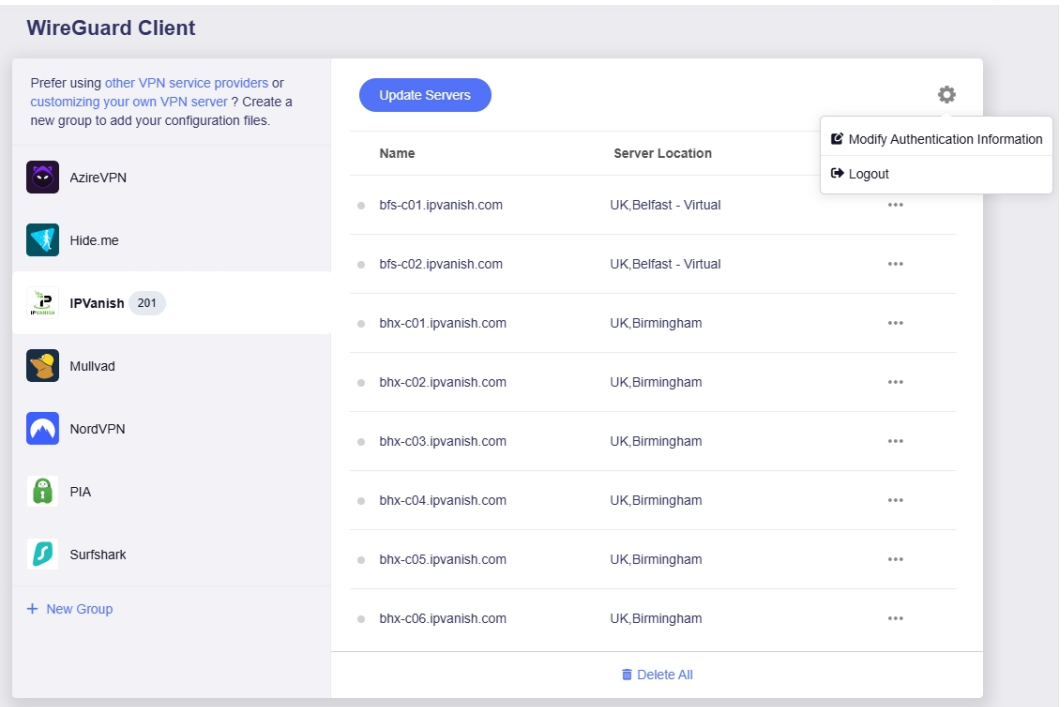

8. Delete all files.


You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

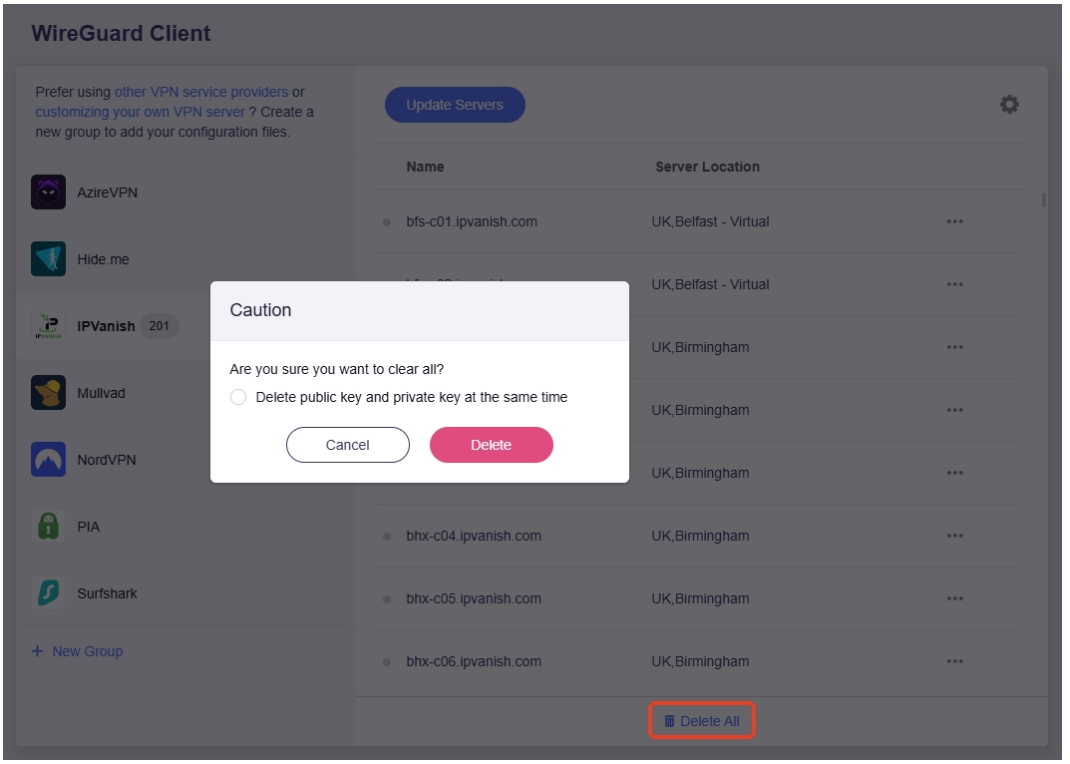


11.2.5 Set Up Mullvad

Follow the steps below to set your router as a Mullvad client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **Mullvad**.
2. Input Username and Password, then click **Save and Continue**.

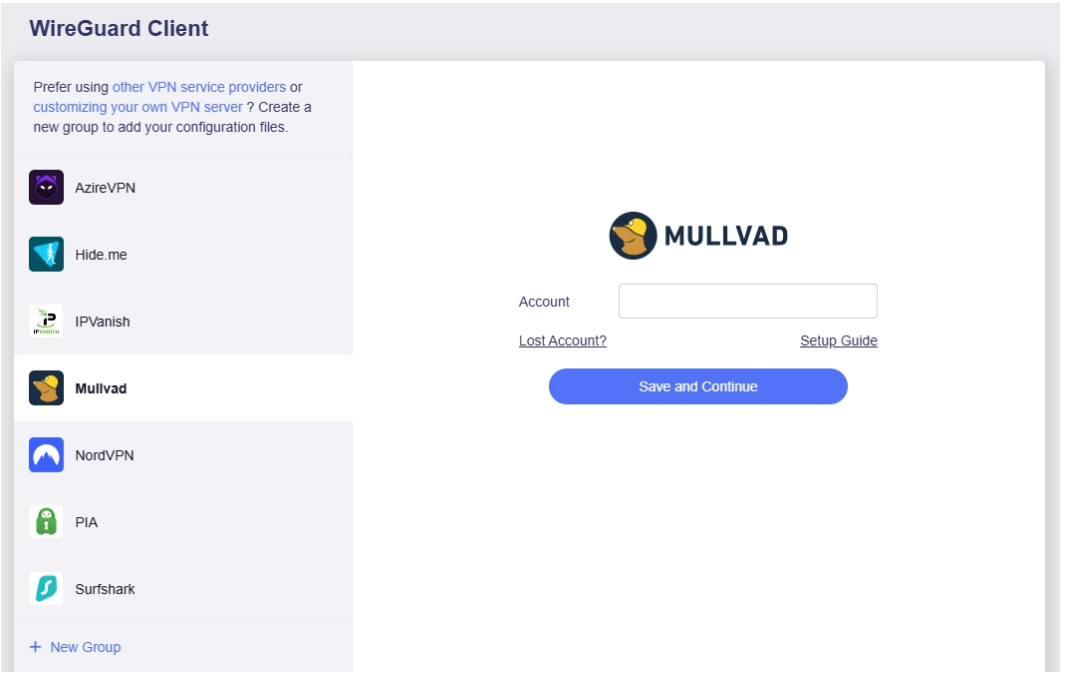


3. Select the server(s) you want to connect to, and click **Apply**.

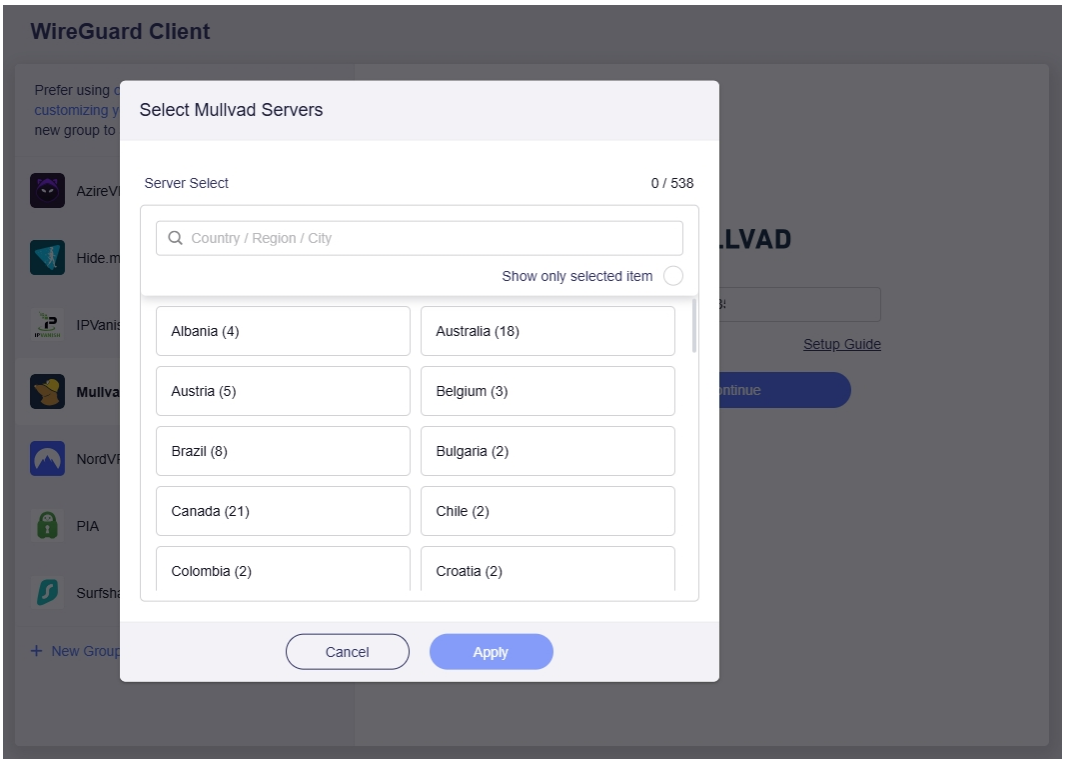

4. Select a preferred server, and click the three-dot icon on the right to start a connection.

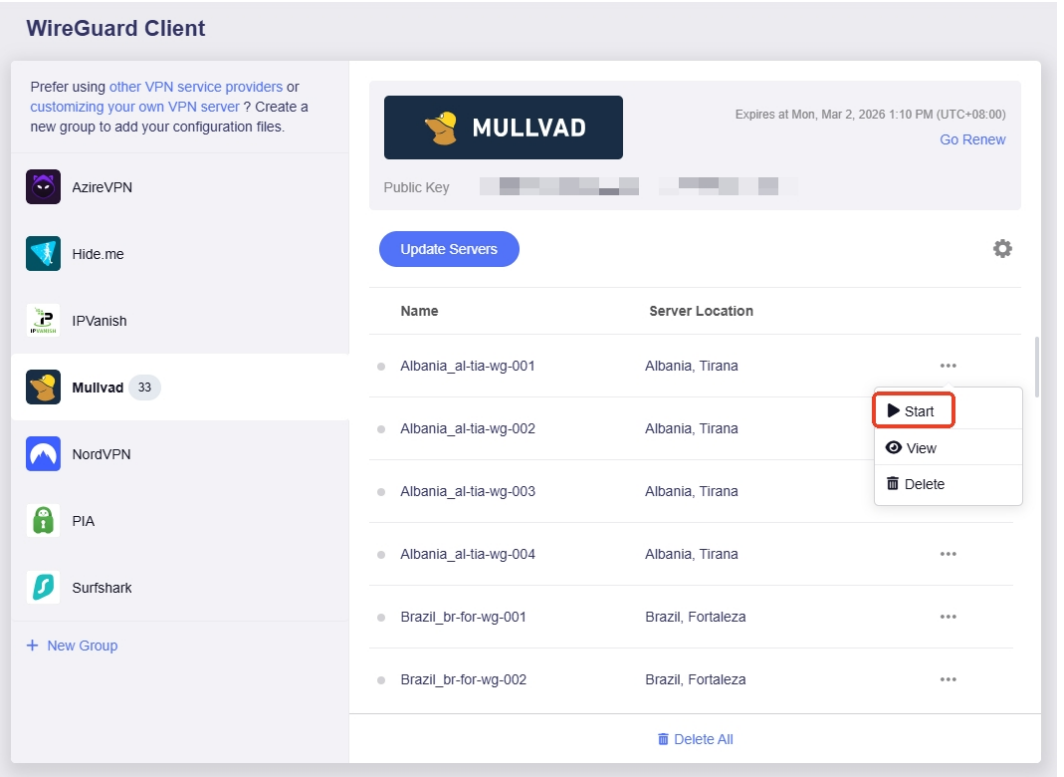


5. Once connected, a green dot will appear next to the configuration file.

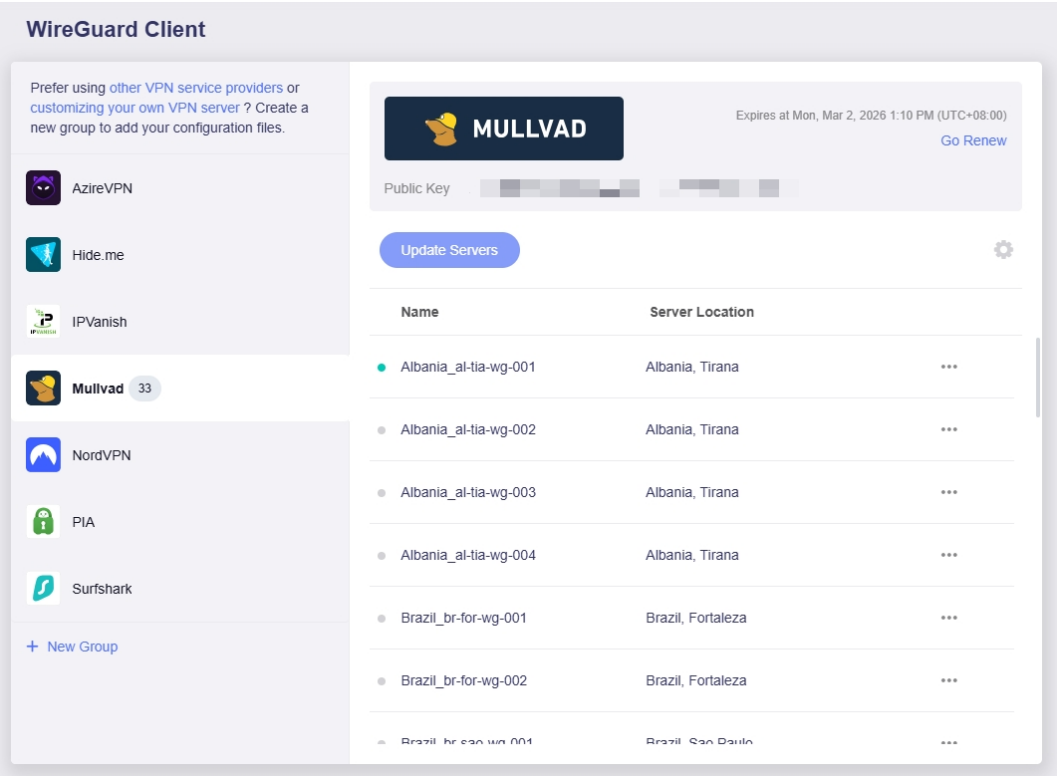

You can also check the VPN connection details on the **VPN Dashboard**.


6. Update servers.

   You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

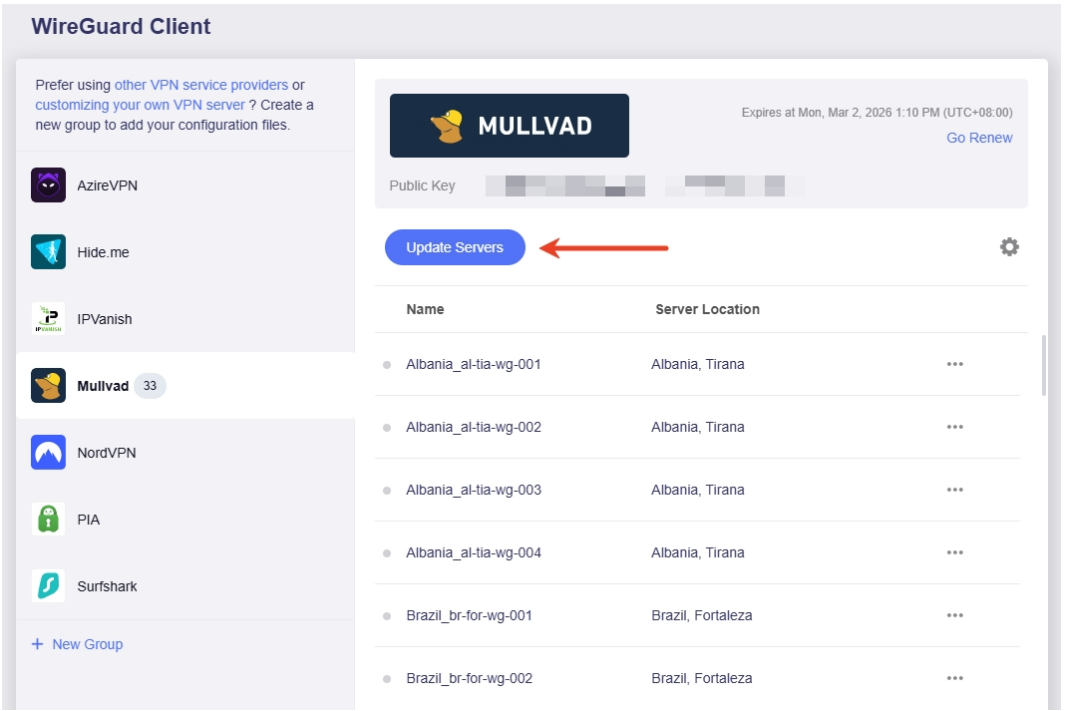


7. Edit credentials or logout.

   Click the gear icon to edit your login credentials or log out.

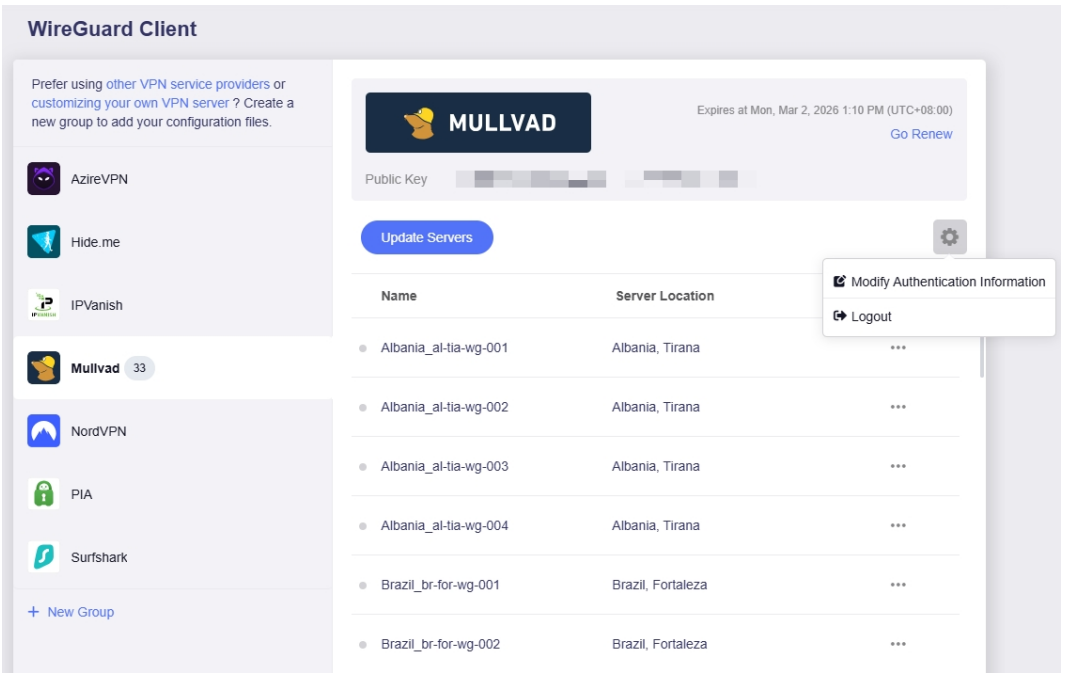


8. Go renew.

If you click **Go Renew**, you will be re-directed to the official website to renew your subscription.

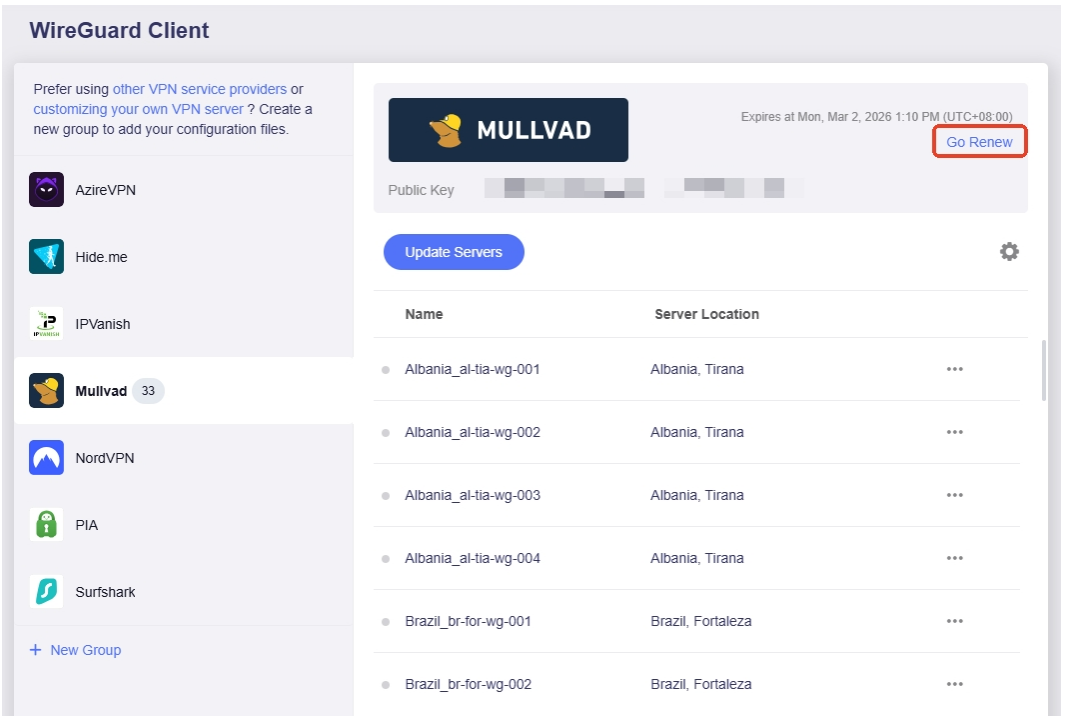

9. Delete all files.


   You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

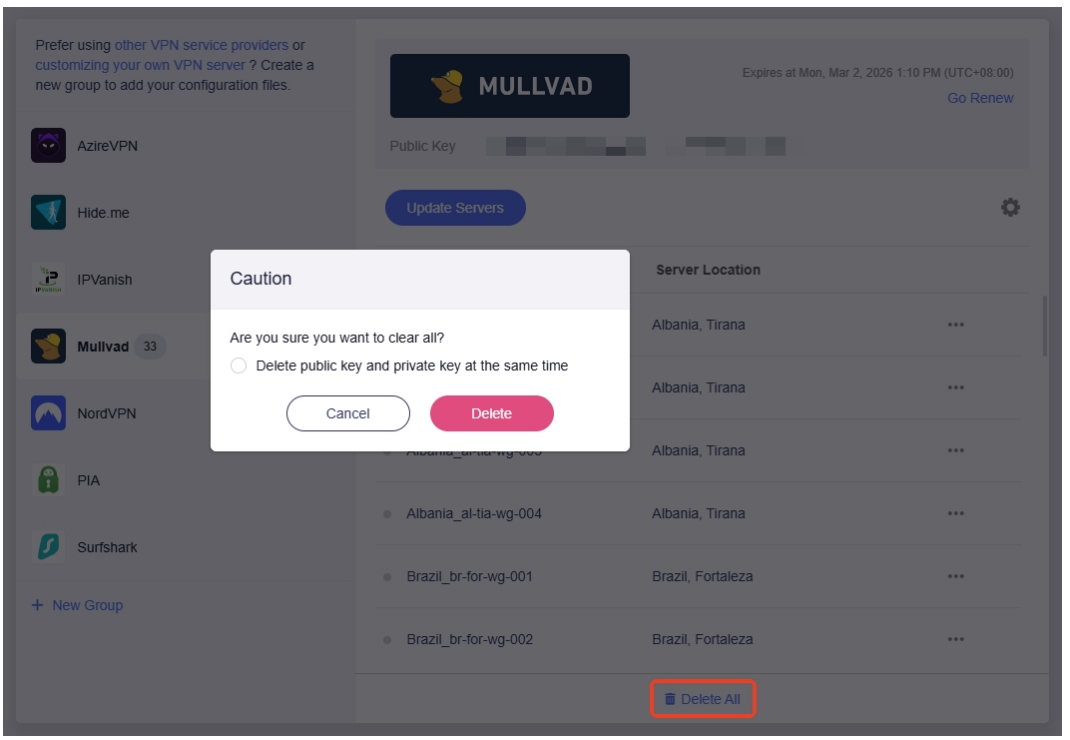


11.2.6 Set Up NordVPN

Follow the steps below to set your router as a NordVPN client.


1. Log in to your NordVPN web account here.
2. On the Nord Dashboard, click **NordVPN**, then click **Set up NordVPN manually**.

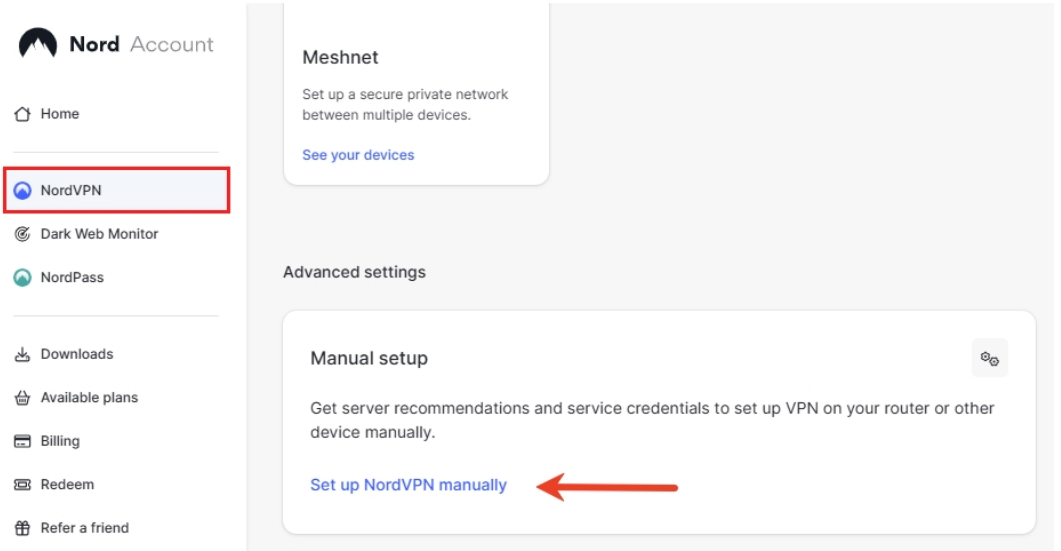


You will find the **Access Token**. Create an access token and copy for later use.

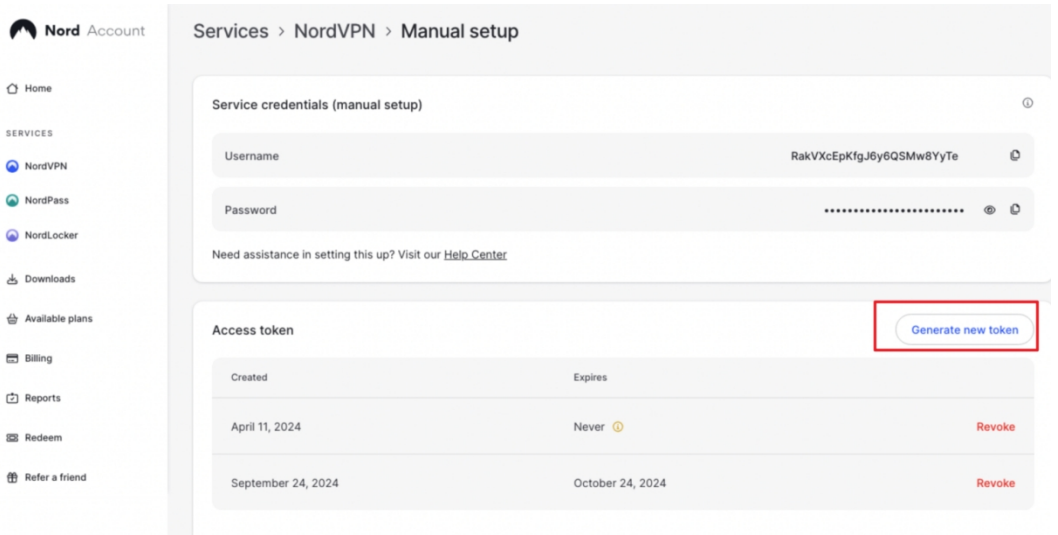


3. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **NordVPN**.
4. Input token, and click **Save and Continue**.

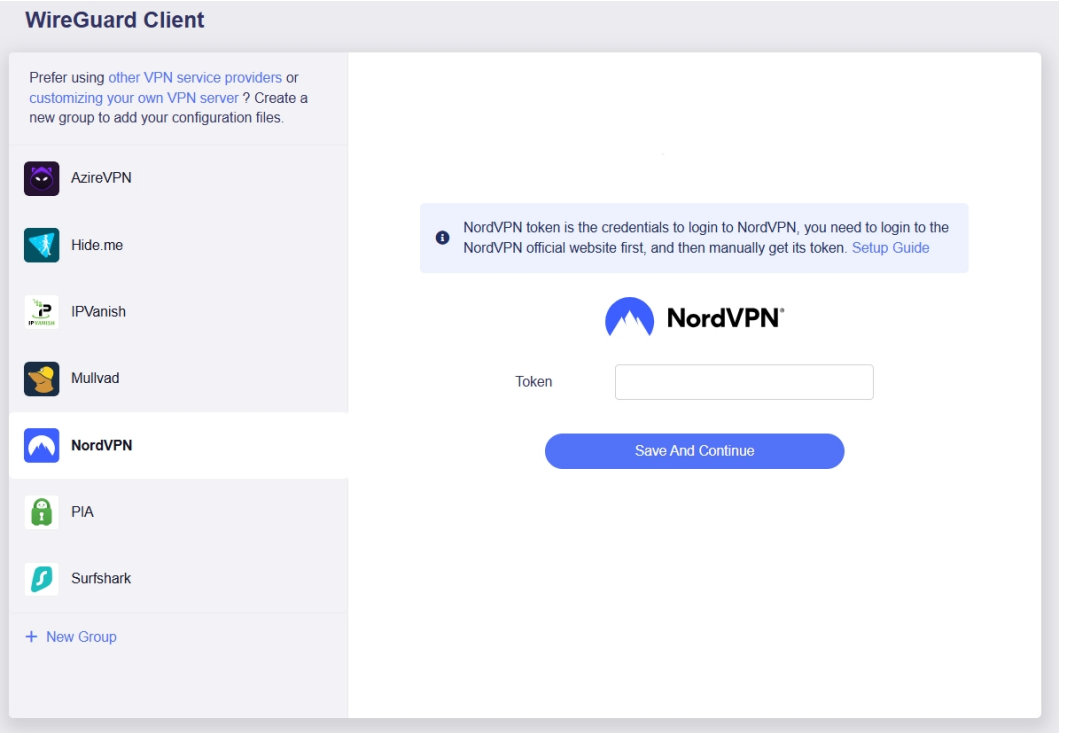


5. Select the server(s) you want to connect to, and click **Apply**.

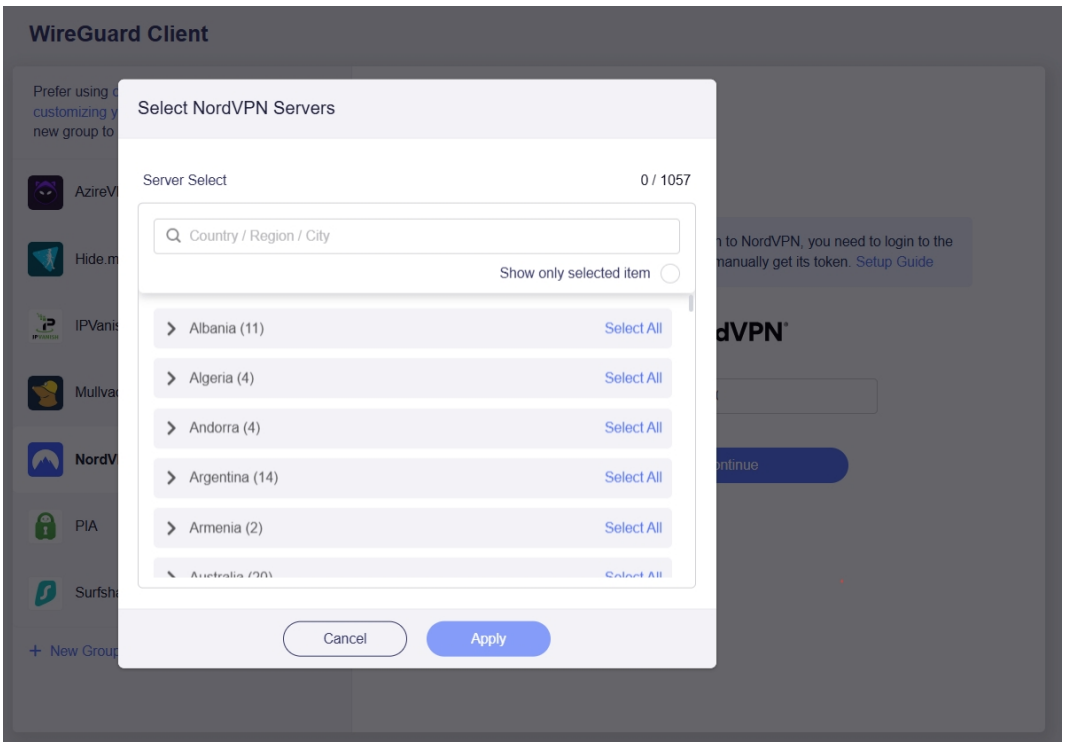

6. Select a preferred server, and click the three-dot icon on the right to start a connection.

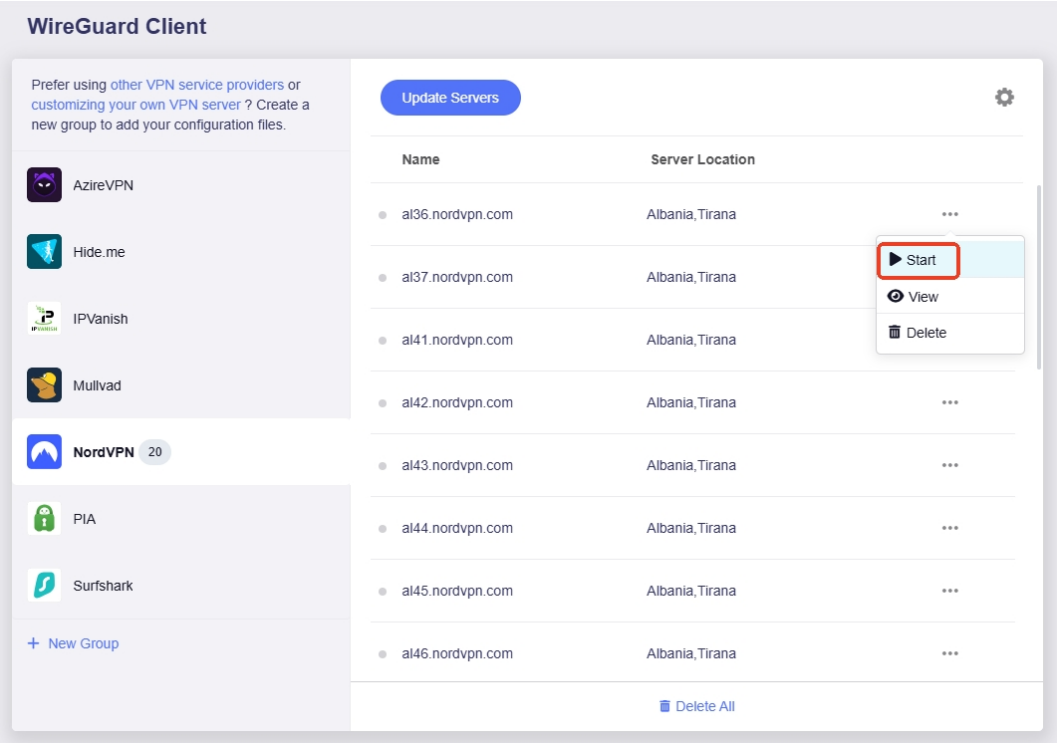


7. Once connected, a green dot will appear next to the configuration file.

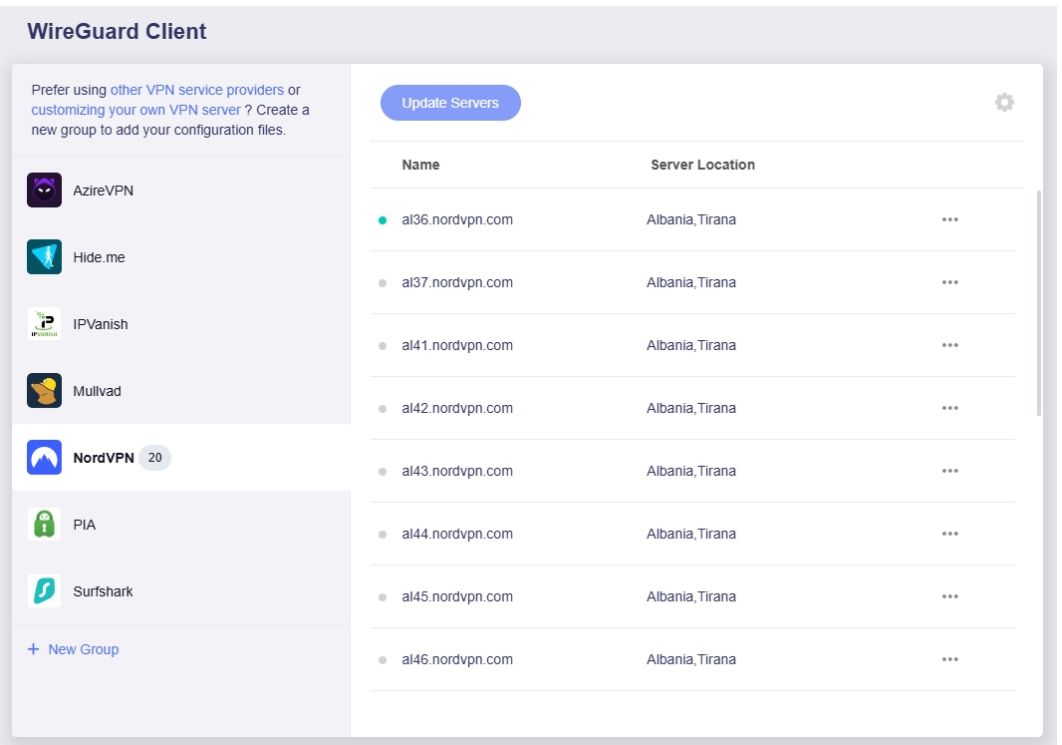

You can also check the VPN connection details on the **VPN Dashboard**.


8. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

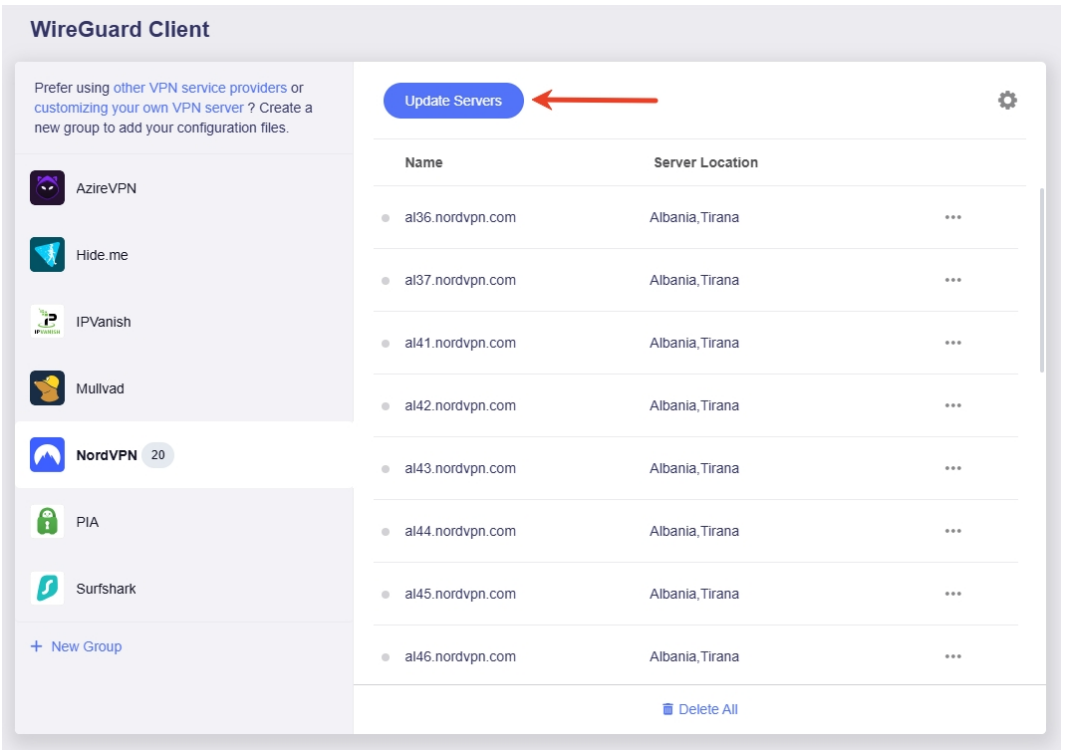


9. Edit credentials or logout.

   Click the gear icon to edit your login credentials or log out.

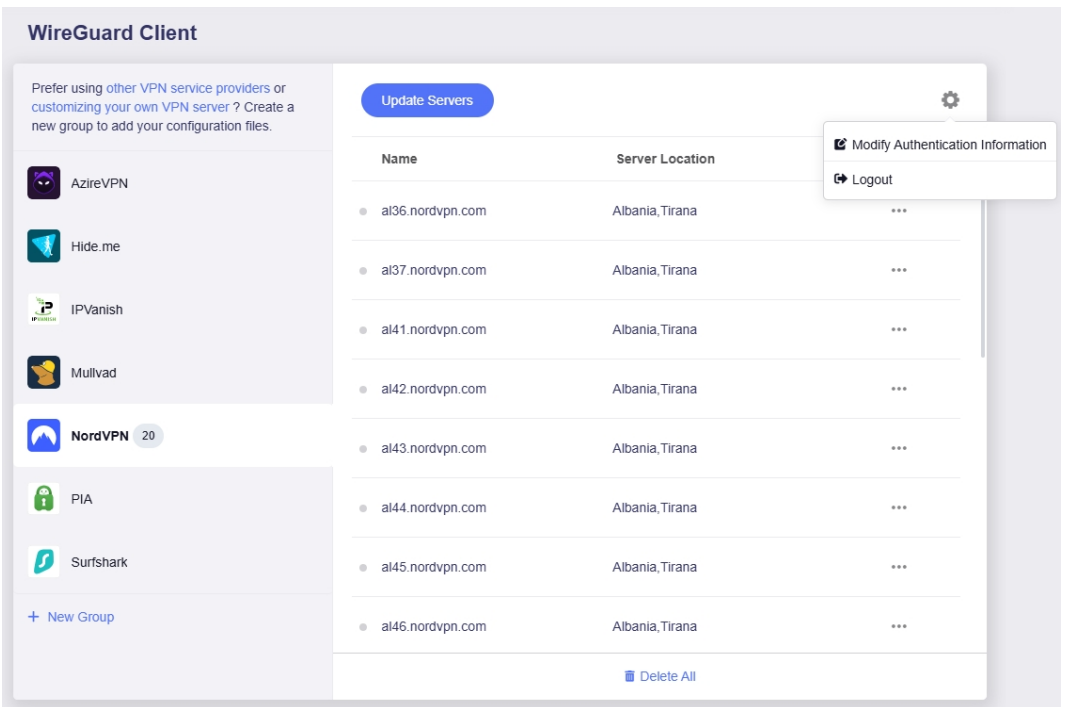

10. Delete all files.


    You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

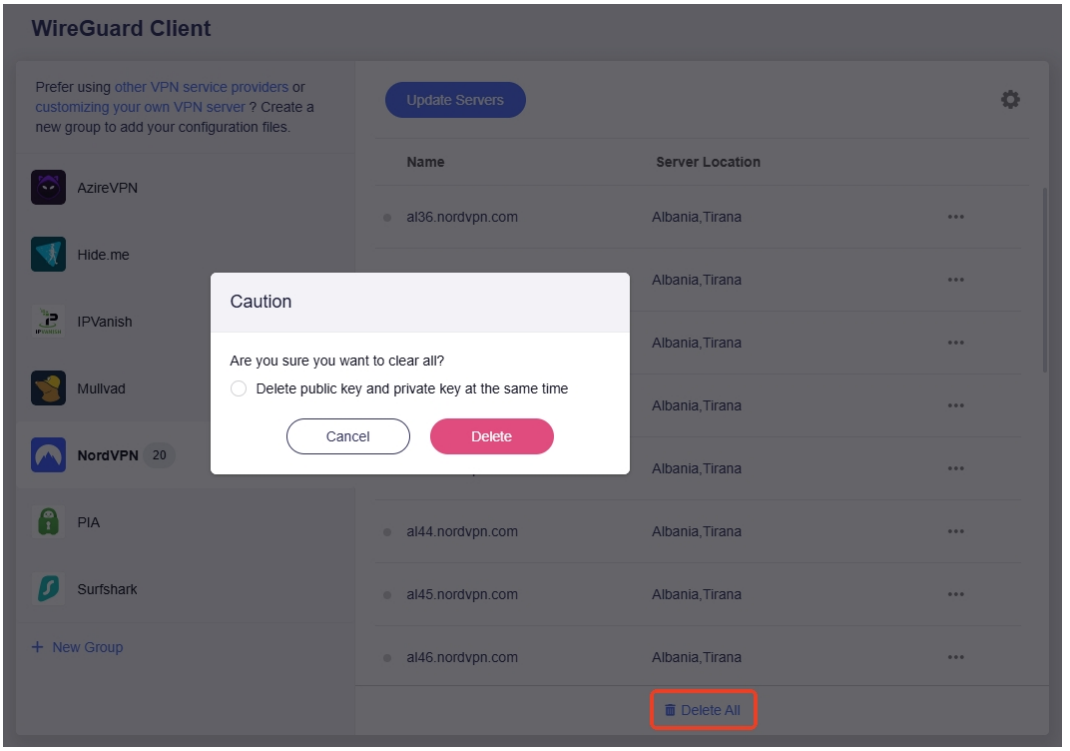


11.2.7 Set Up PIA (Private Internet Access)

Follow the steps below to set your router as a PIA client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **PIA**.
2. Input Username and Password, then click **Save and Continue**.

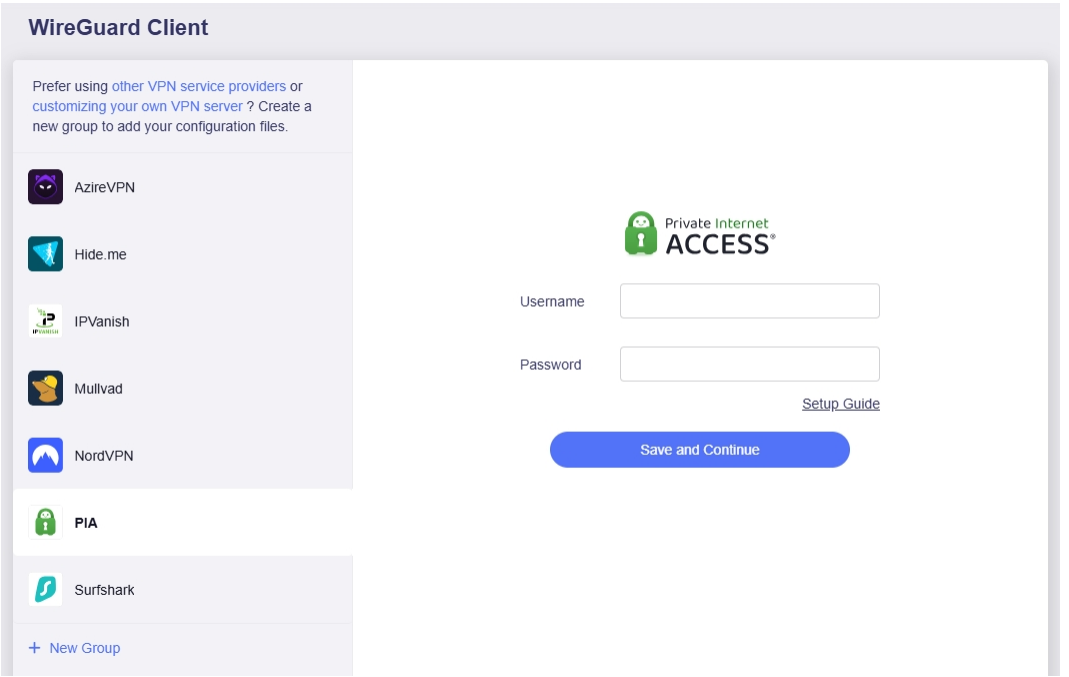


3. Select the server(s) you want to connect to, and click **Apply**.

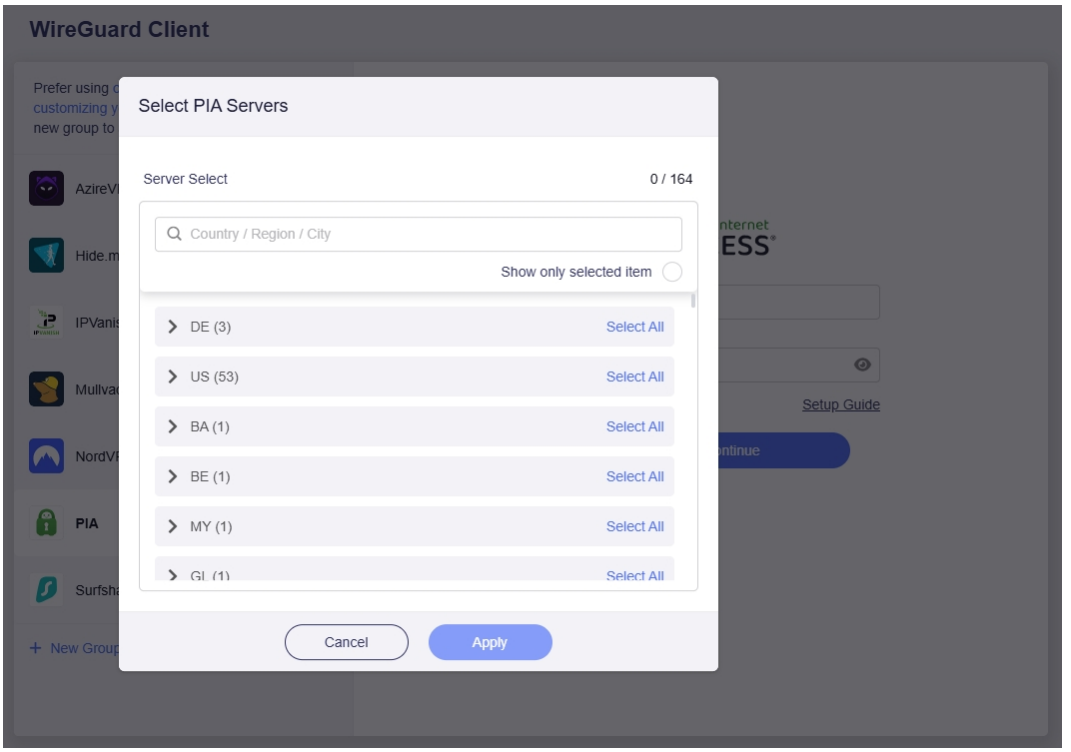

4. Select a preferred server, and click the three-dot icon on the right to start a connection.

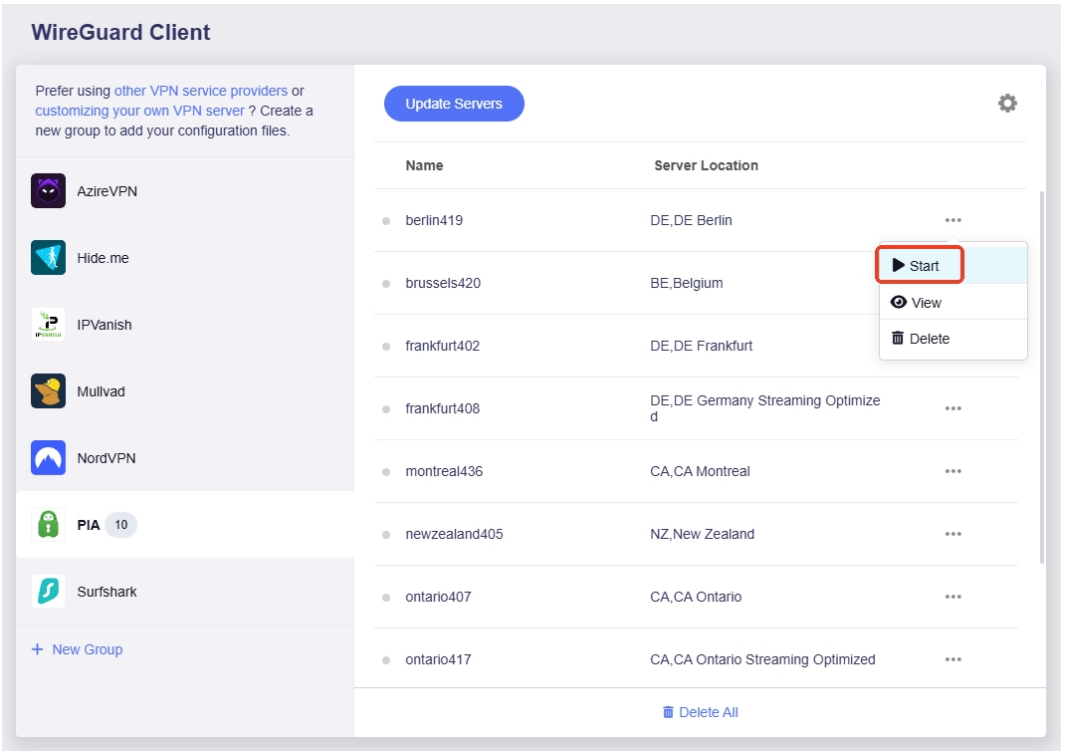


5. Once connected, a green dot will appear next to the configuration file.

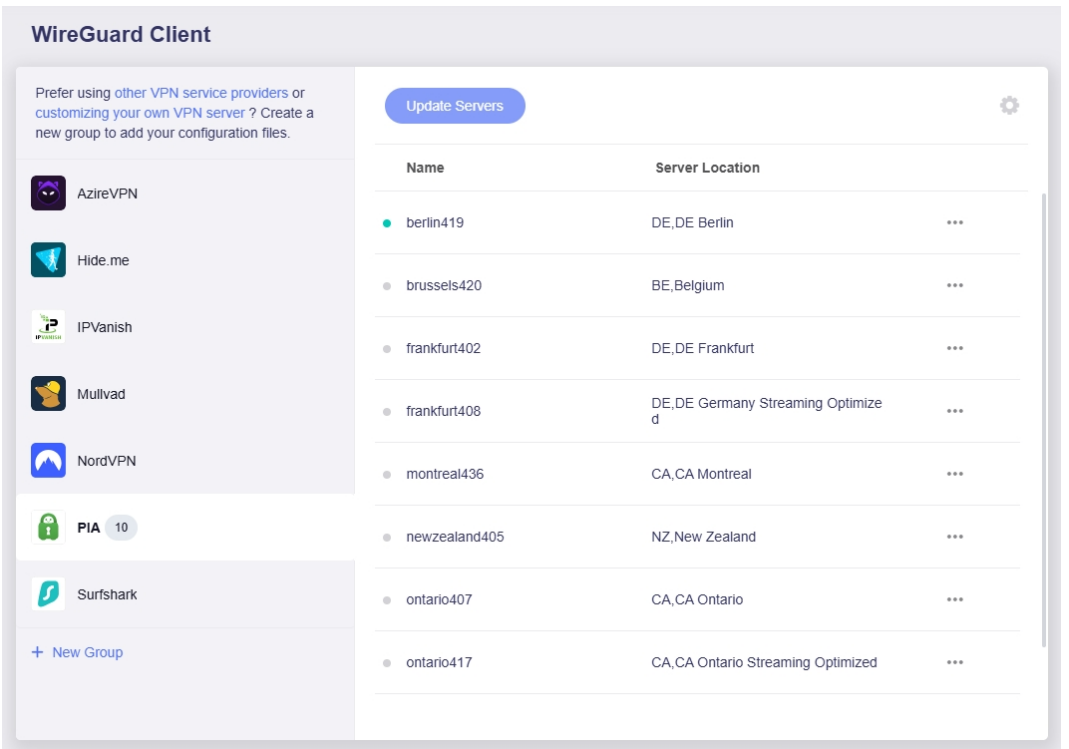

You can also check the VPN connection details on the **VPN Dashboard**.


6. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

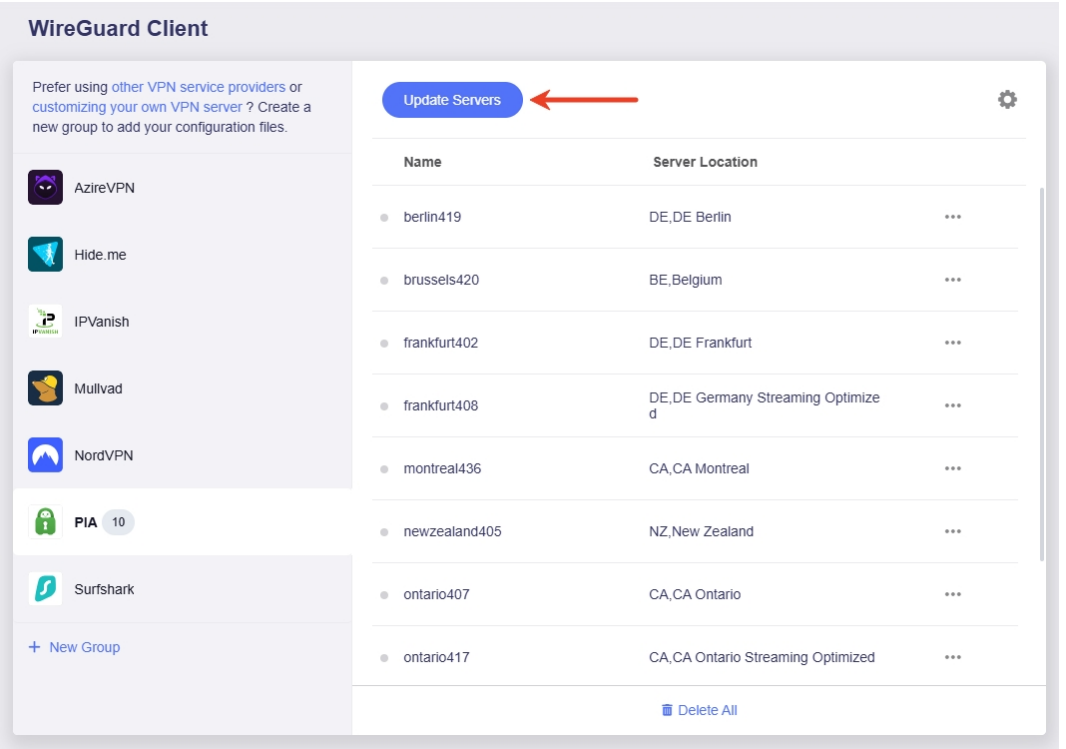


7. Edit credentials or logout.

   Click the gear icon to edit your login credentials or log out.

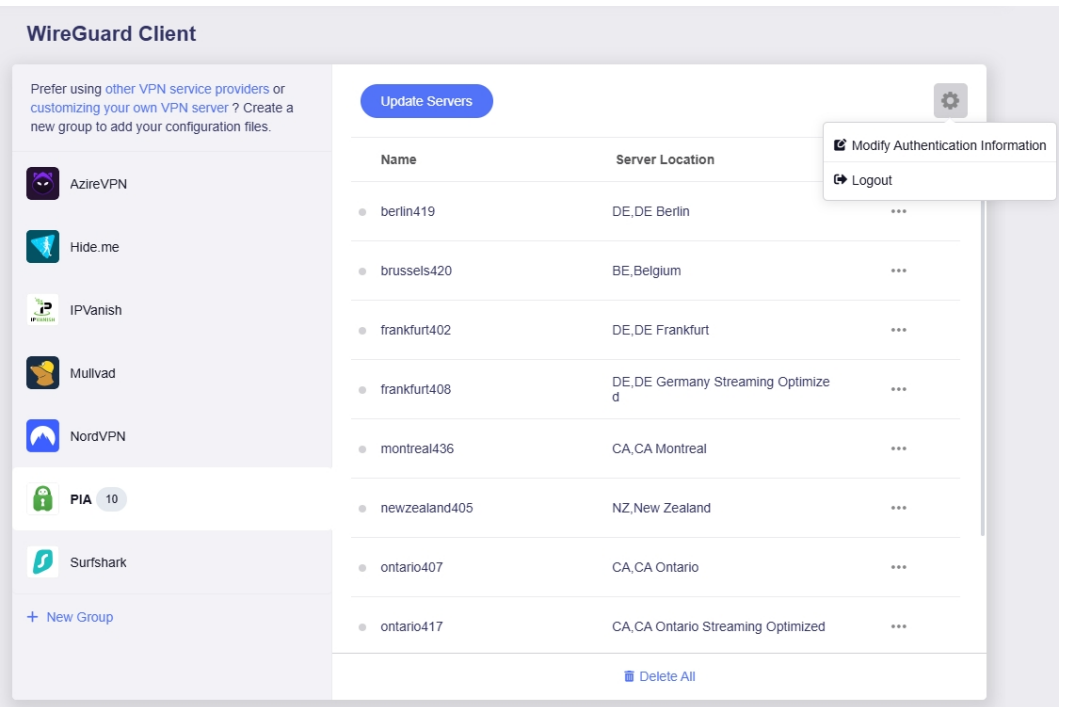

8. Delete all files.


You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

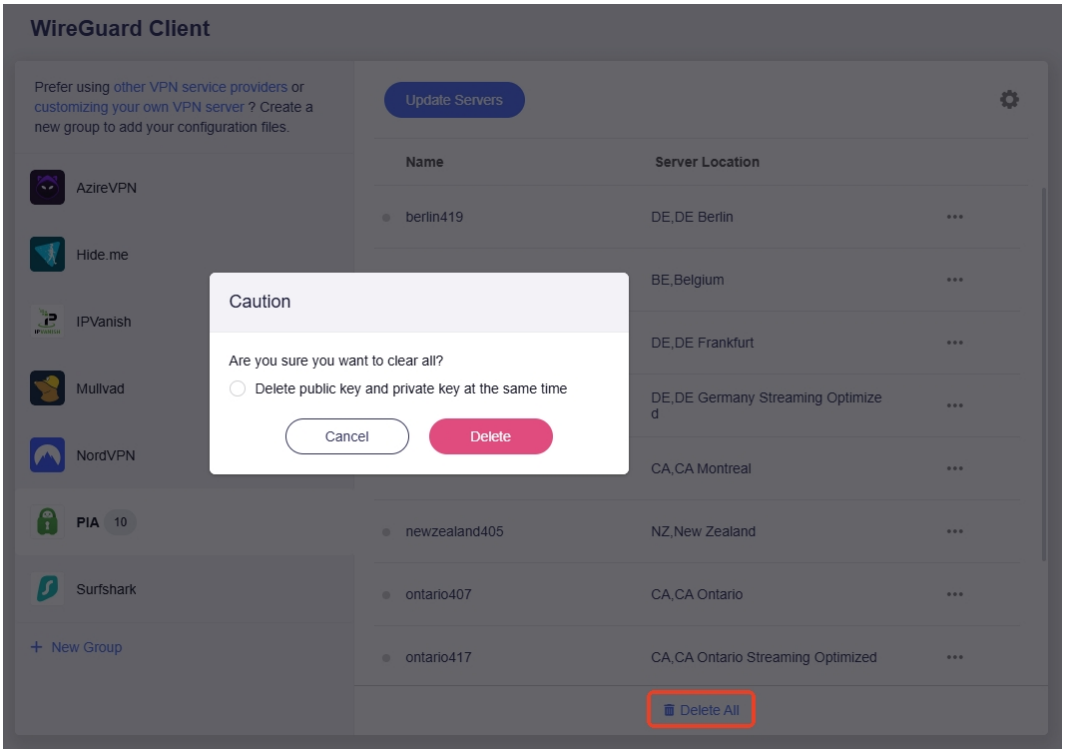


11.2.8 Set Up Surfshark

Follow the steps below to set your router as a Surfshark client.


1. Log in to your router's web admin panel and go to **VPN** > **WireGuard Client** > **Surfshark**.
2. Input Username and Password, then click **Save and Continue**.

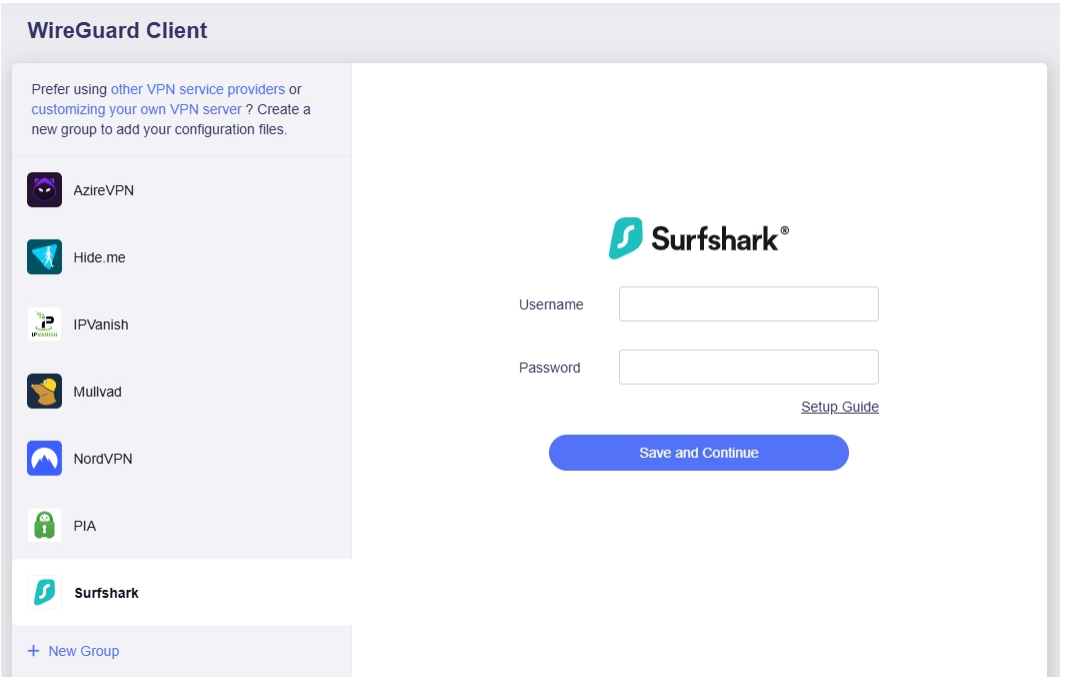


3. Select the server(s) you want to connect to, and click **Apply**.

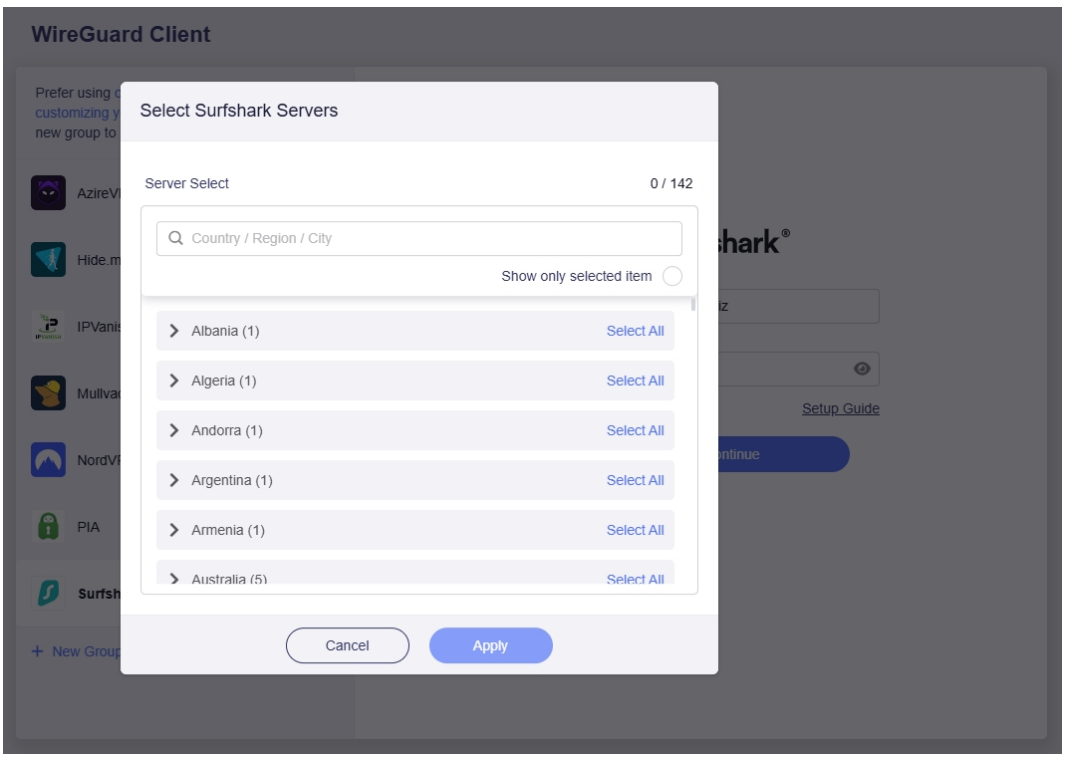

4. Select a preferred server, and click the three-dot icon on the right to start a connection.

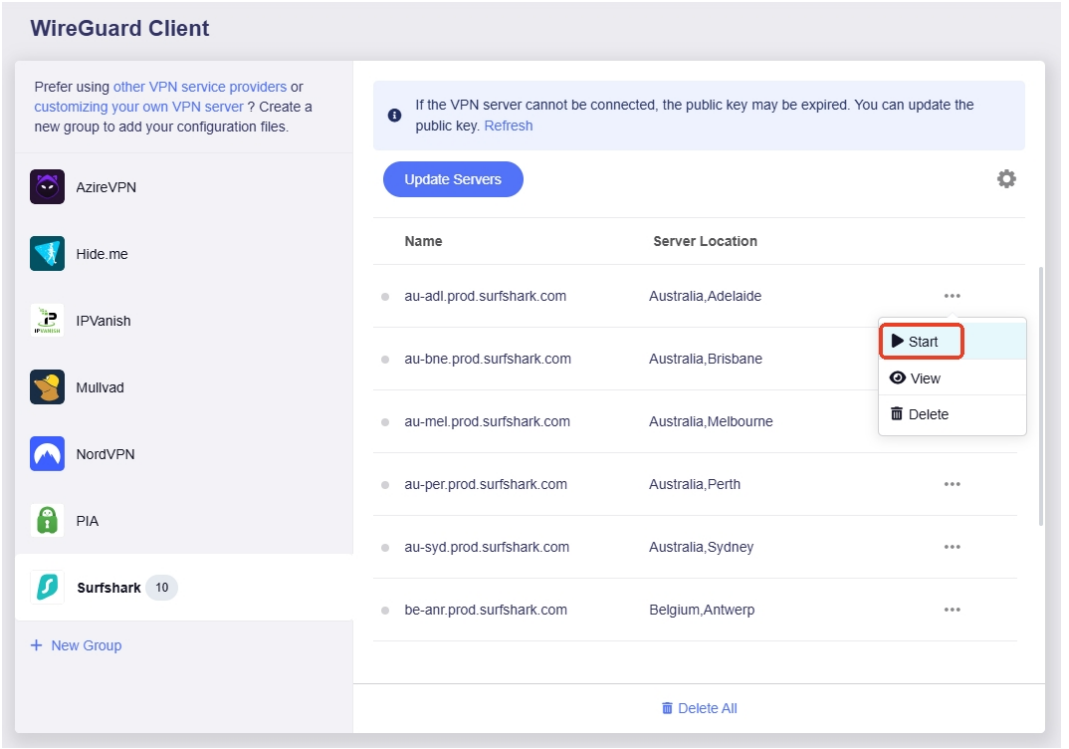


5. Once connected, a green dot will appear next to the configuration file.

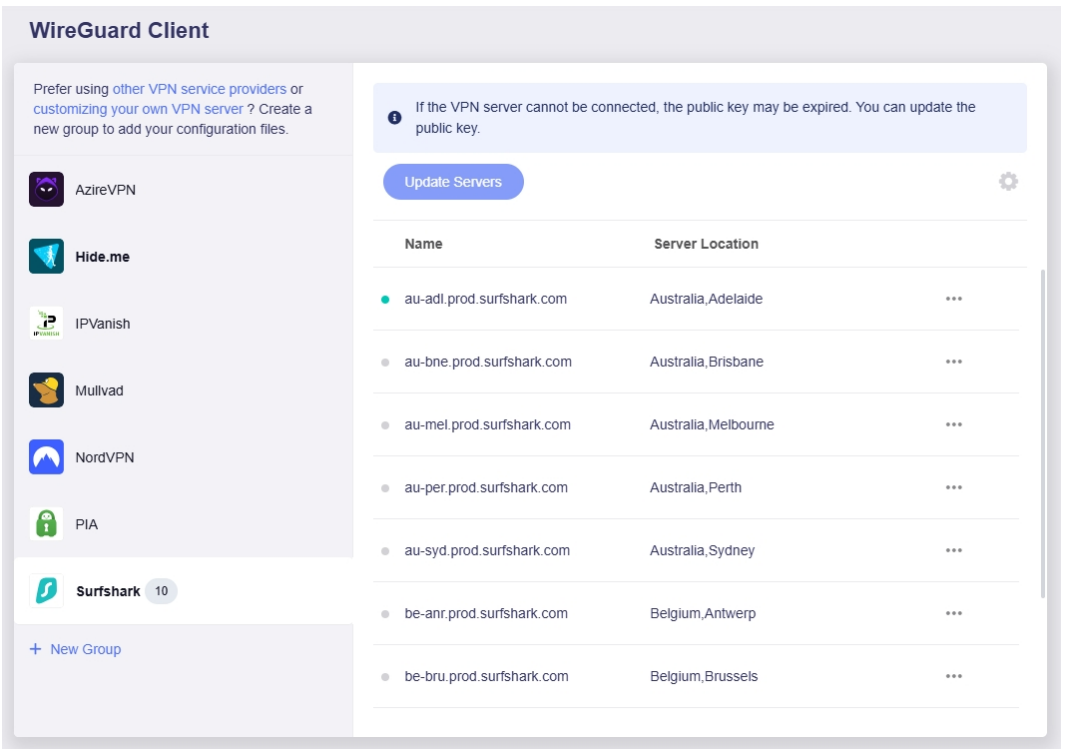

You can also check the VPN connection details on the **VPN Dashboard**.


6. Update servers.

You can click **Update Servers** to obtain the latest available server list, avoiding connection failures caused by server maintenance or shutdown.

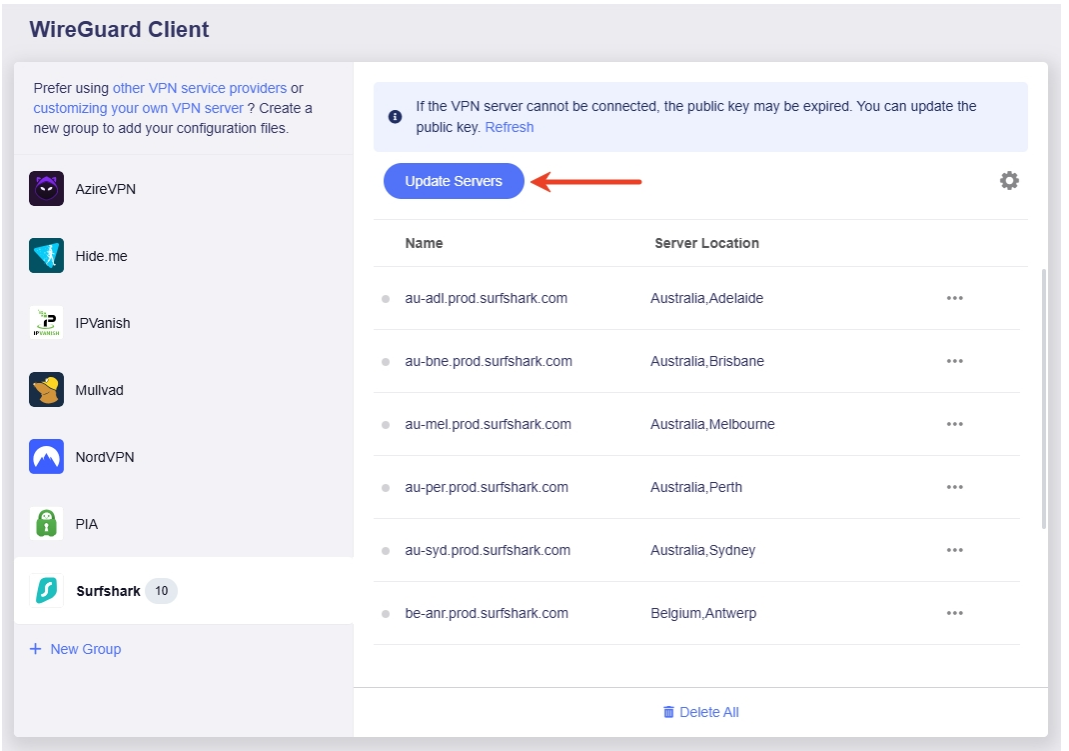


7. Edit credentials or logout.

Click the gear icon to edit your login credentials or log out.

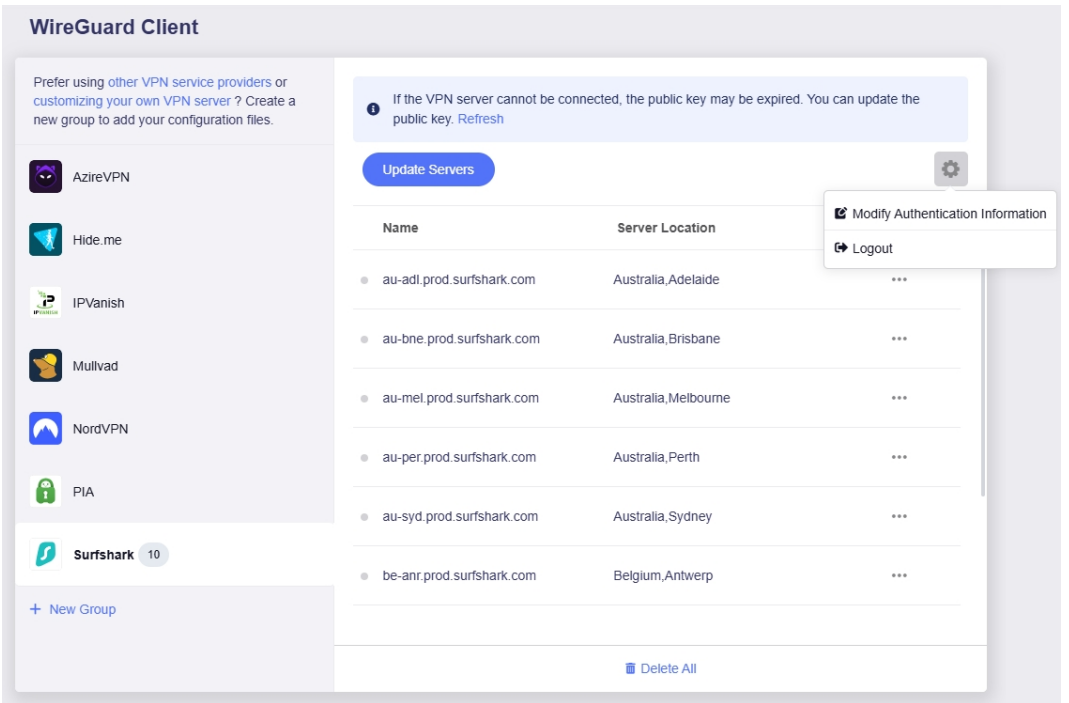


8. Refresh.

You can click **Refresh** to update the public key when the VPN server cannot be connected.

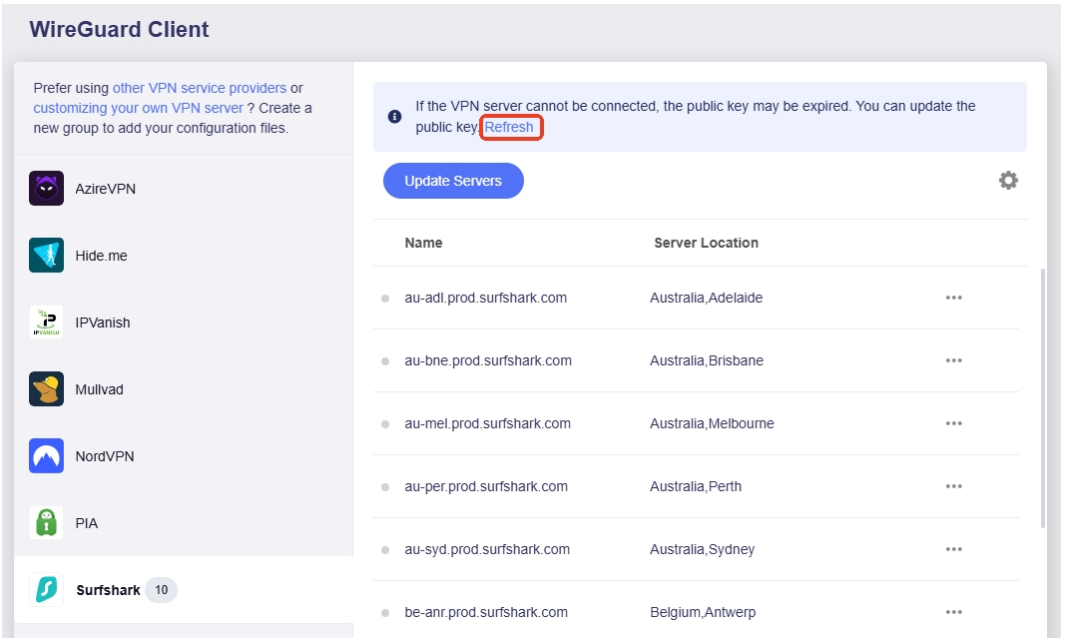

9. Delete all files.

You can click **Delete All** to delete all configuration files with one click, and choose whether to delete the private and public keys simultaneously.

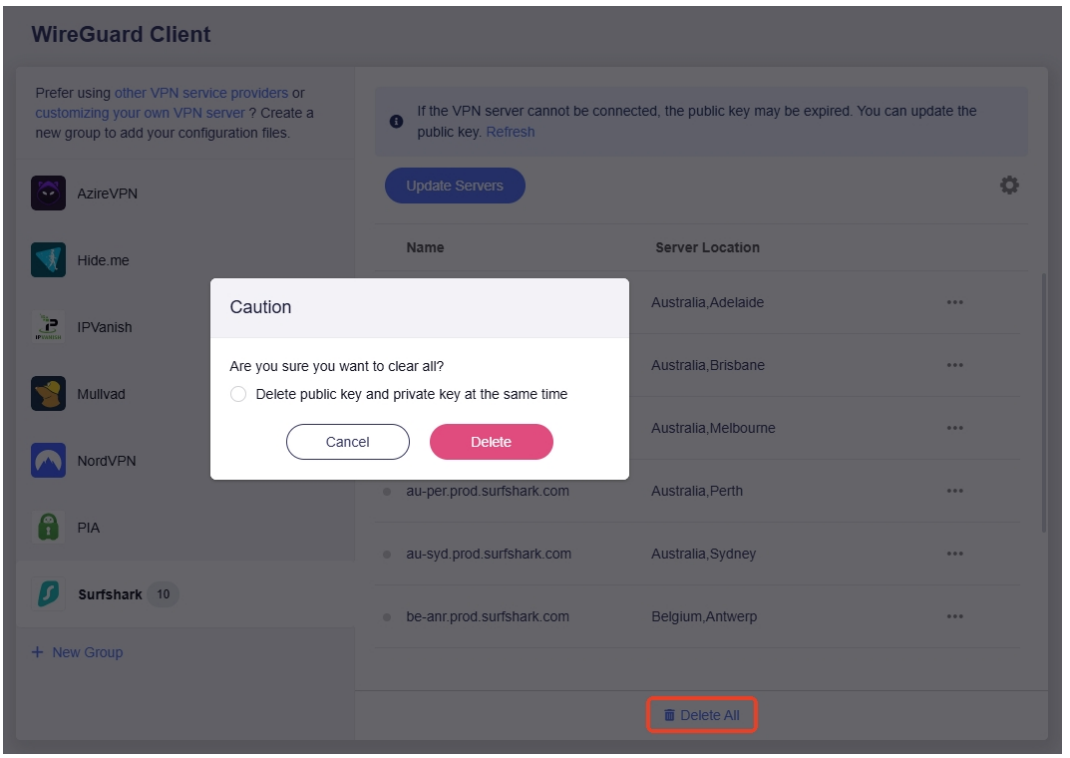


11.2.9 Set Up WireGuard Client Manually (for other providers)


If your WireGuard service provider is not integrated into the web admin panel, visit the official website of your subscribed service provider first to obtain the configuration file. Then upload it to the router to set up a WireGuard client. If you don't know how to download the configuration files, see this guide or contact their support.

Below are steps to upload the configuration file to the router to set up a WireGuard client.


1. Log in to your router's web admin panel and navigate to **VPN** > **WireGuard Client** > **Add Manually**.

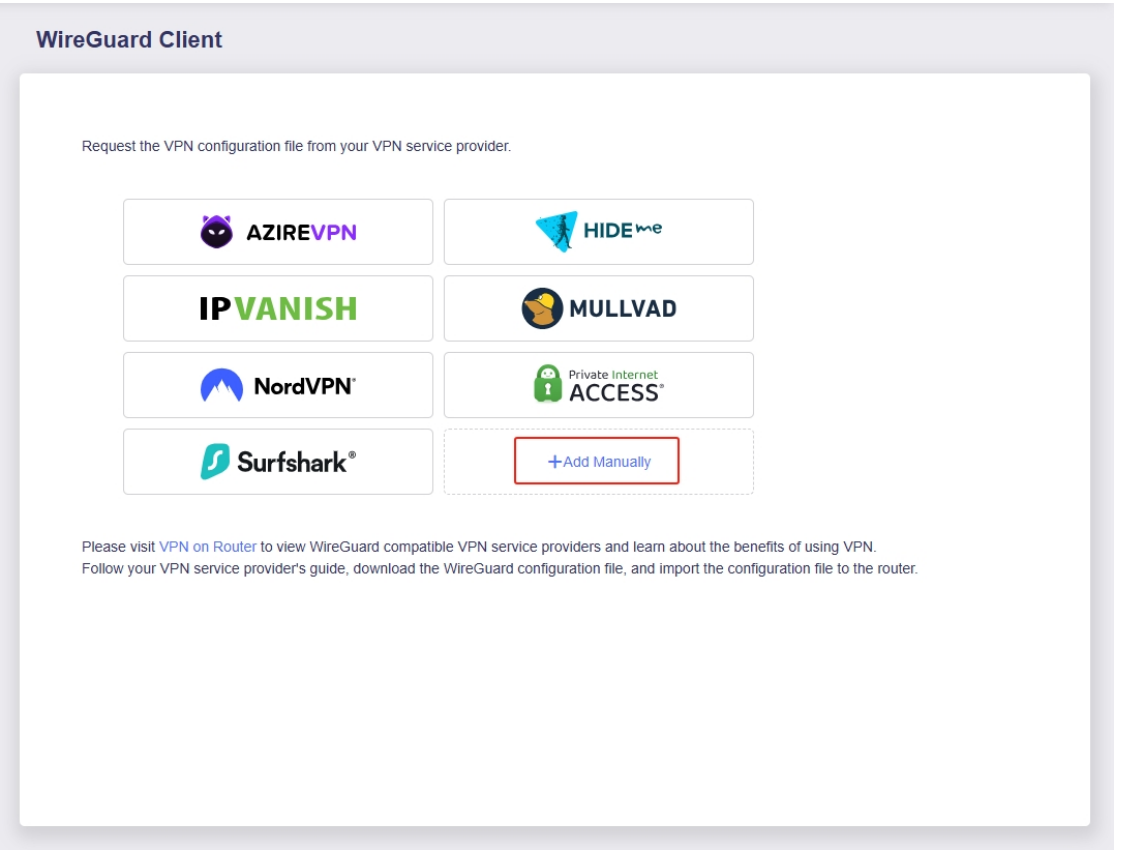


2. It will create a group on the left sidebar. Set a descriptive name for the group.

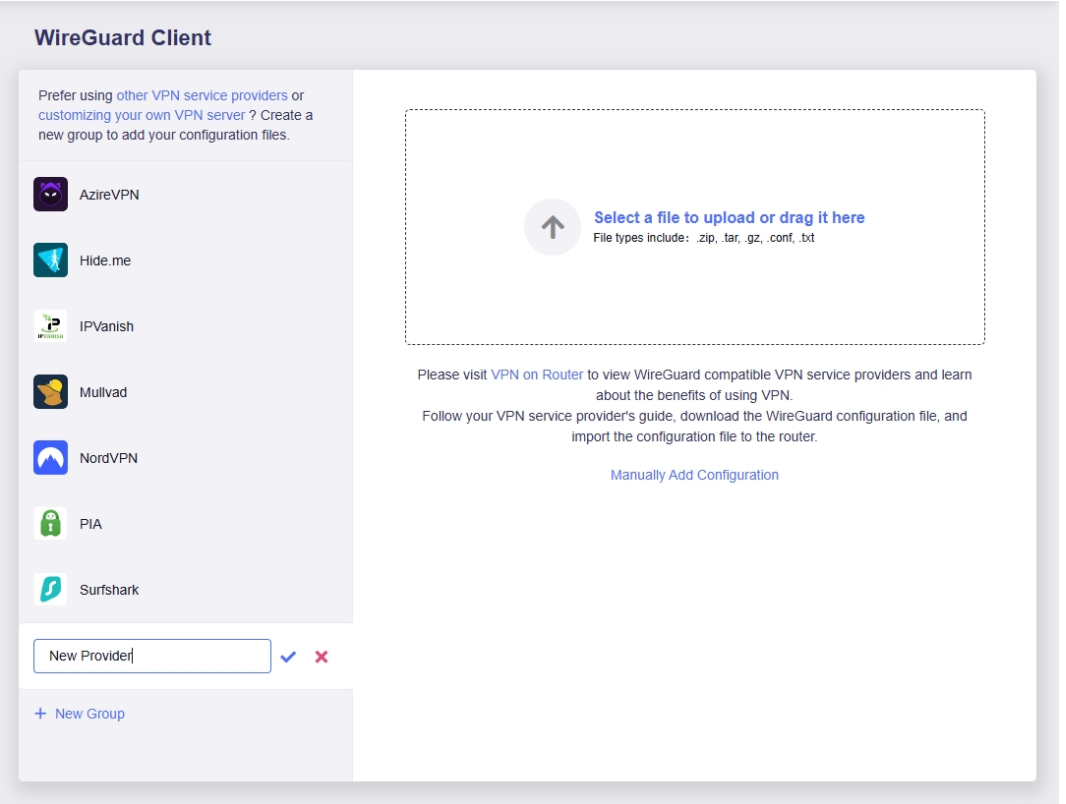


3. Click the upload area to upload your WireGuard configuration file (supported formats: zip, tar, gz, conf, txt), and click **Apply**.

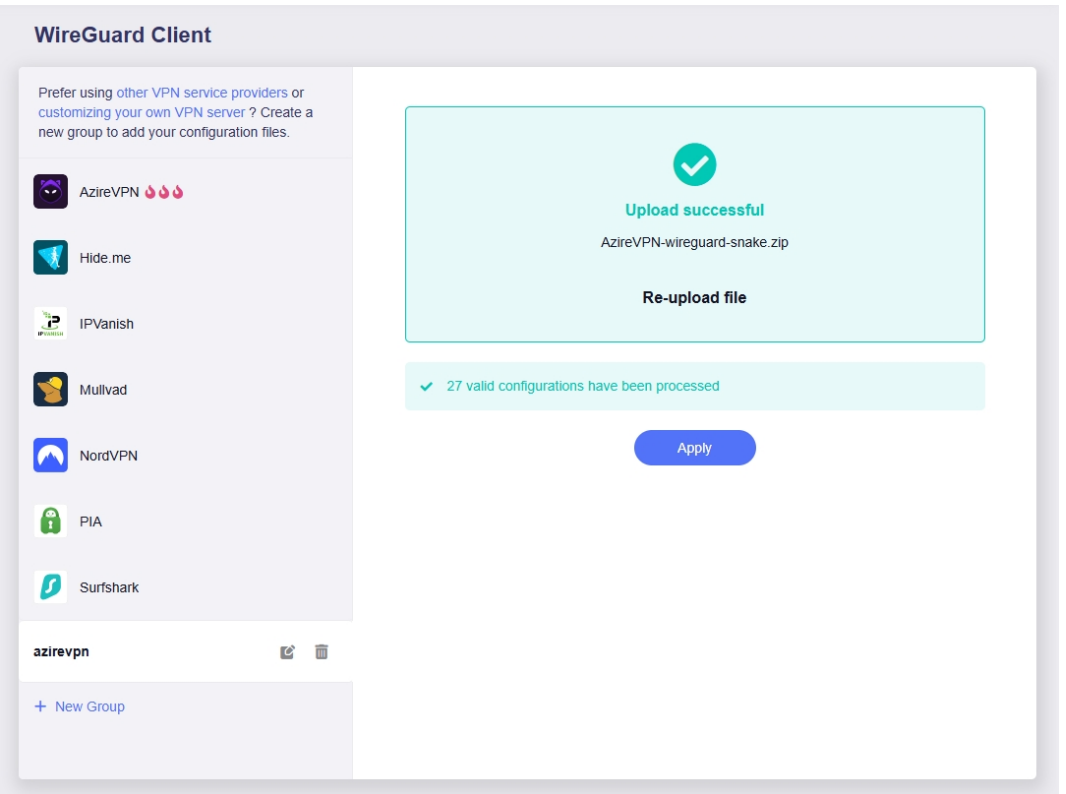


If you upload a compressed file containing multiple configuration files, it will be decompressed automatically, as shown below.

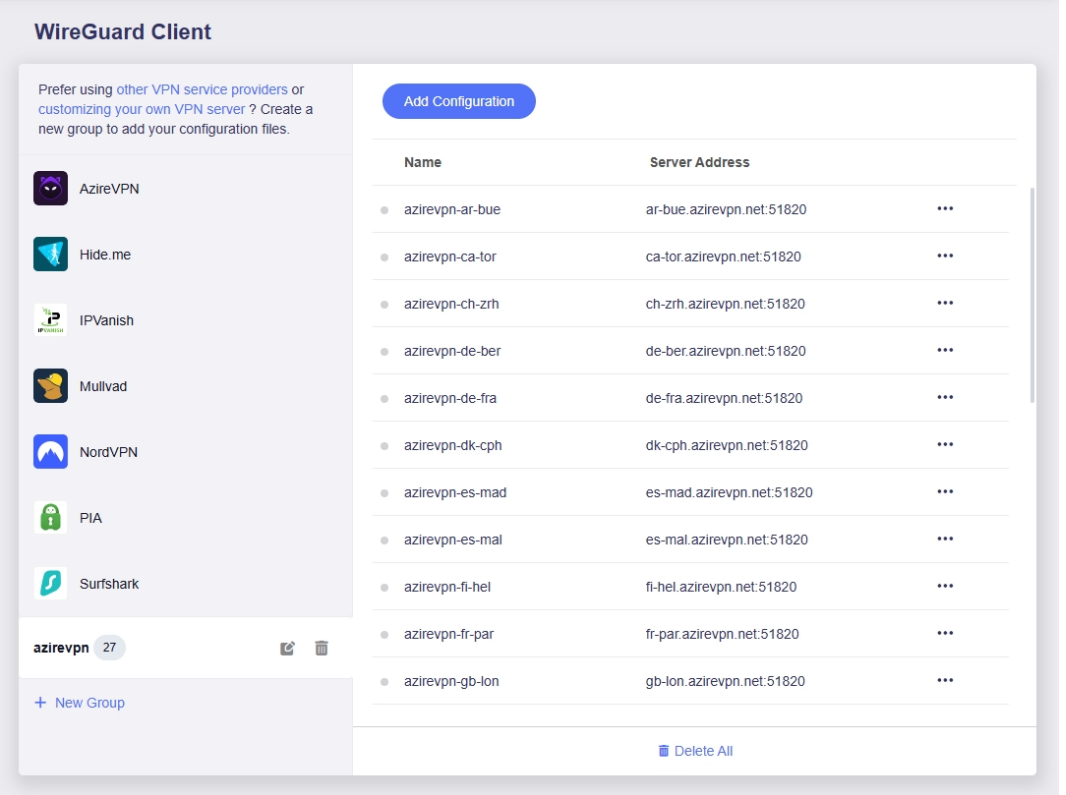


Alternatively, you can click **Manually Add Configuration** at the bottom of the upload area, add configuration details in text form and click **Apply**.

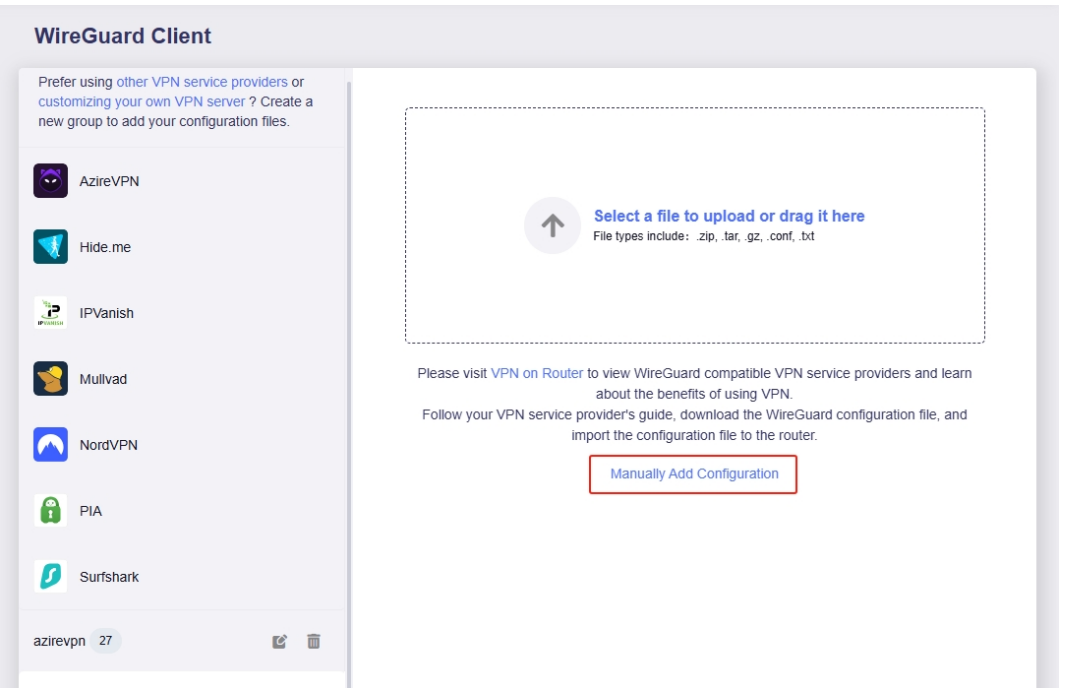


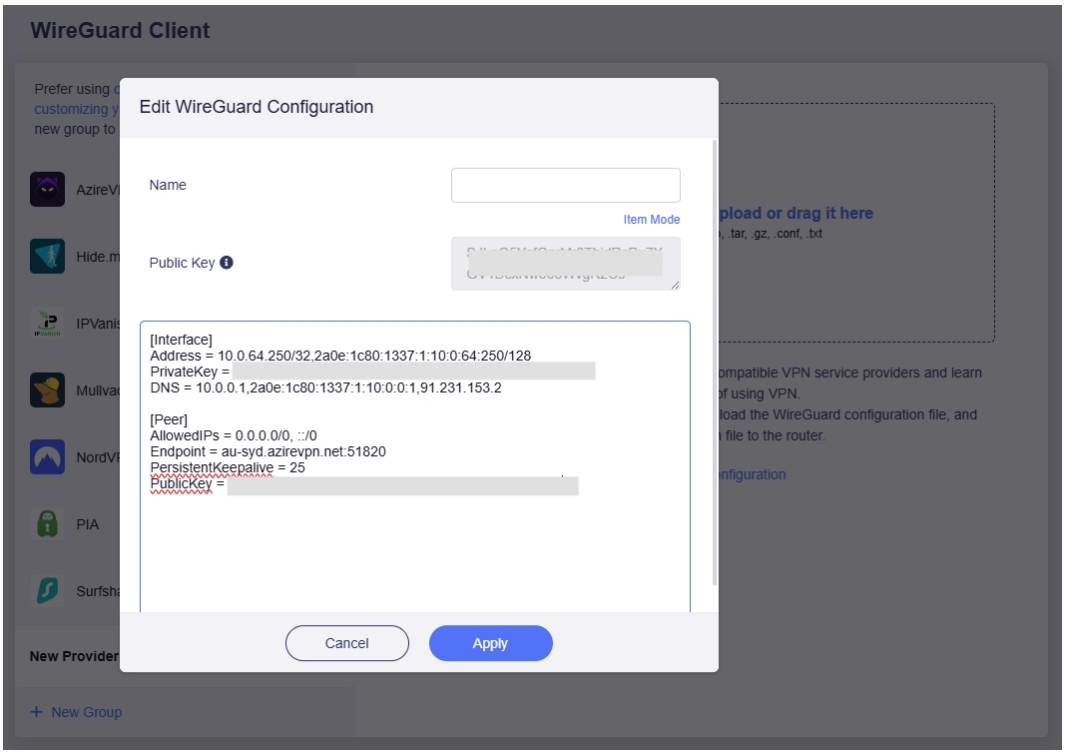

If you want to verify each item, you can switch to the Item mode and check the configuration details, then click **Apply**.

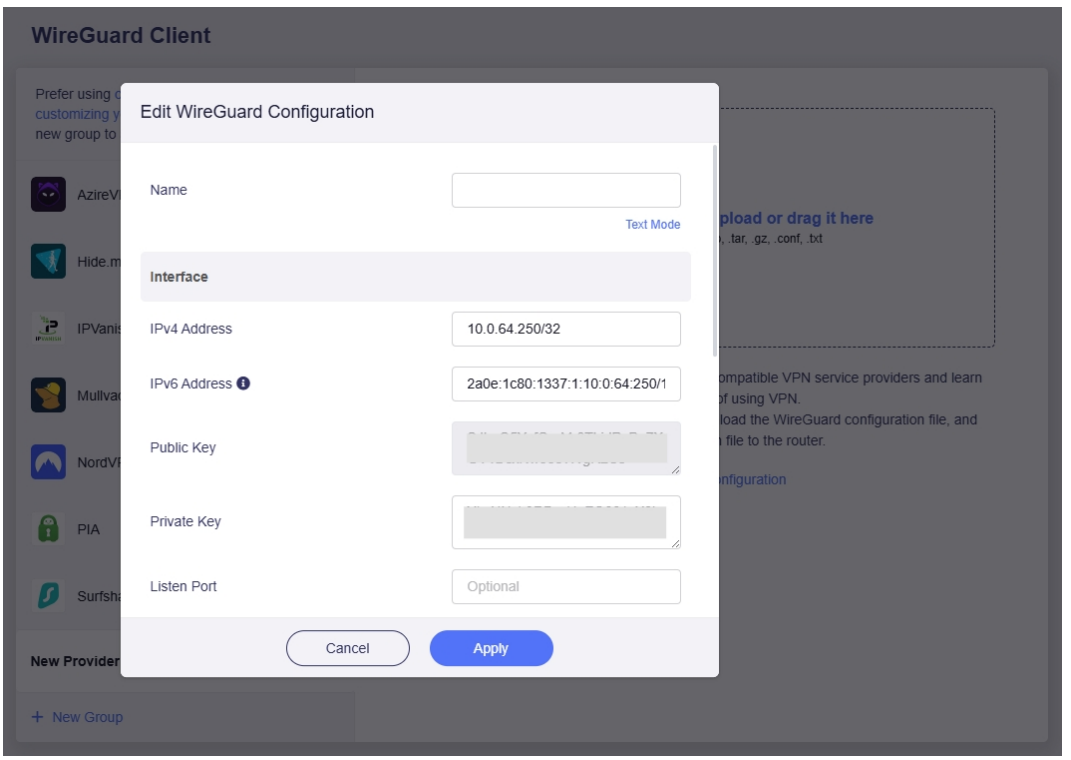

4. Click the three-dot icon on the right side to start the connection.

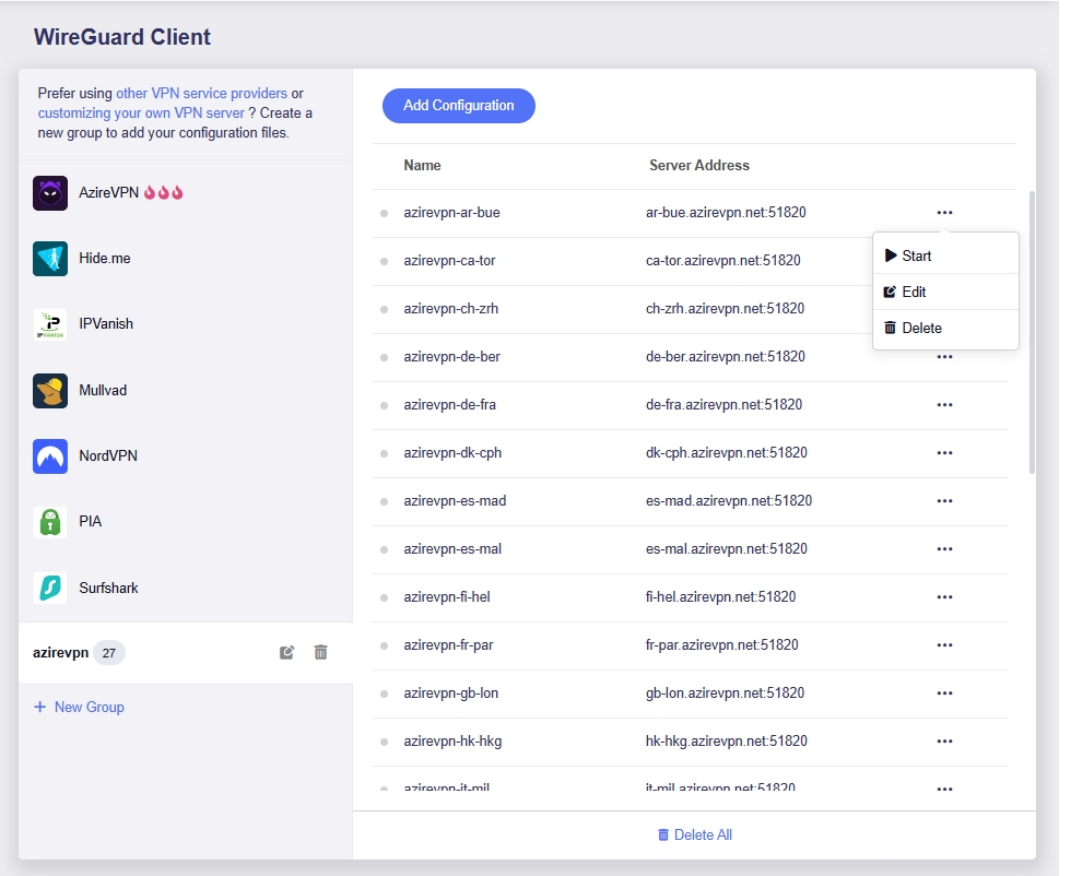

5. Once connected, a green dot will appear next to the configuration file. You can check the VPN connection details on the **VPN Dashboard**.

Chapter 12


Applications

This chapter introduces some applications in GL.iNet routers, e.g., Plug-ins, Dynamic DNS, Network Storage, AdGuard Home, Parental Control,Tailscale, and eSIM Management.

12.1 Plug-ins

The Plug-ins page allows you to manage OpenWrt packages.

Log in to your router's web admin panel, navigate to **APPLICATIONS** > **Plug-ins.** You can install or remove any package available in the repository. Click the **Refresh** button to update the package list before installing plug-ins.

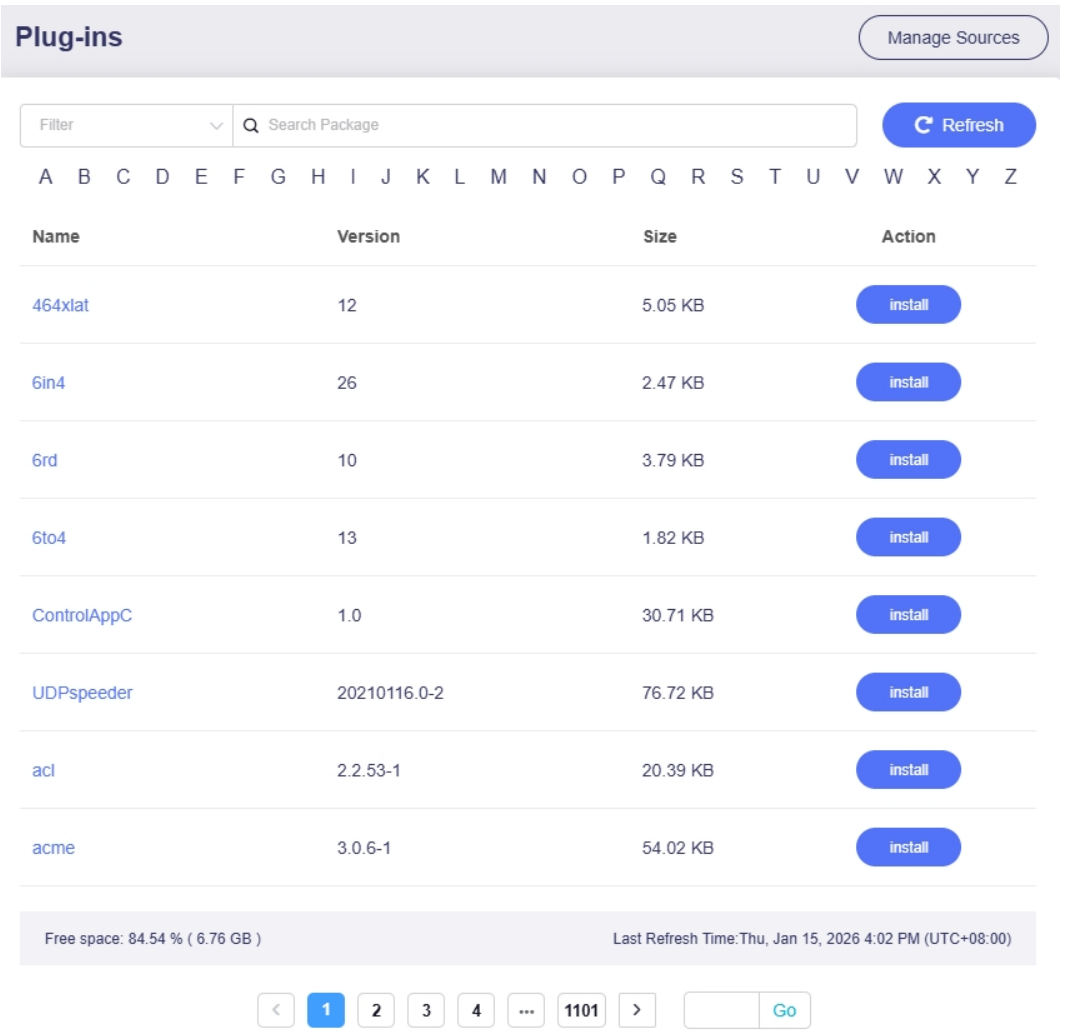

Note:


1. It is not recommended to update pre-installed plug-ins in GL.iNet official firmware, such as nginx, adguard home, tailscale, etc.
2. Third-party plugins manually installed by users can be updated; however, GL.iNet is not liable for any security issues from third-party plugins. For inquiries, please contact the respective third-party plugin authors.

12.2 Dynamic DNS


Dynamic Domain Name Service (DDNS, or Dynamic DNS) is a service used to map a domain name to the dynamic IP address of a network device. With Dynamic DNS, you can access your router remotely. A public IP address is required for this functionality.

12.2.1 Enable DDNS


1. Log in to your router's web admin panel, navigate to **APPLICATIONS** > **Dynamic DNS**, the page is displayed as below.

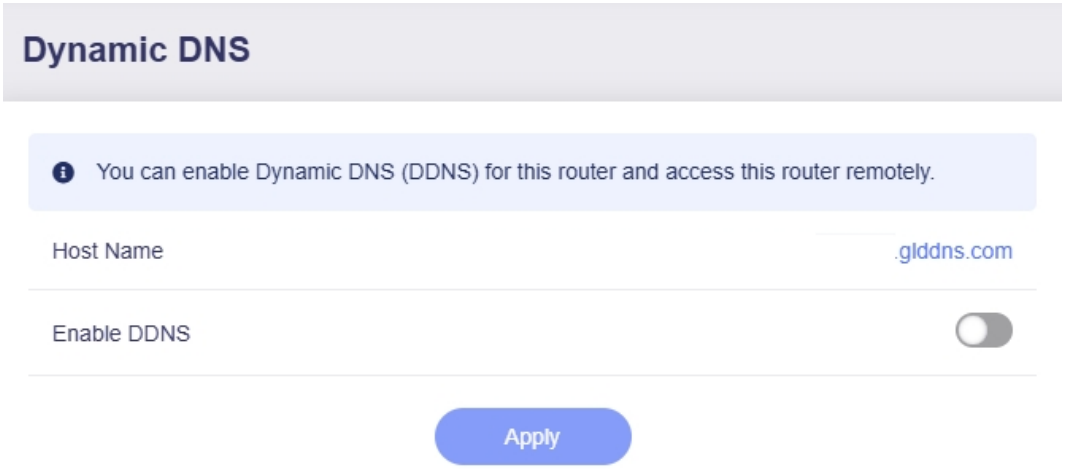


2. Toggle on **Enable DDNS**, read and agree to the **Terms of Services & Privacy Policy**, then click **Apply**.

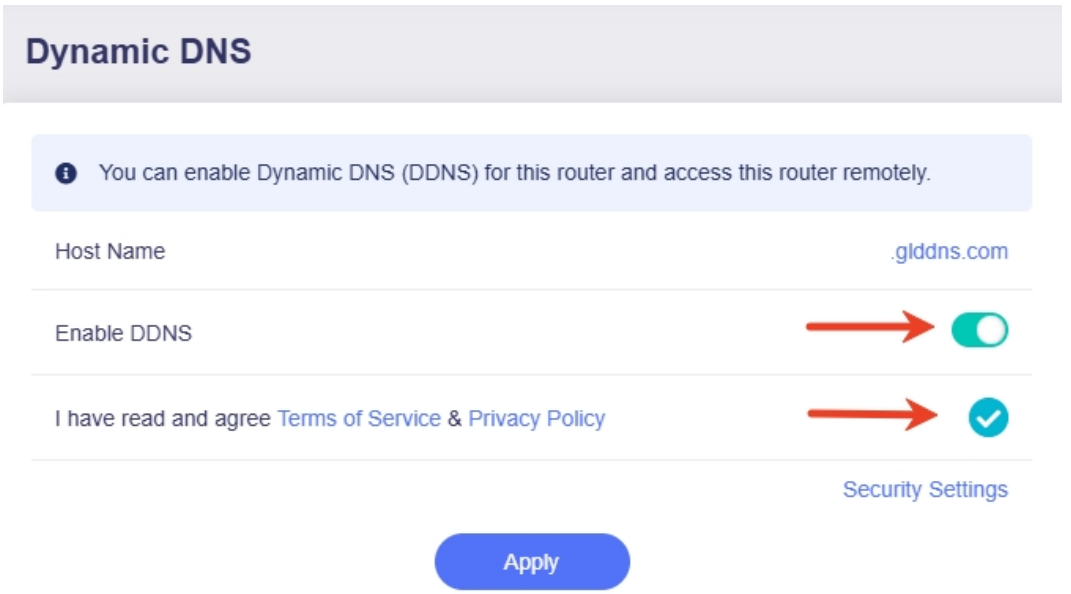


3. Click **Security Settings** in the bottom right corner.

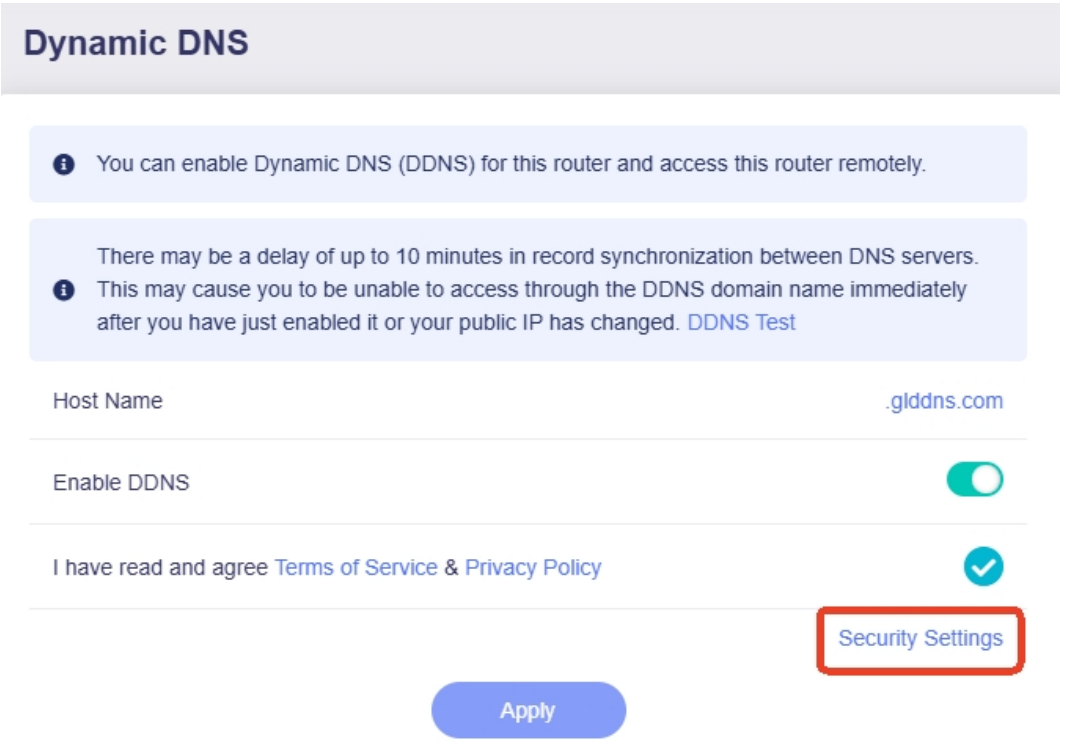

4. In the pop-up window, check if the remote access you want to use is enabled.

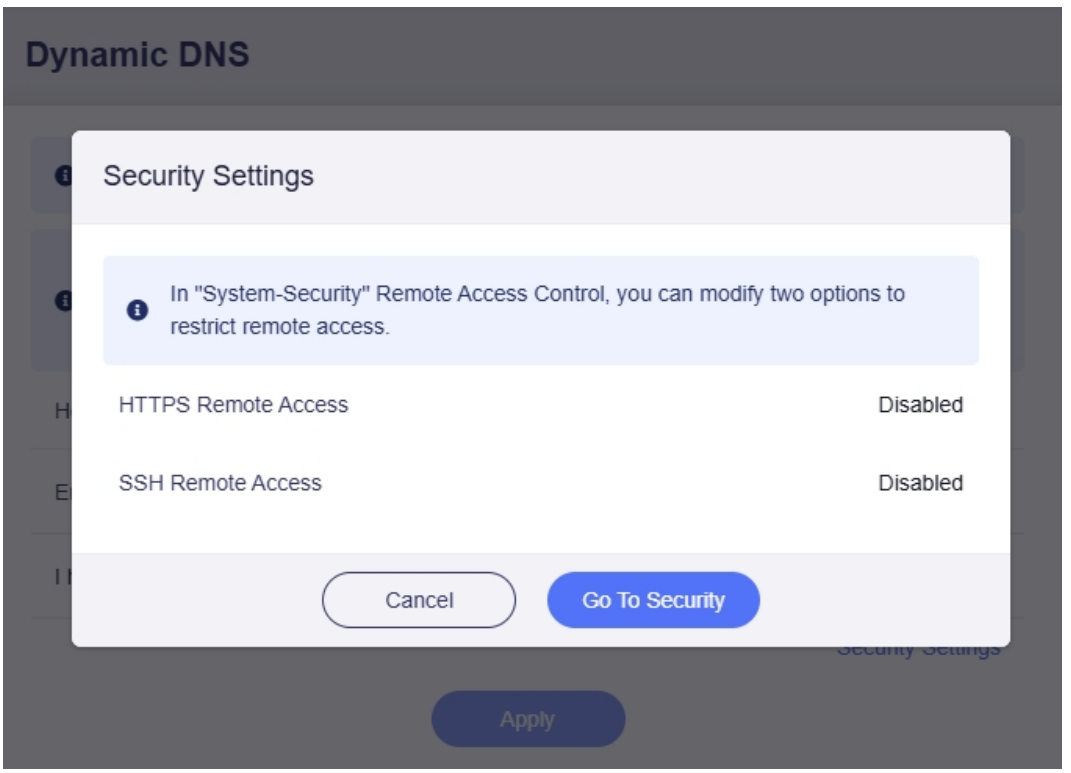

If not, go to **SYSTEM** > **Security** > **Remote Access Control** to enable it, and click **Apply**.

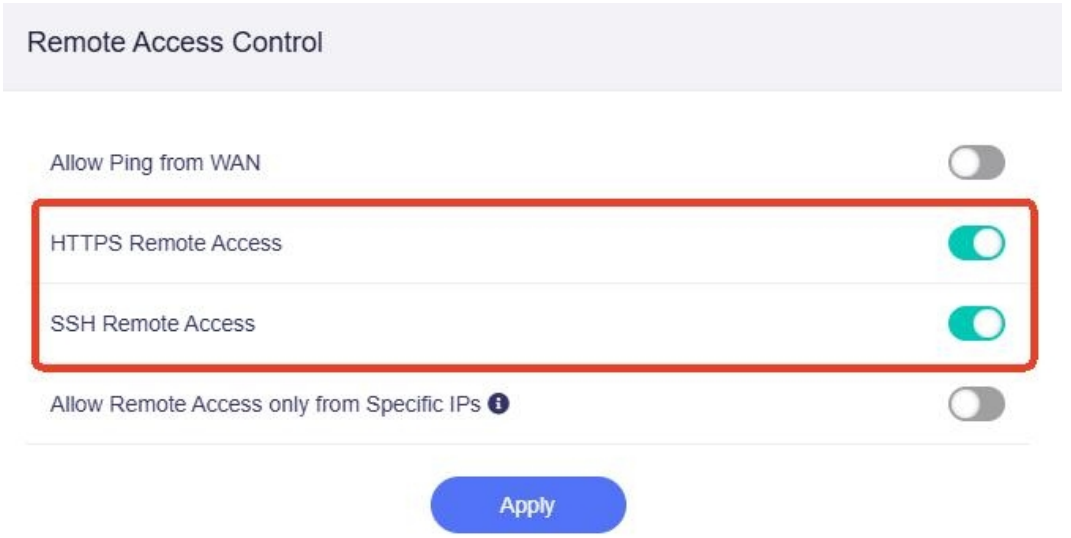

Note:


1. There may be a delay of up to 10 minutes in record synchronization between DNS servers. This may prevent you from accessing through the DDNS domain name immediately after enabling it or when your public IP changes.
2. If you enable DDNS and VPN Client at the same time, ensure that Services From GL.iNet Use VPN is disabled.

12.2.2 Check if DDNS Works


You can check if DDNS works using the DDNS test tool or manually via commands.

Method 1. Use DDNS Test tool

1. In the Dynamic DNS page, click the **DDNS Test**.

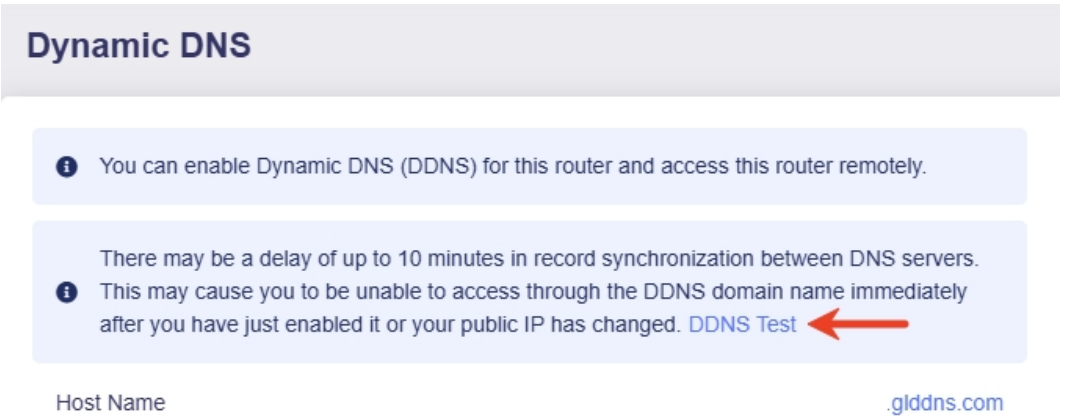

2. Make sure the IP address from DDNS domain resolution matches the router's WAN IP. If not, a yellow prompt will appear at the top, indicating that the router might be behind NAT, and you need to set up port forwarding on the upstream router.

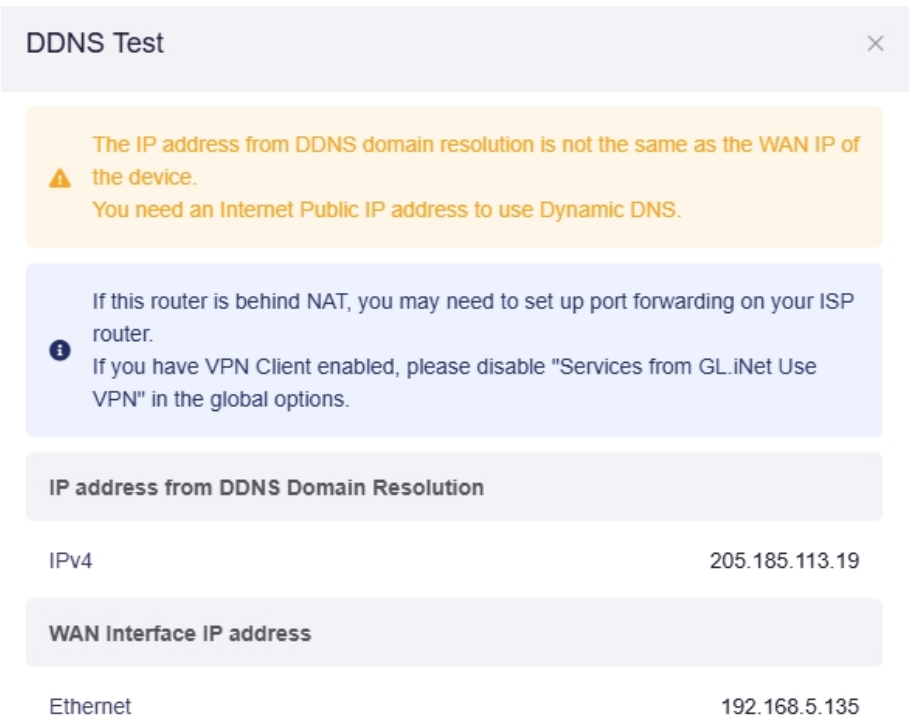

Method 2. Use commands

1. Use nslookup command *nslookup xxxxxxx.glddns.com 8.8.8.8* to obtain the mapping between domain name and IP address. Below is an example of Beryl AX GL-MT3000.




   - Replace “xxxxxxx.glddns.com” in the image above with your Host Name.
   - The “8.8.8.8” is the Google DNS. Use it or replace it with others, then press Enter.
2. If you get a public IP address such as “183.178.10.100” in the image above, it indicates that your DDNS domain has been successfully mapped to a public IP address. If you get a message like “server can’t find xxxxxxx.glddns.com”, it may indicate that domain resolution failed, and your DDNS domain has not been successfully mapped to a public IP address. Proceed to the next step to verify.
3. Log in to your router’s web admin panel and navigate to **INTERNET**. Find your router’s WAN IP address in the current active interface. Compare this IP address with the public IP address obtained above. If they are the same, the DDNS is in effect, otherwise it is not.

12.2.3 HTTPS Remote Access


A **Public IP address** is required for HTTPS remote access. See here to verify whether your ISP assigns you a public IP address. If your router is behind NAT, configure port forwarding (**port 443**) on the upstream router for HTTPS access.

Follow the steps below to enable HTTPS remote access for your router.

1. On the Dynamic DNS page, toggle on **Enable DDNS**, agree to the **Terms of Services & Privacy Policy**, then click **Apply**.

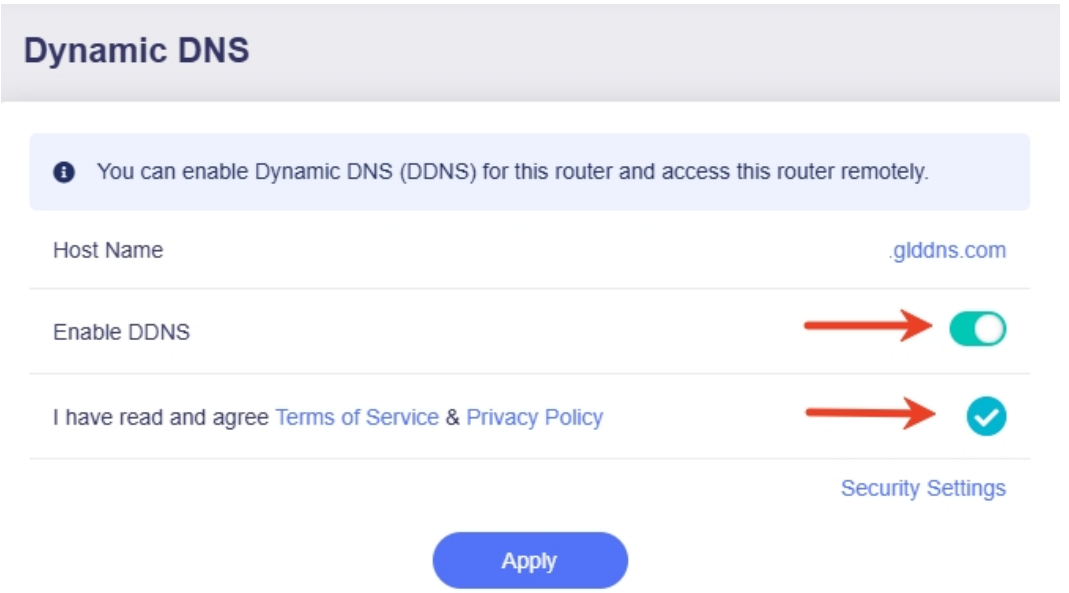


2. In the web admin panel, go to **SYSTEM** > **Security** > **Remote Access Control**. Enable **HTTPS Remote Access**, and click **Apply**.

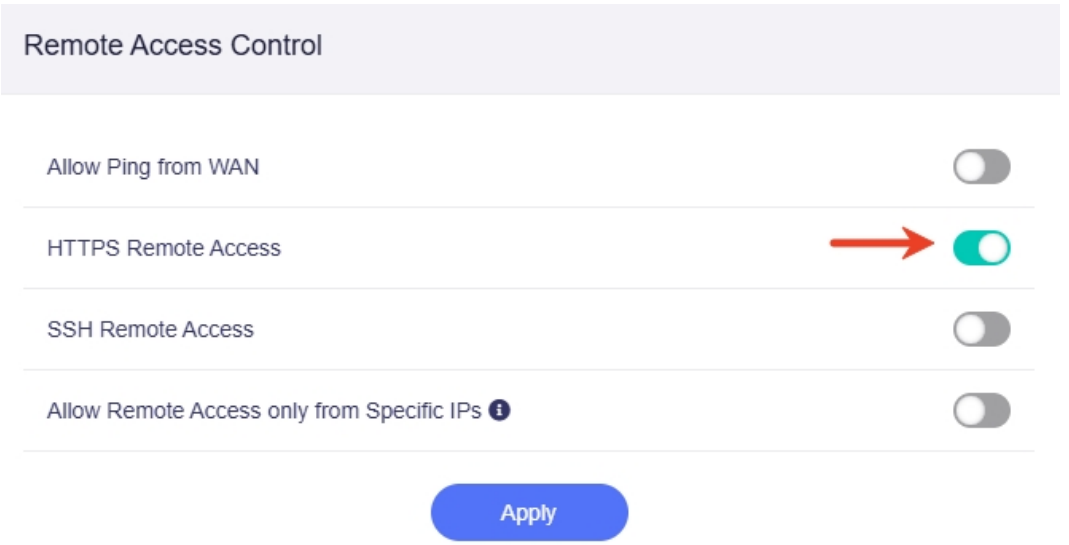

Once enabled, you can access the router’s admin panel from anywhere using the DDNS host name over HTTPS, e.g., **https://xxxxxxx.glddns.com**. If port forwarding is configured, access it as **https://xxxxxxx.glddns.com:external_port** (replace the external_port with your actual port number).

Note: This function uses self-signed certificates; therefore, browsers will indicate "Your connection is not private" when accessing the router’s admin panel via the DDNS host name over HTTPS. To proceed the HTTPS remote access, click **Advanced** at the bottom, then click **Proceed to xxxxxxx.glddns.com** to continue.

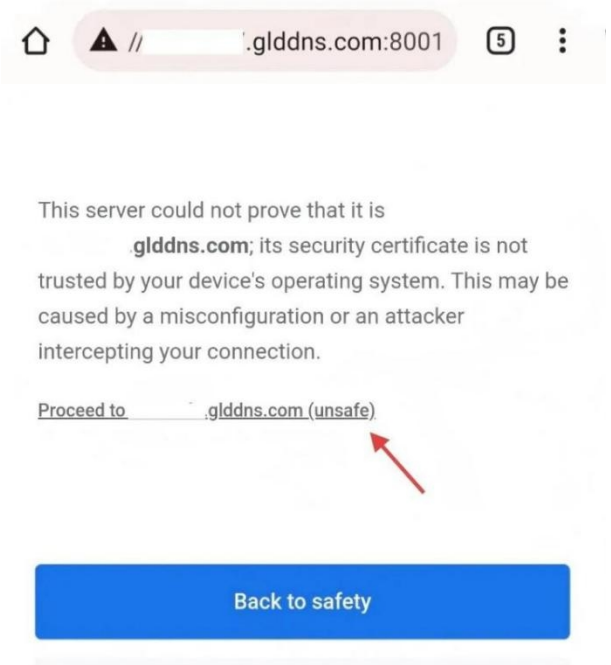


You will then be able to access the router’s web admin panel using the DDNS host name over **HTTPS**.

12.2.4 SSH Remote Access


A **Public IP address** is required for SSH remote access. See here to verify whether your ISP assigns you a public IP address. If your router is behind NAT, configure port forwarding (**port 22**) on the upstream router for SSH remote access.

Follow the steps below to enable SSH remote access for your router.

1. On the Dynamic DNS page, toggle on **Enable DDNS**, agree to the **Terms of Services & Privacy Policy**, then click **Apply**.

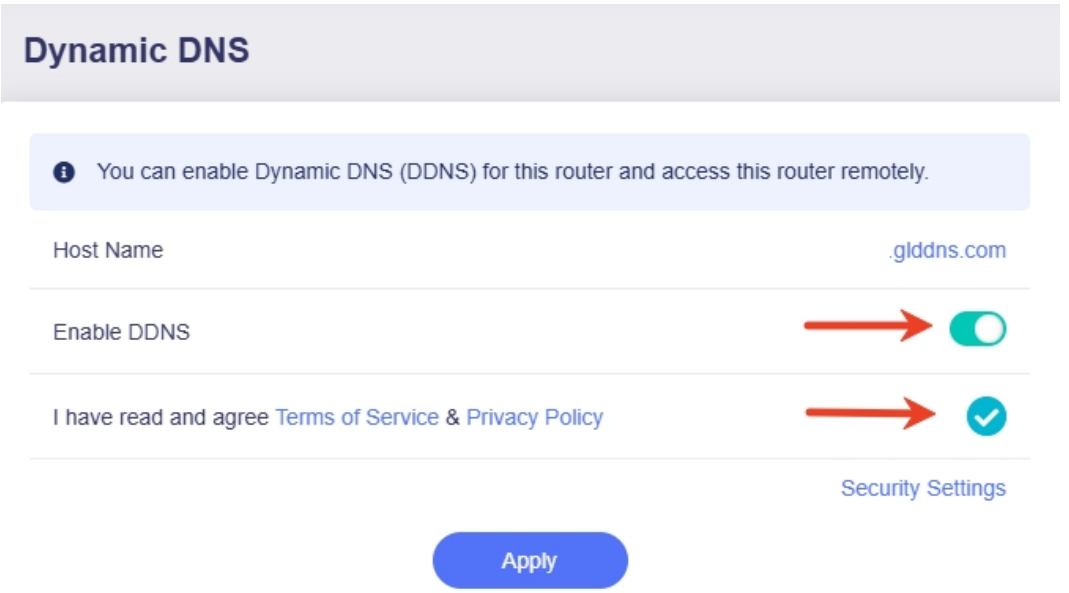

2. In the web admin panel, go to **SYSTEM** > **Security** > **Remote Access Control**. Enable **SSH Remote Access**, and click **Apply**.

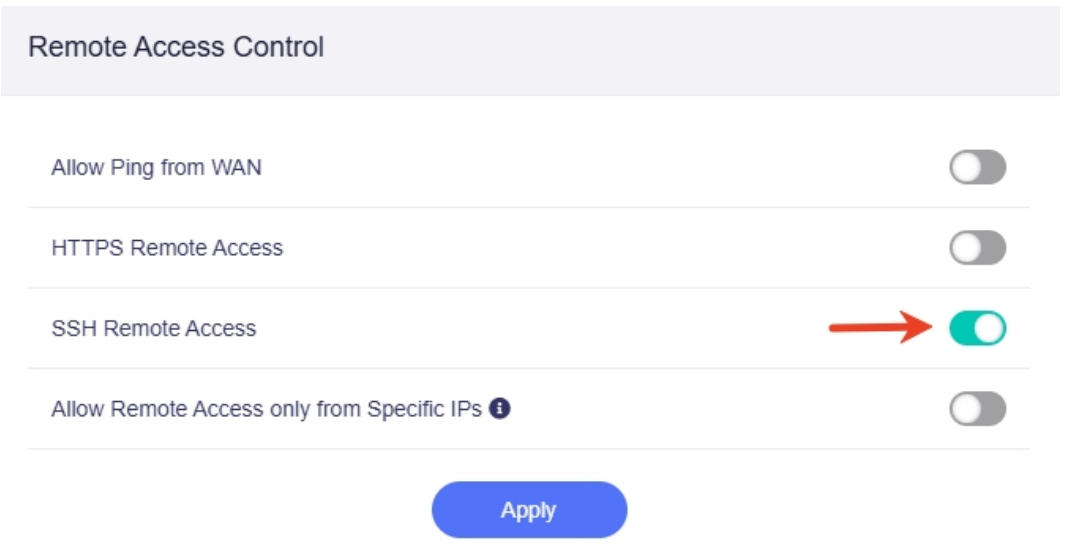

Once enabled, you can access the router's admin panel from anywhere using the DDNS host name over SSH, e.g., **ssh root@xxxxxxx.glddns.com**. If port forwarding is configured, access it as **ssh root@xxxxxxx.glddns.com:external_port** (replace the external_port with your actual port number).

12.3 Network Storage


Network storage enables wireless file sharing across devices by connecting a USB drive or SD card to your router. The router converts the storage device into a shared network drive, accessible to all Wi-Fi-connected devices.

Flint 3 is equipped with a USB port, compatible with USB flash drives and portable external hard drives. You can configure Samba, WebDAV, or DLNA for these storage devices with common formats such as NTFS, FAT32, and EXT4.

Note: The power consumption of USB hard drive is quite high. Use it with an external power supply, otherwise it may cause malfunction.


12.3.1 Connect Storage

1. Connect your storage device to the router.
   - For a USB drive: Plug it directly into the USB port.
   - For an external hard drive: Connect it to a separate power supply (if required), then plug it into the router.
2. Log in to your router's web admin panel, navigate to **APPLICATIONS** > **Network Storage**. You can enable file transfer services, and manage the shared folder here.
3. If the storage device is detected, the **Disk Management** will be displayed as follows.

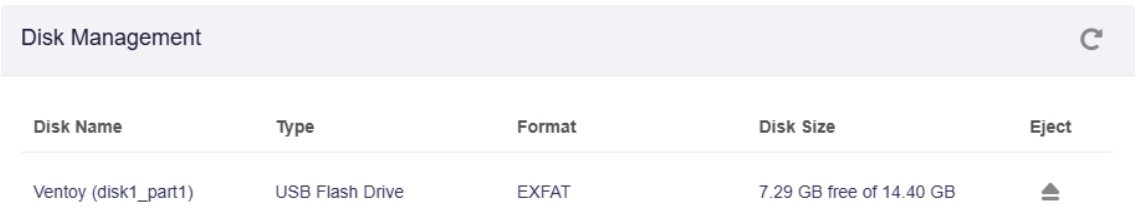


12.3.2 Set Up Samba

1. In the **File Services** section, toggle on **Enable Samba**, and click **Apply**.

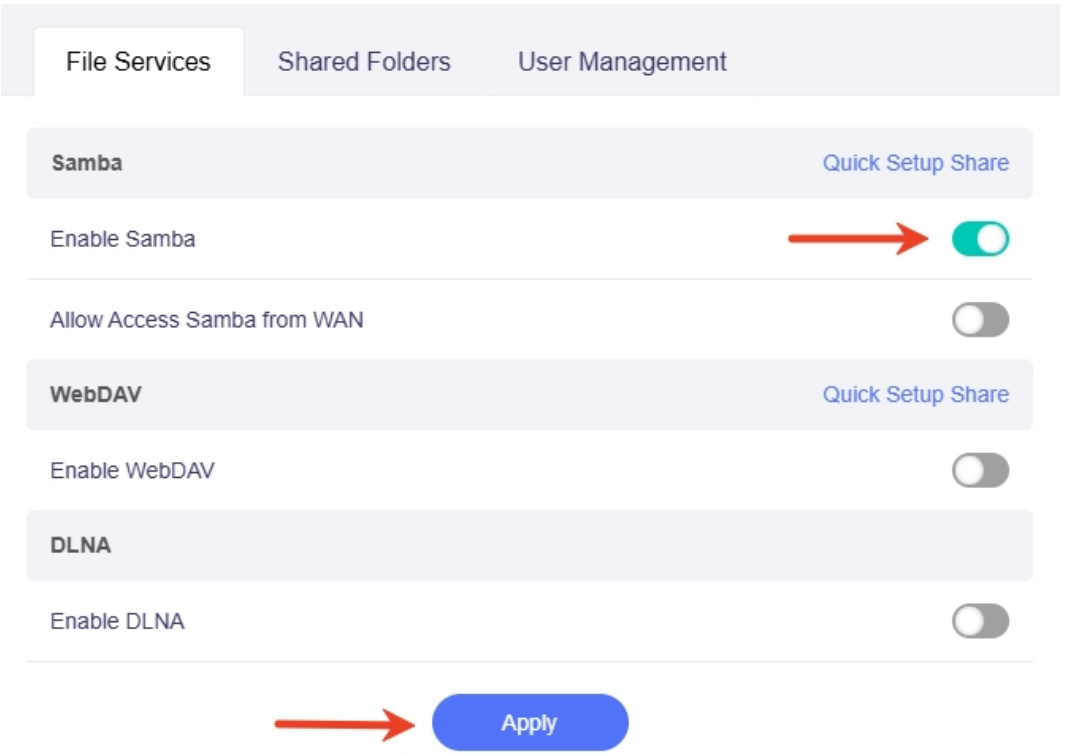


   - **Allow Access Samba from WAN**: Enable it if you want upstream devices to access the Samba service.


2. Click **Quick Setup Share** to set the shared link.

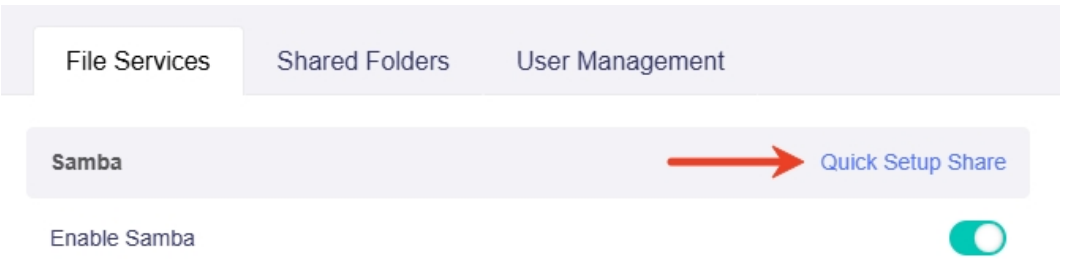


3. Add a user and click **Next**. This step will be skipped if you already have an account.

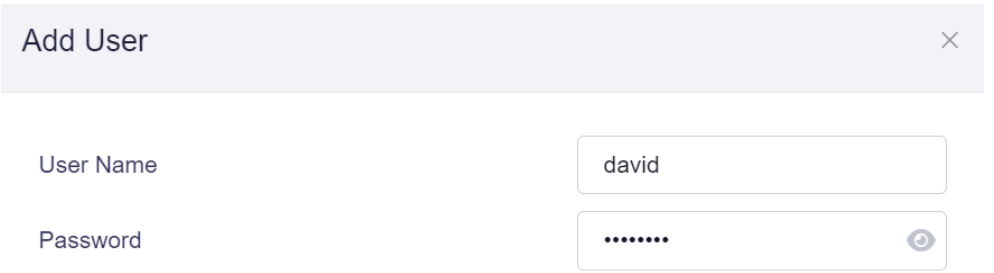

4. Click the triangle icon to show all folders. Select a folder for sharing, then click **Next**. If you want to share the whole disk, click the disk name (e.g., disk1_part1).

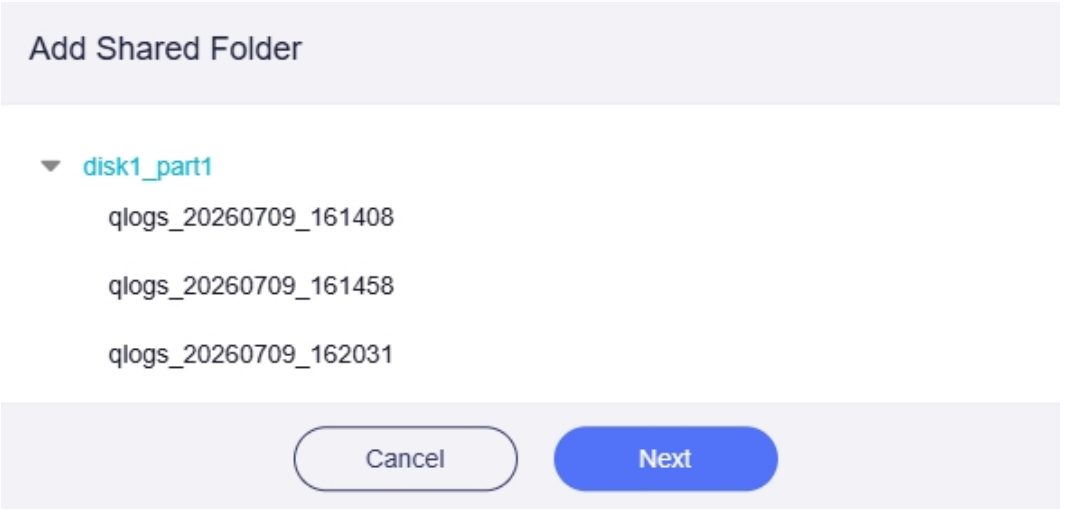


5. Set up the shared folder.
   The user created in the previous step will be added to **Read-Only User** by default. If you want this user to be able to write or delete files, remove it from Read-Only User and add it to **Read-Write User**, then click **Apply**.

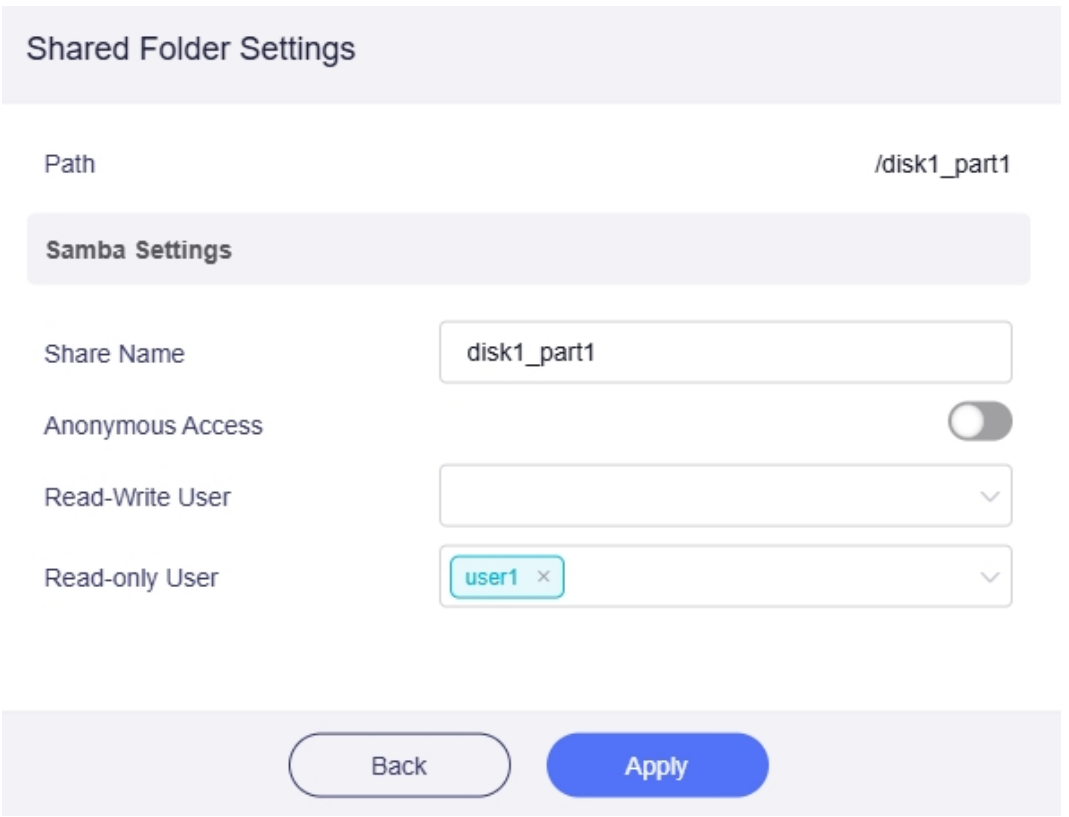

Tip: For security reasons, it is not recommend to enable Anonymous Access.

6. Obtain the folder access link.


   The page will display the links for Windows and Unix-like OS. The Unix-like system includes Android, iOS, macOS, Ubuntu, etc. Now you can access your shared folder over Samba service via these links.

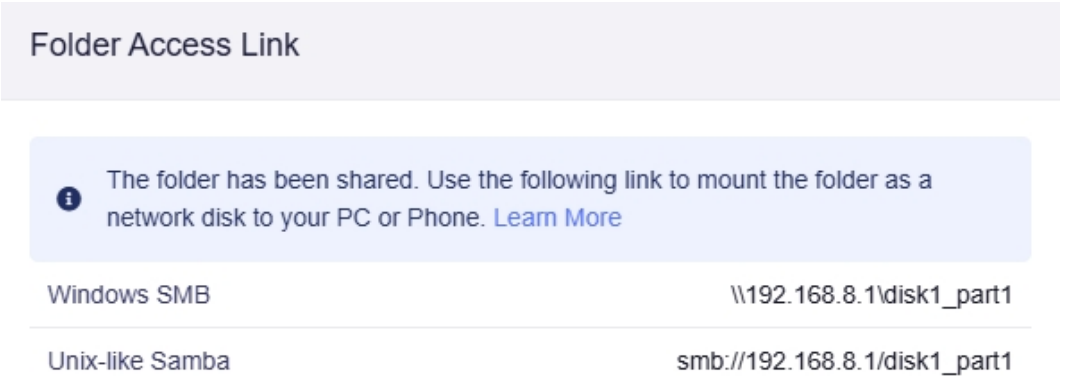

Note: If you enable **Allow Access Samba from WAN** and access the shared folder from upstream network, replace the router IP (default: 192.168.8.1) in the access link with your router's WAN IP, which can be found on the INTERNET page of the web admin panel.


12.3.3 Set Up WebDAV

1. In the **File Services** section, toggle on **Enable WebDAV**, and click **Apply**.

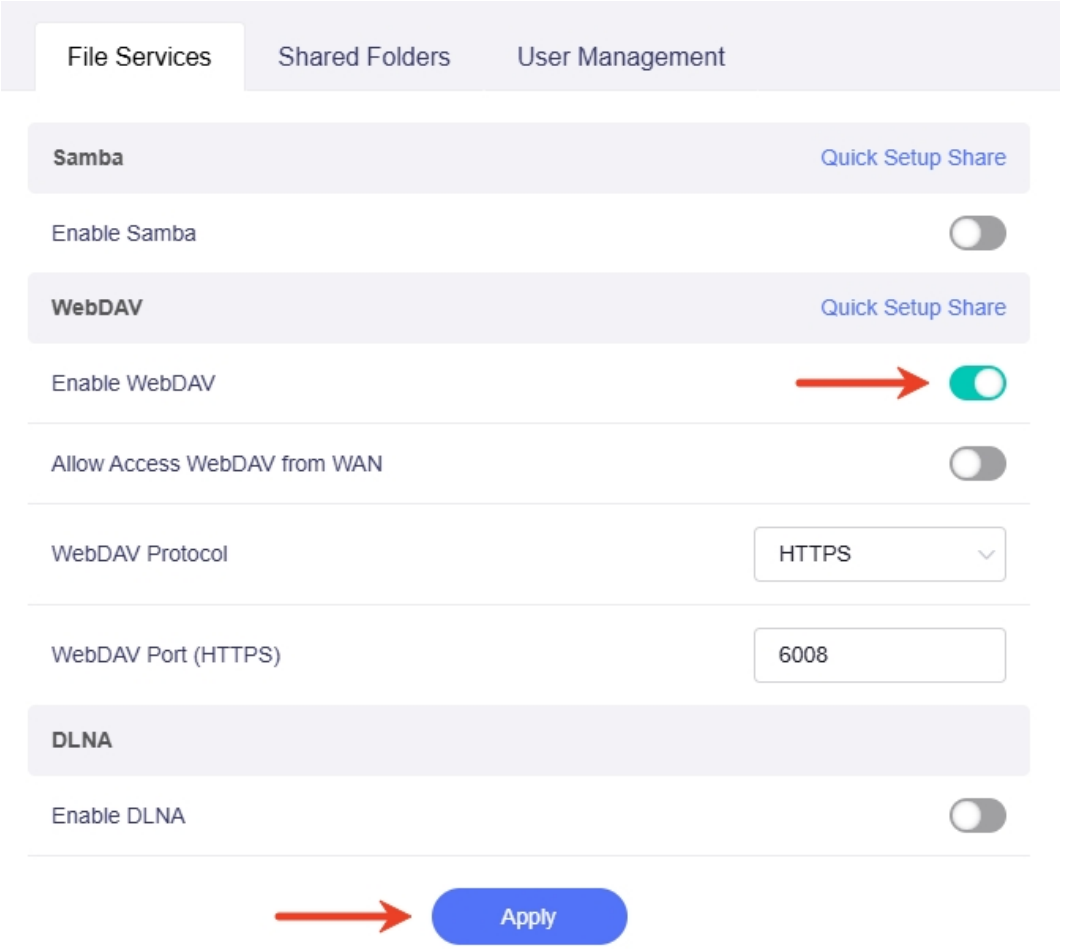


- **Allow Access WebDAV from WAN**: Enable it if you want the upstream devices to access the WebDAV service.
- **WebDAV Protocol**: HTTP is unencrypted; use it at your own risk. HTTPS is encrypted and it uses self-signed certificate.
- **WebDAV Port**: No need to modify the port number unless there's a conflict. The recommended port number range is 1024 - 65535.


2. Click **Quick Setup Share** to set the shared link.

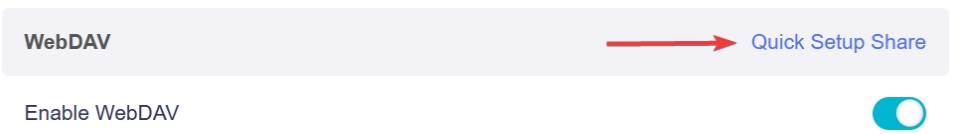


3. Add a user and click **Next**. This step will be skipped if you already have an account.

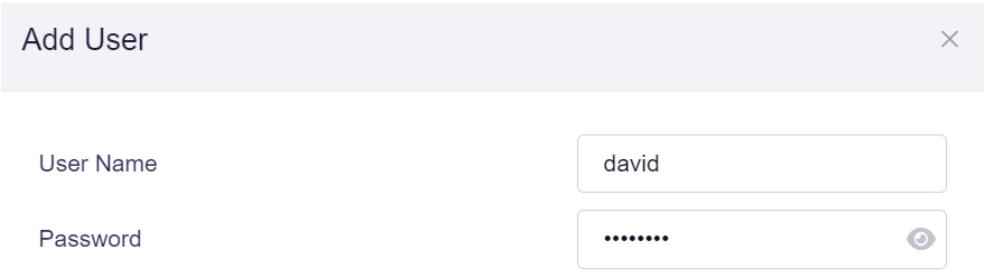

4. Click the triangle icon to show all folders. Select a folder for sharing. If you want to share the whole disk, click the disk name (e.g., disk1_part1).

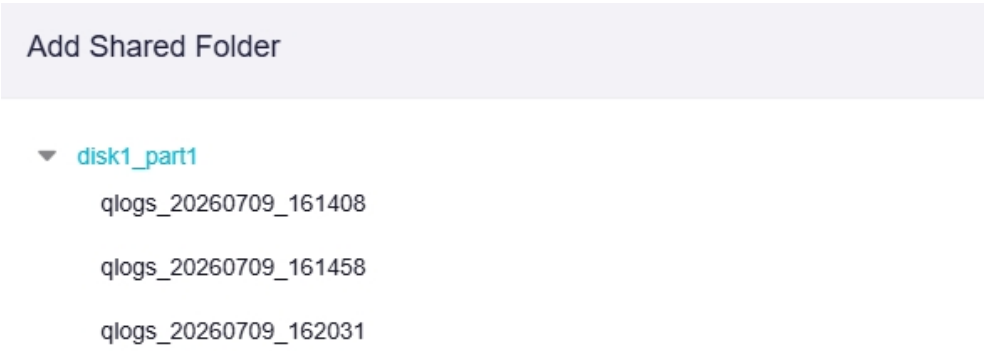


5. Set up the shared folder.
   The user created in the previous step will be added to **Read-Only User** by default.
   If you want this user to be able to write or delete files, remove it from Read-Only User and add it to **Read-Write User**, then click **Apply**.

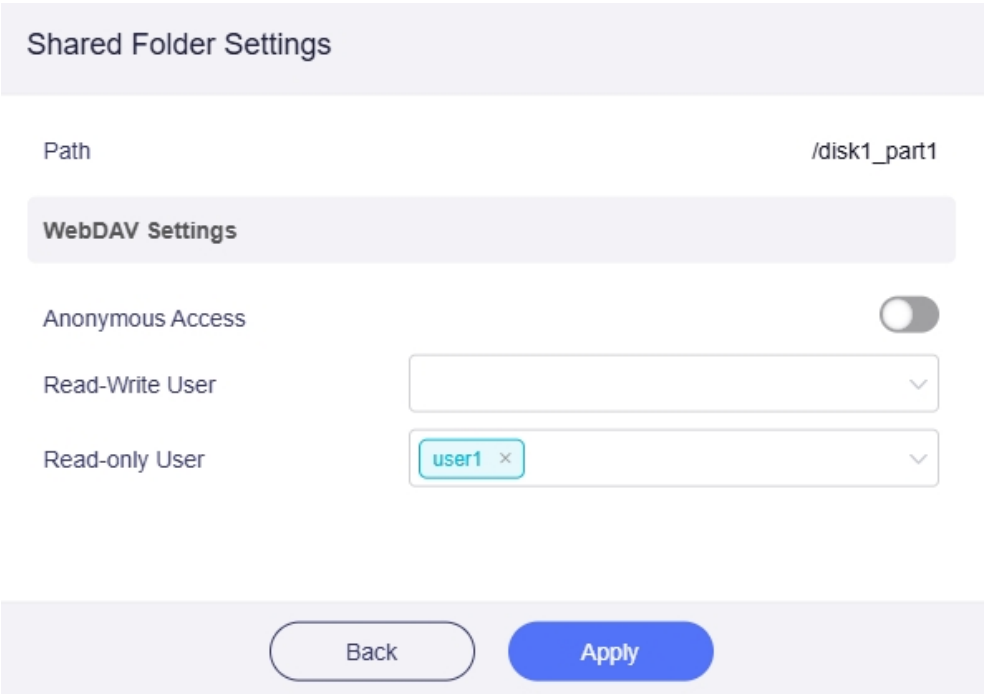

6. Obtain the folder access link.


   The page will display the links for Windows and Unix-like OS. The Unix-like systems includes Android, iOS, macOS, Ubuntu, etc. Now you can access your shared folder over WebDAV service via these links.

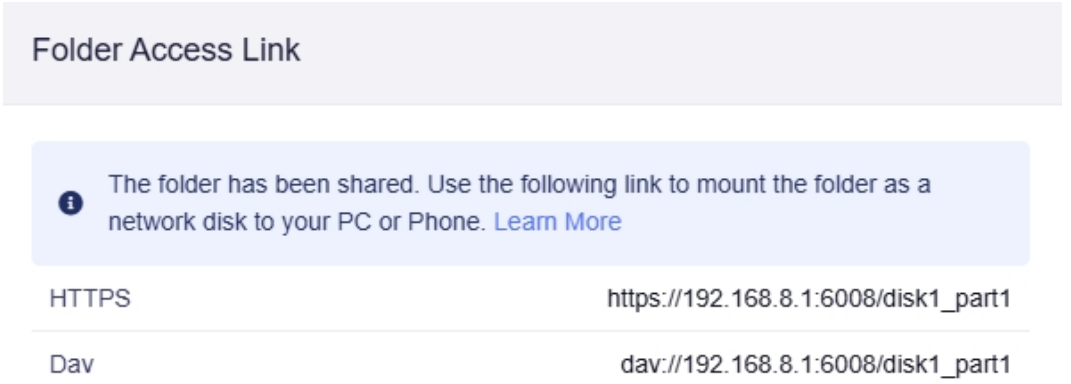


Note: If you enable **Allow Access WebDAV from WAN** and access the shared folder from upstream network, replace the router IP (default: 192.168.8.1) in the access link with your router's WAN IP, which can be found on the INTERNET page of the web admin panel.

12.3.4 Set Up DLNA

1. In the **File Services** section, toggle on **Enable DLNA**, and click **Apply**.

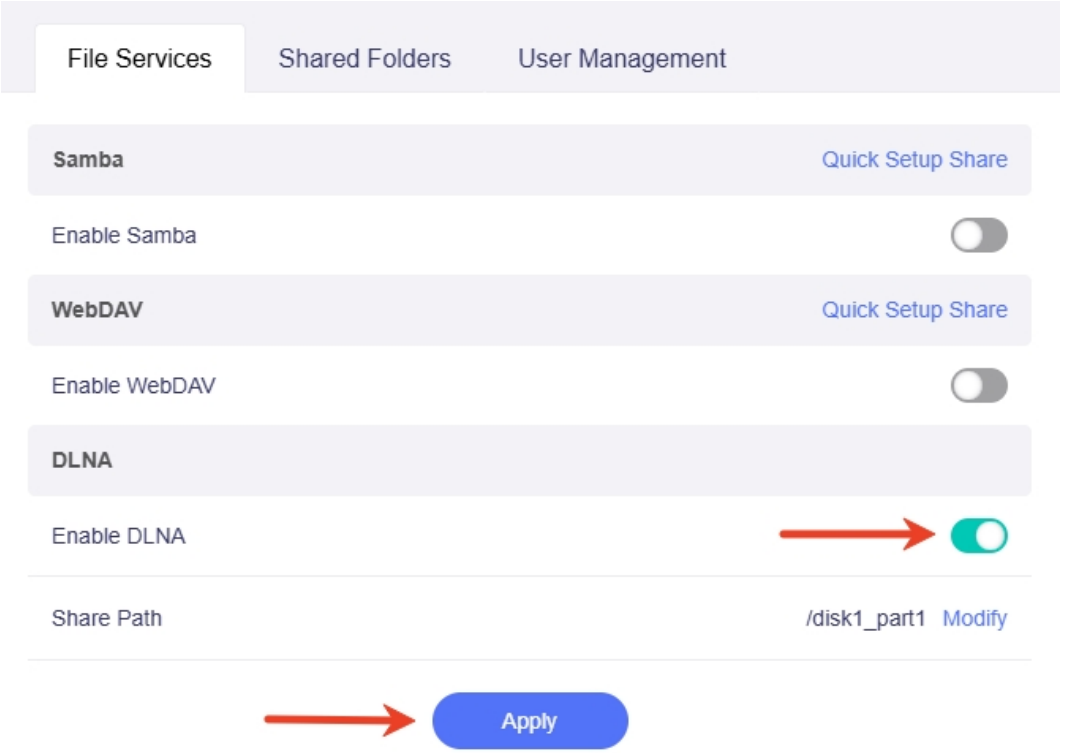

2. Modify the Share Path on the right if needed.

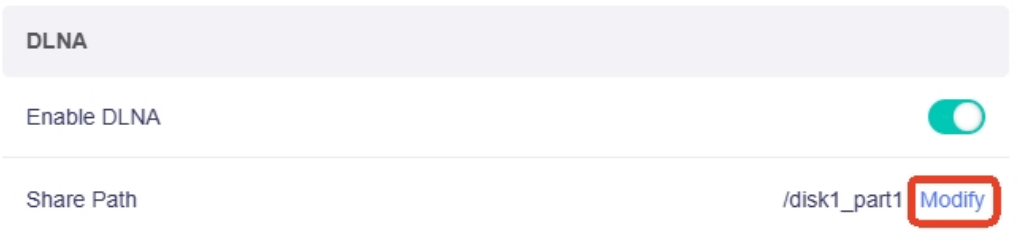


3. Connect your smart TV to the router. It will find the DLNA server automatically.

12.4 AdGuard Home

AdGuard Home is a network-wide ad-blocking and tracking-prevention software. Once set up, it will cover all client devices with no additional client-side software required.


Follow these steps to set up AdGuard Home.

1. Log in to the router's web admin panel, navigate to **APPLICATIONS** > **AdGuard Home**. Toggle on **Enable AdGuard Home** and click **Apply**.

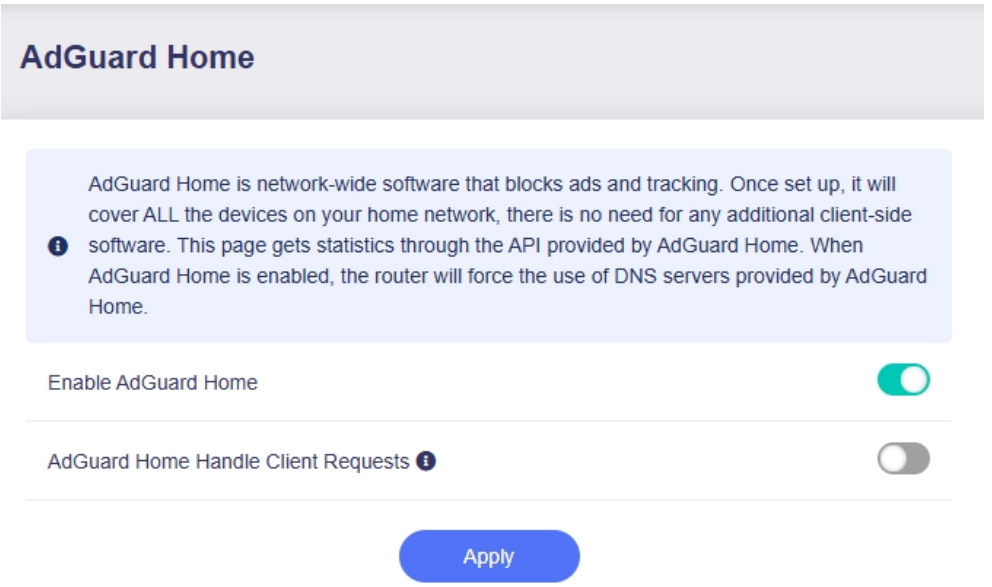


   - **AdGuard Home Handles Client Requests**: If enabled, DNS queries from client devices will be handled directly by AdGuard Home, but this will cause VPN policies based on domains to fail.


2. The page will automatically load DNS statistics (queries, blocked domains, etc.) via the API provided by AdGuard Home.

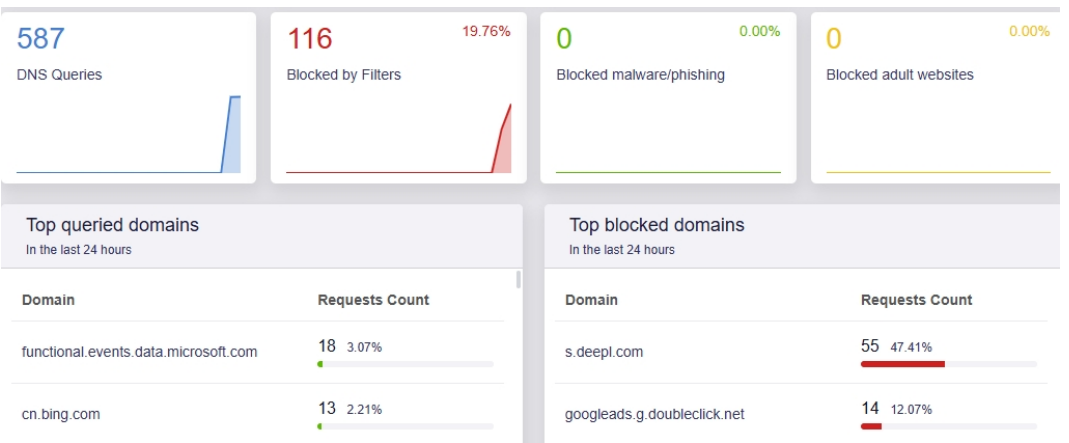

3. Click **Settings Page** to configure advanced settings for AdGuard Home.

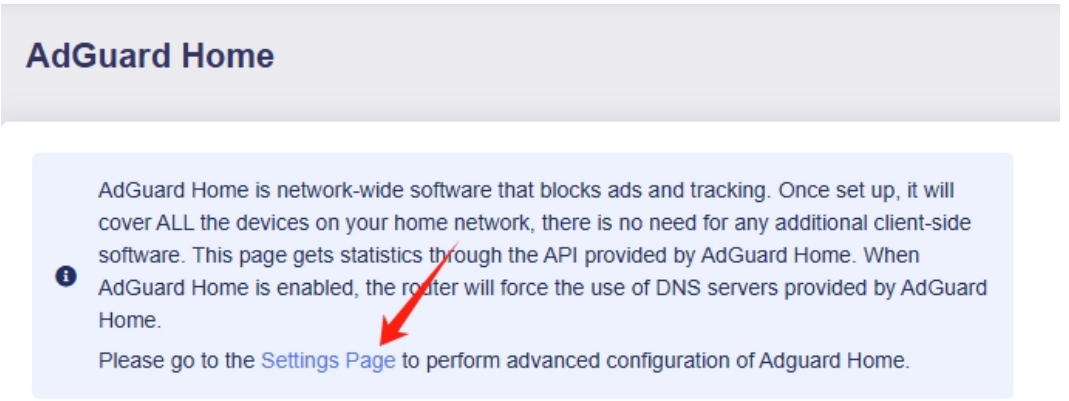

4. You will be redirected to AdGuard Home's settings page. Please visit the [AdGuard Home Support Center] for assistance.

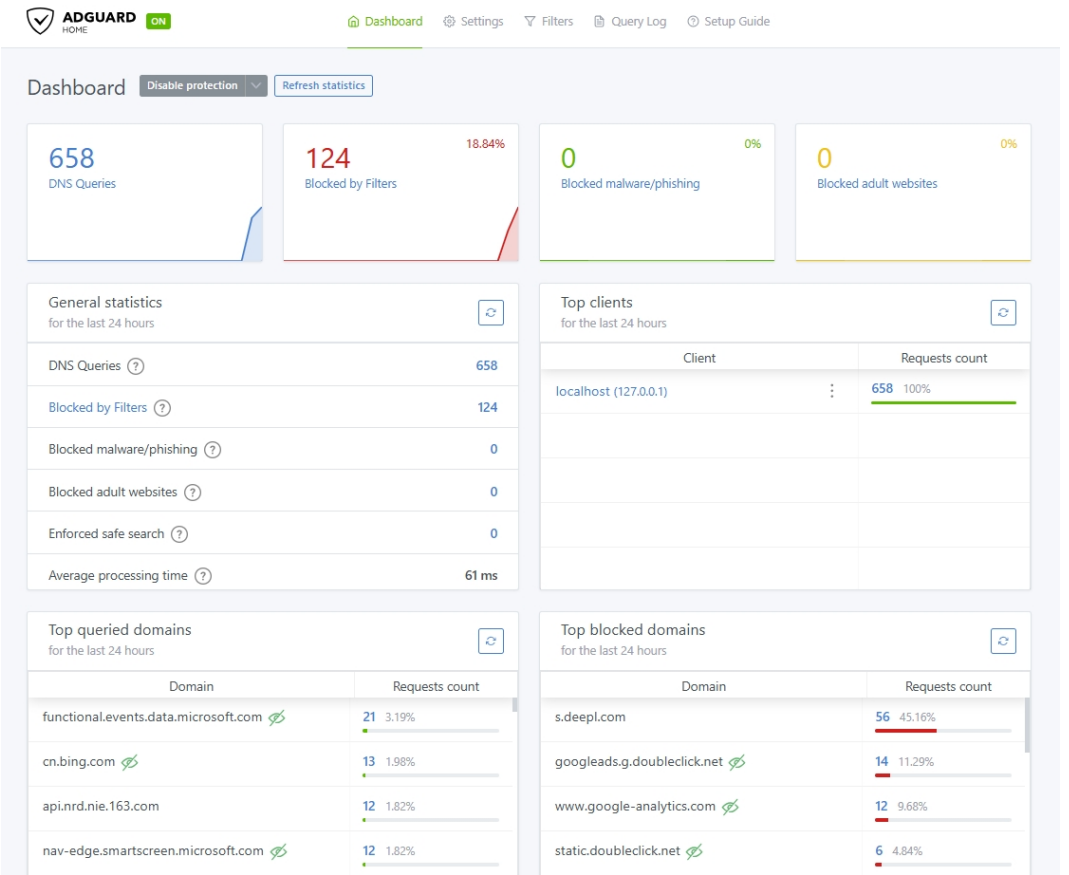


12.5 Parental Control

Parental control is a way to keep children safe online by blocking inappropriate websites and limiting how long they use devices. It helps prevent access to harmful content, manage screen time, and ensure children use the internet responsibly.


12.5.1 Quick Setup

Follow these steps to set up Parental Control on GL.iNet routers.

1. Log in to the router's web admin panel and go to **APPLICATIONS** > **Parental Control.** Ensure the router time is accurate. If not, go to **SYSTEM** > **Time Zone** to synchronize it first.

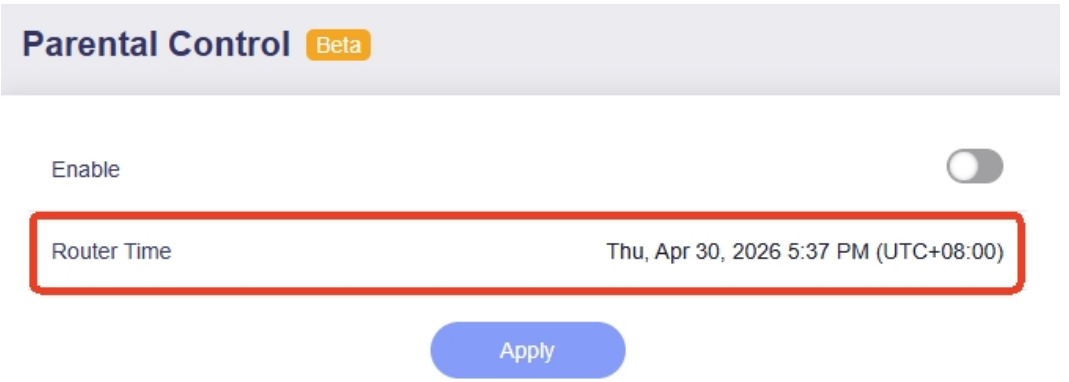

2. Enable Parental Control and click **Apply**. Then follow the setup wizard to set up Parental Control. You can also watch the setup video here.

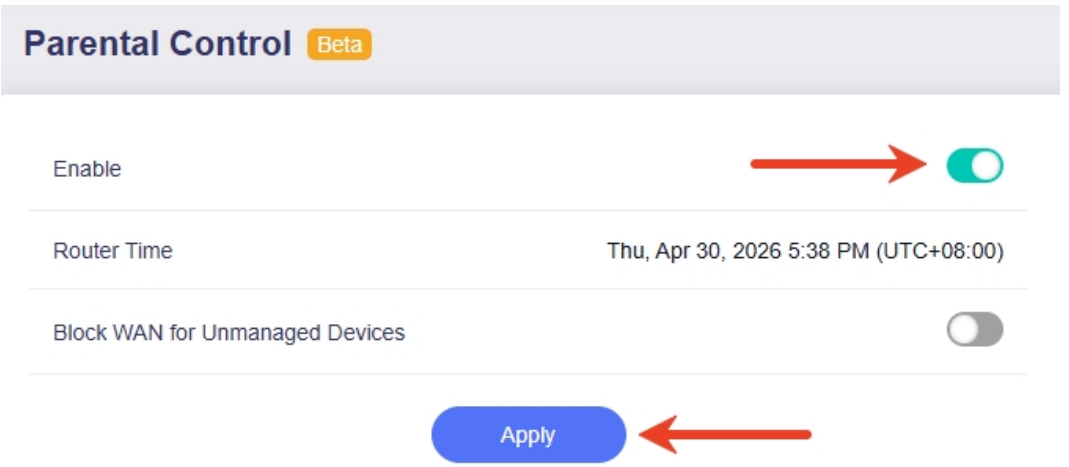


- **Block WAN for Unmanaged Devices**: Blocks internet access for all devices that are not on the Parental Control list.

Here is a use case for your reference.


Scenario: Devices in this profile are only allowed to access the Internet for study from 8 AM to 11 AM on weekdays, and for gaming from 6 PM to 8 PM on weekends. Internet access is blocked by default at all other times.

Setup Steps:

1. Create a profile and customize a name.

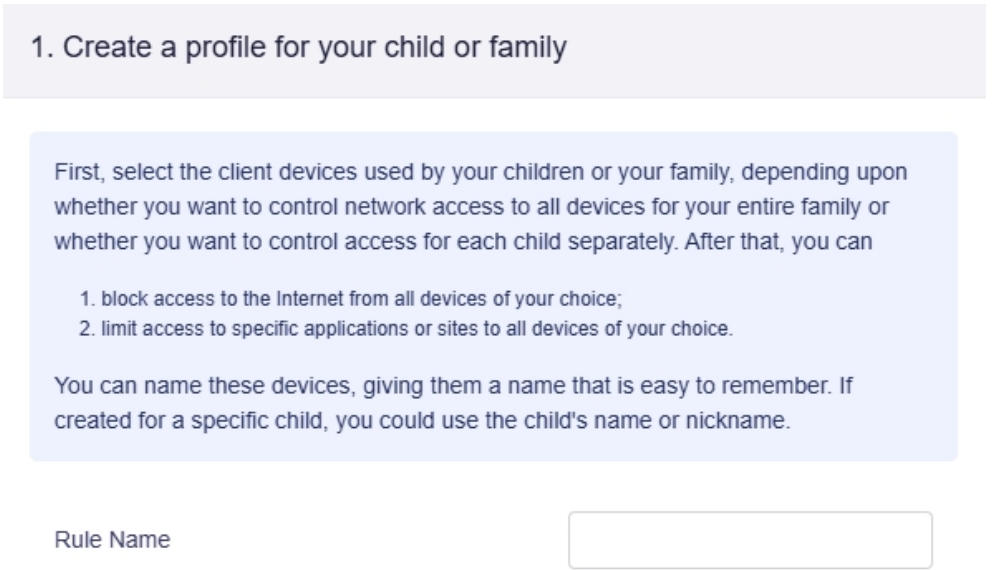


2. Select the devices you want to manage. Connect them to the router first. If they have not been connected to the router, add them manually by entering their MAC addresses.

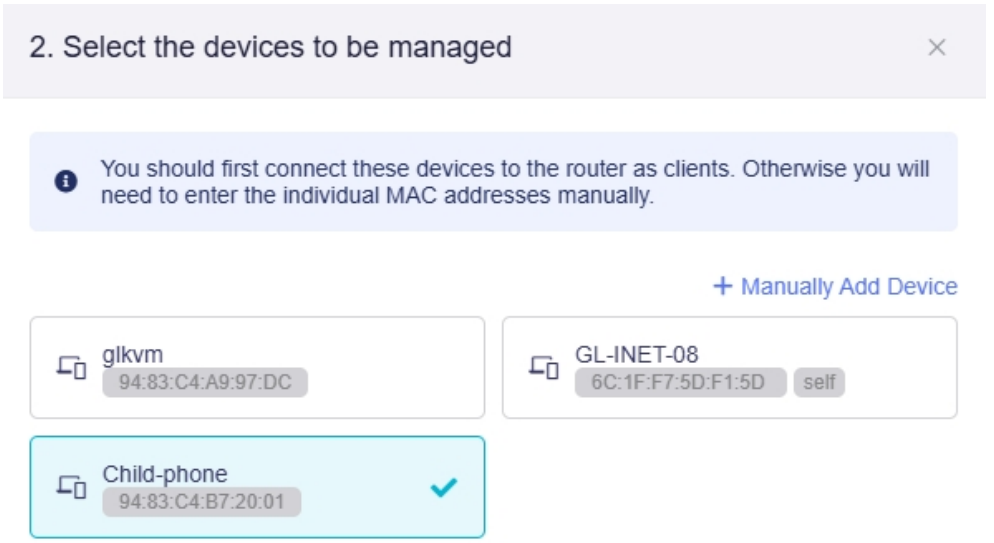


3. Set access limit.

   There are two default rulesets: **Block Internet Access** and **No Limit**.

Click **Add a New Ruleset** to create two more rulesets for later use: **Learning** and **Play**.

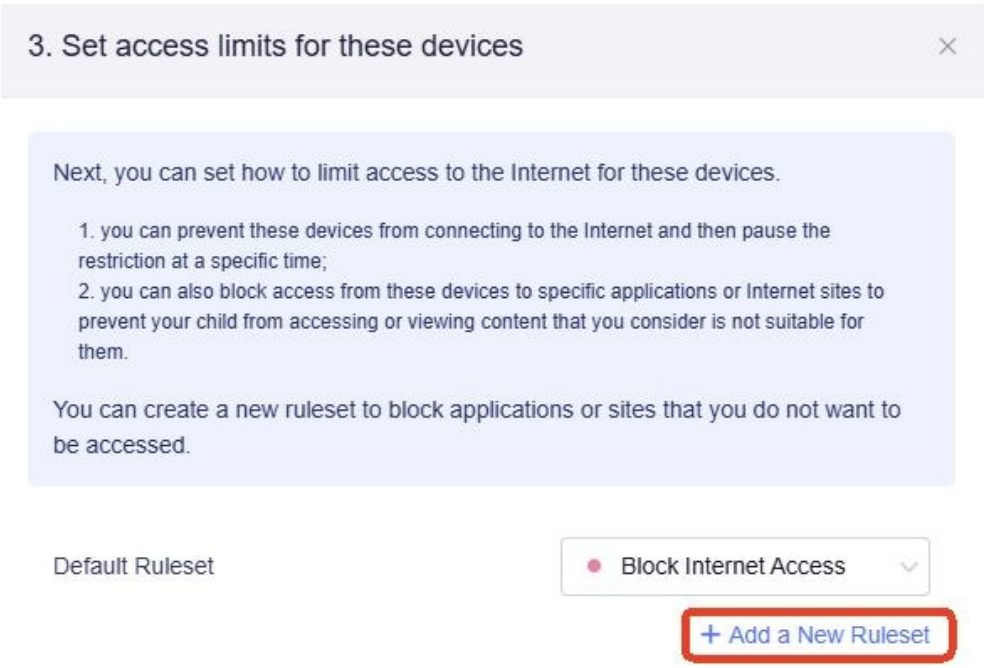


Specify the ruleset name (e.g., Learning) and color, enter the websites to block, then click **Apply**.

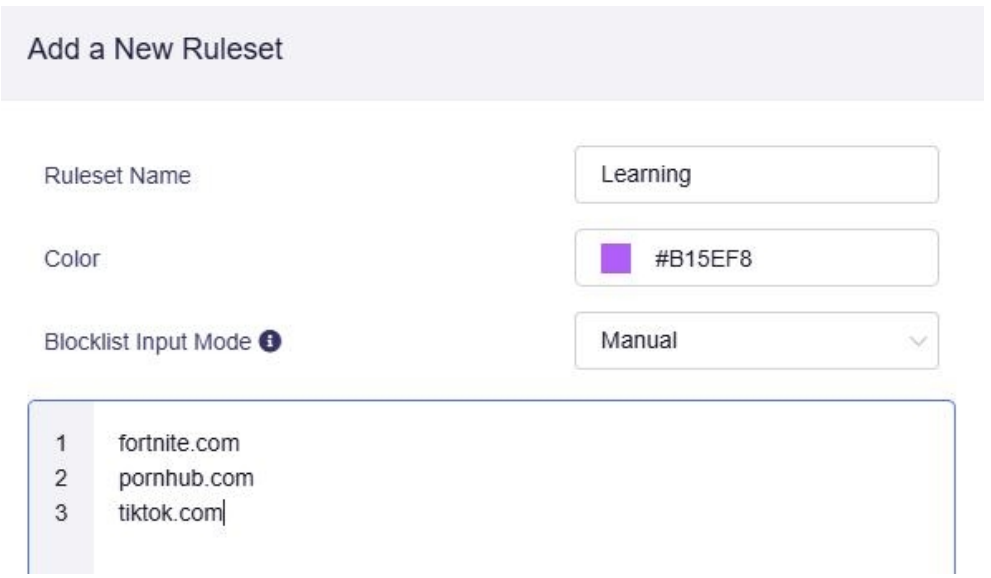


Note: The domain names entered in the blocklist should include their subdomains. For example, if "example.com" is entered, it also includes any subdomain, such as "subdomain.example.com".


Similarly, create another ruleset. Specify the ruleset name (e.g., Play) and color, enter the websites to block, then click **Apply**.

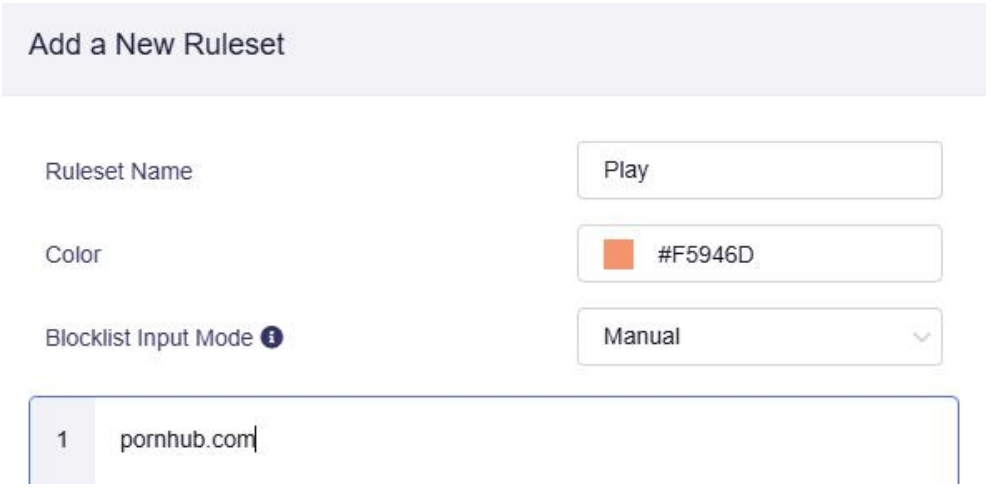


Upon applied, there will be a total of four rulesets. Select **Block Internet Access** as the **Default Ruleset**, and click **Finish**.

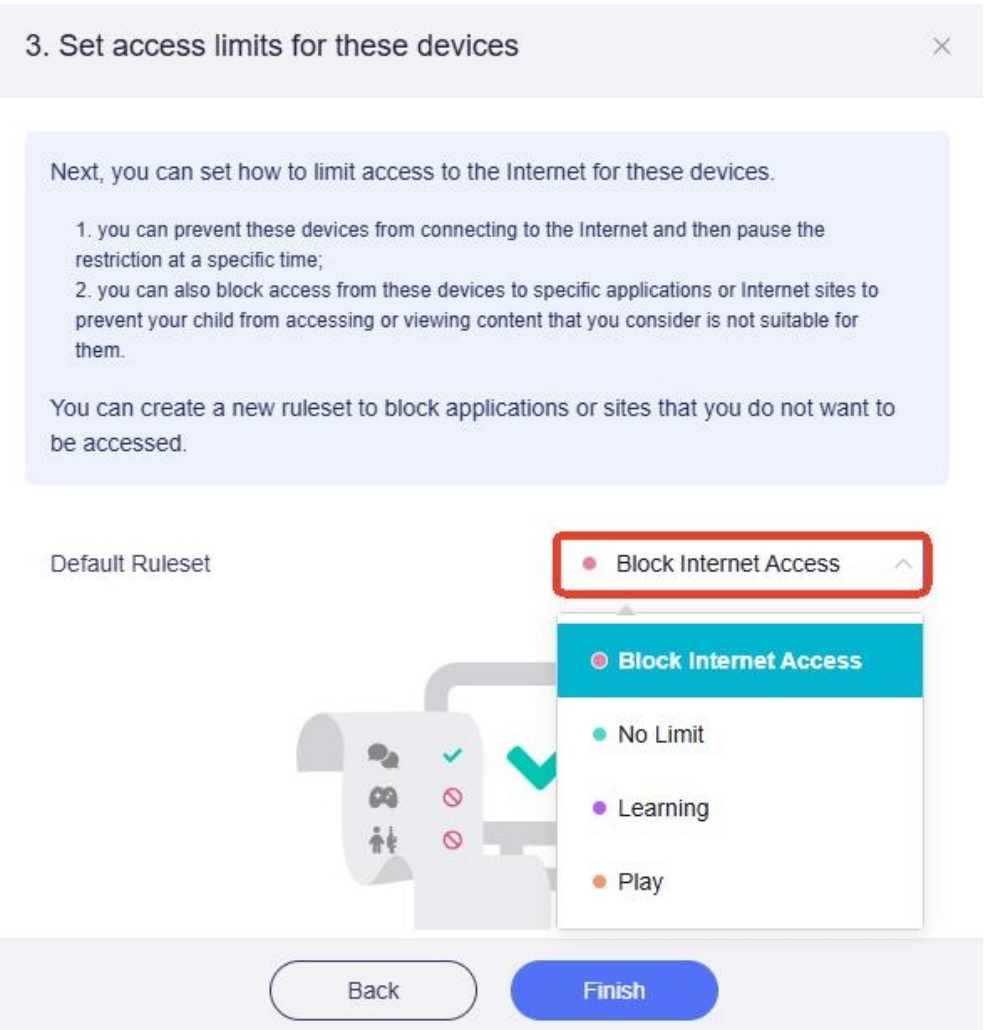


4. Next, set schedule for your profile. Click **Go to Set**.

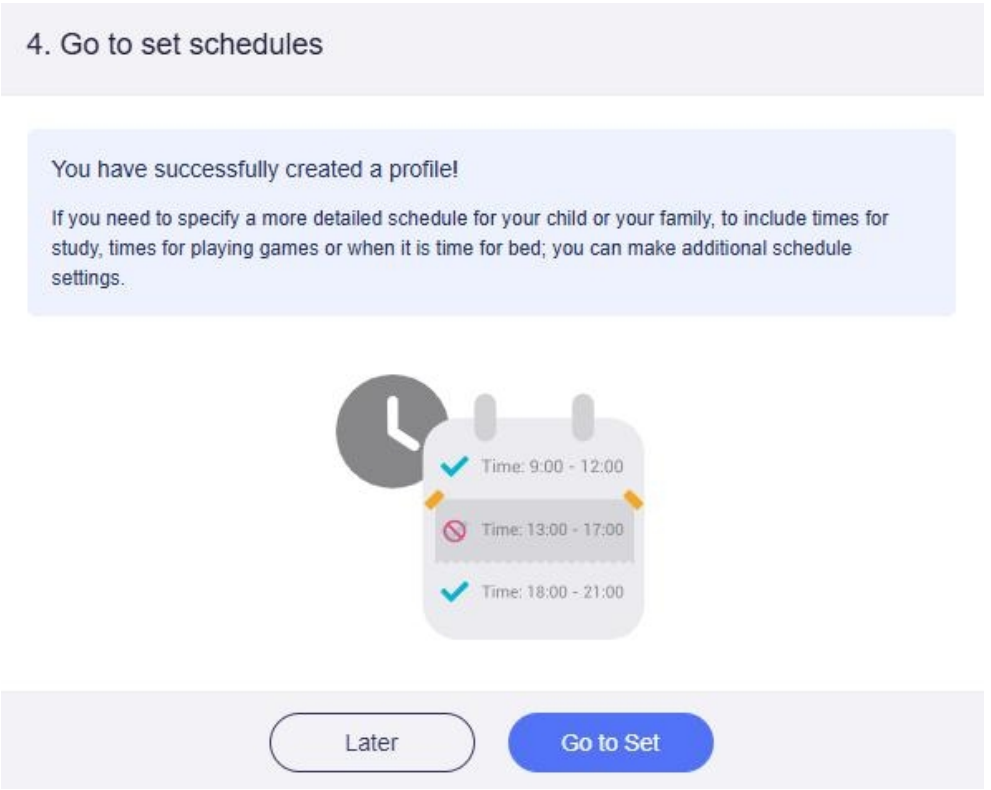


Add the **Learning** ruleset to the schedule. Set the **Execution Time** from 8 AM to 11 AM on weekdays, then click **Apply**.

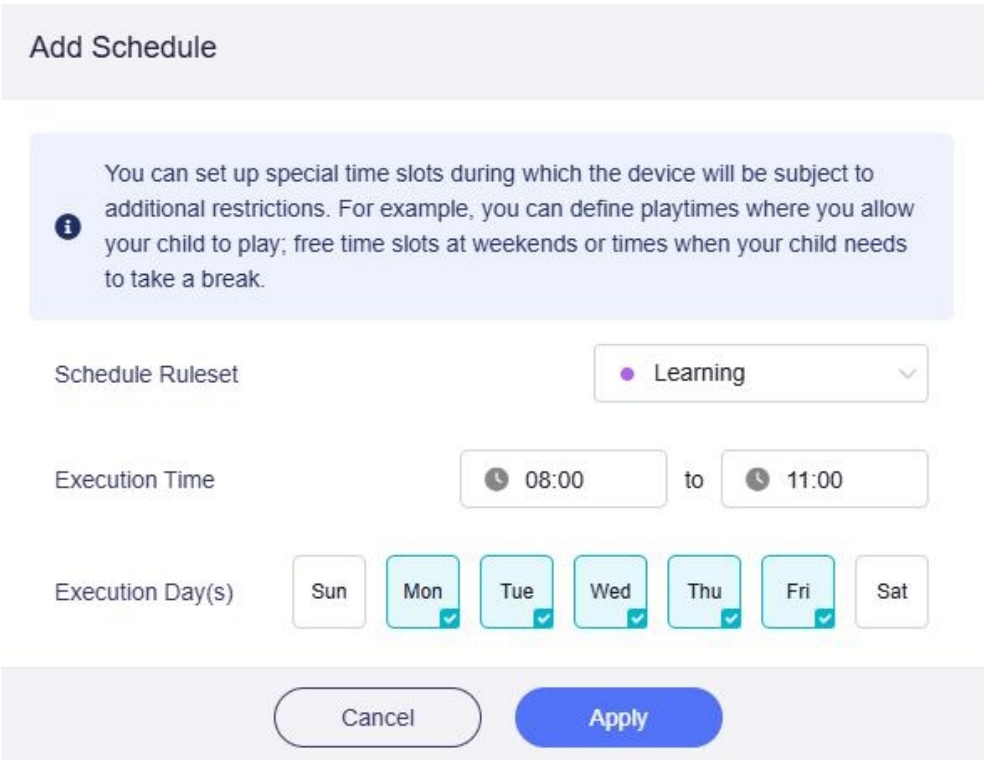


5. You will be redirected to the edit page of the created profile.

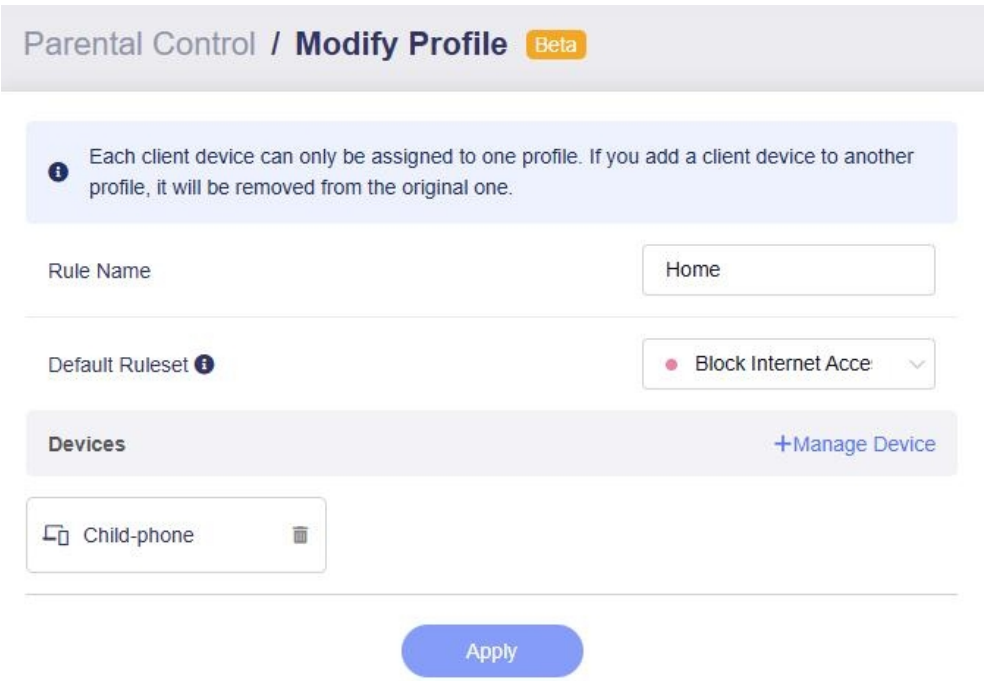


Move to the bottom, and you will see that a schedule has been created. Click the gear icon in the upper right and select **Add Schedule**.

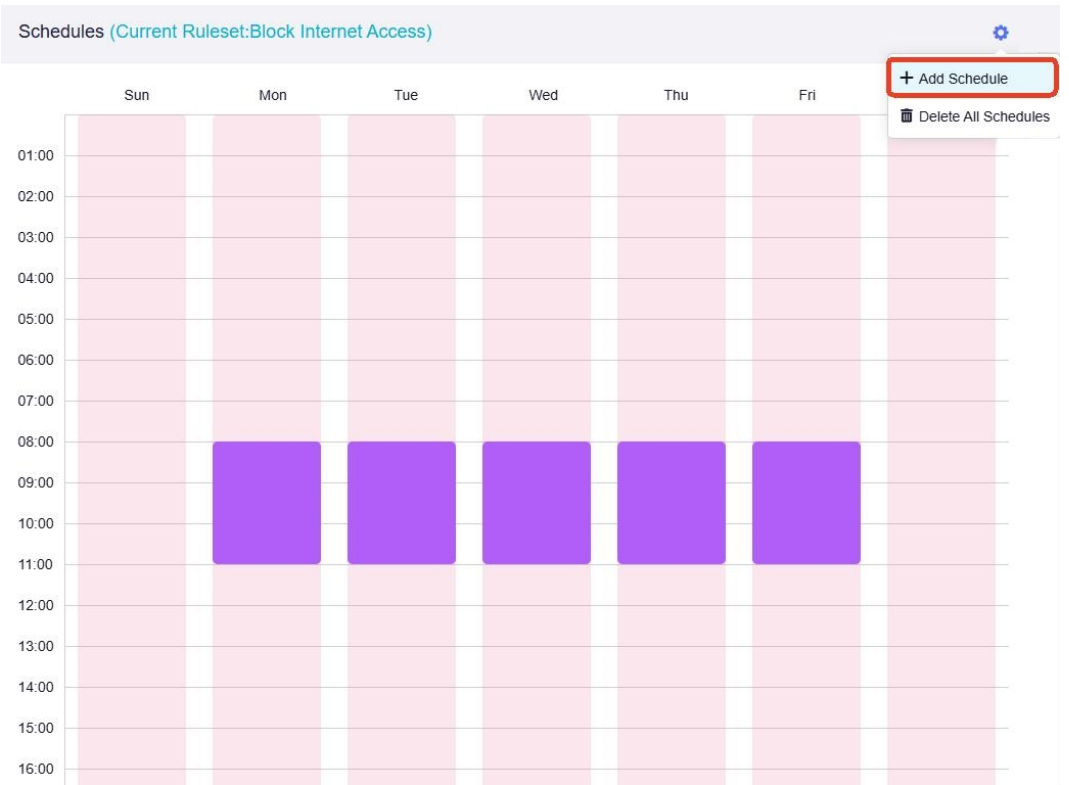

6. Add another ruleset **Play** to the schedule. Set the **Execution Time** from 6 PM to 8 PM on weekends, then click **Apply**.

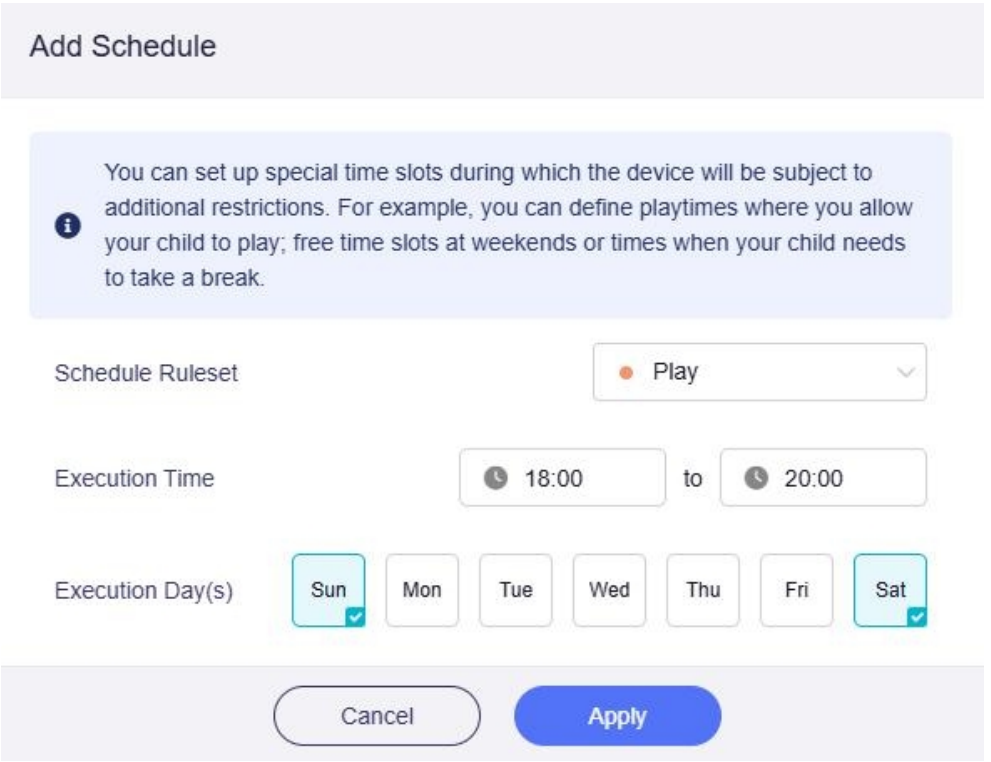


The Play ruleset will then be added into the schedule.

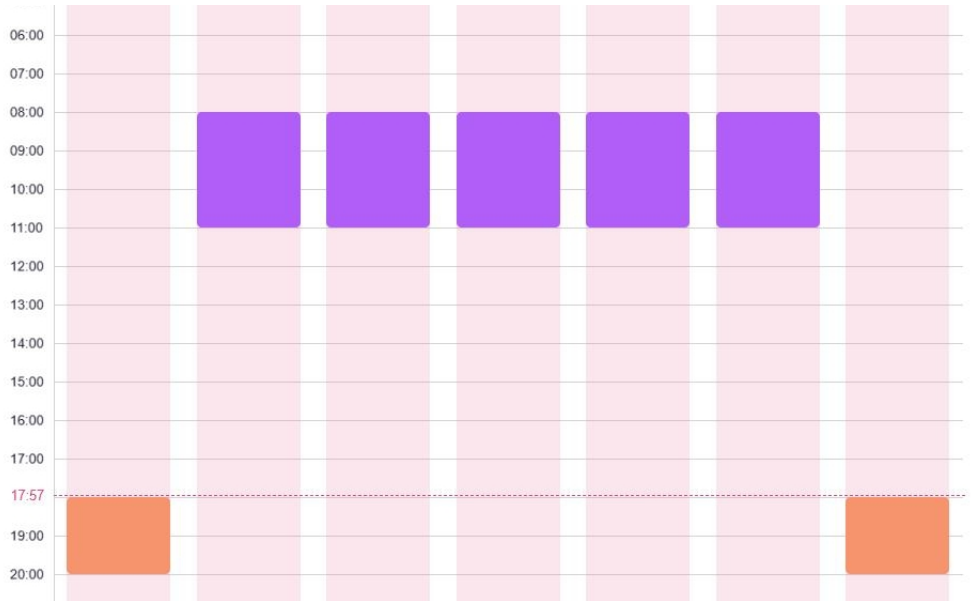


Tips:

- The red dashed line indicates the current time.
- You can modify the execution time by clicking on a certain ruleset in the schedule.

7. Click **Parental Control** at the top to return to the Parental Control page.

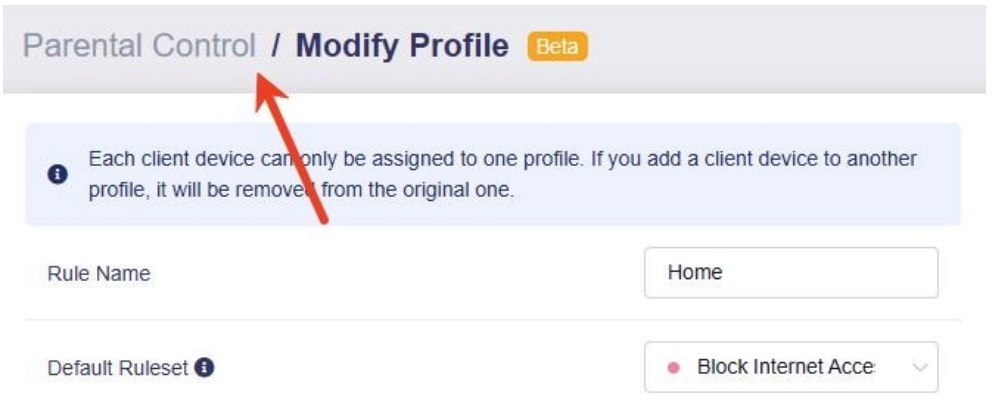

You will see the final configuration. Parental Control is now taking effect as per the schedule. You can modify existing profiles and rulesets, or add new ones if needed.

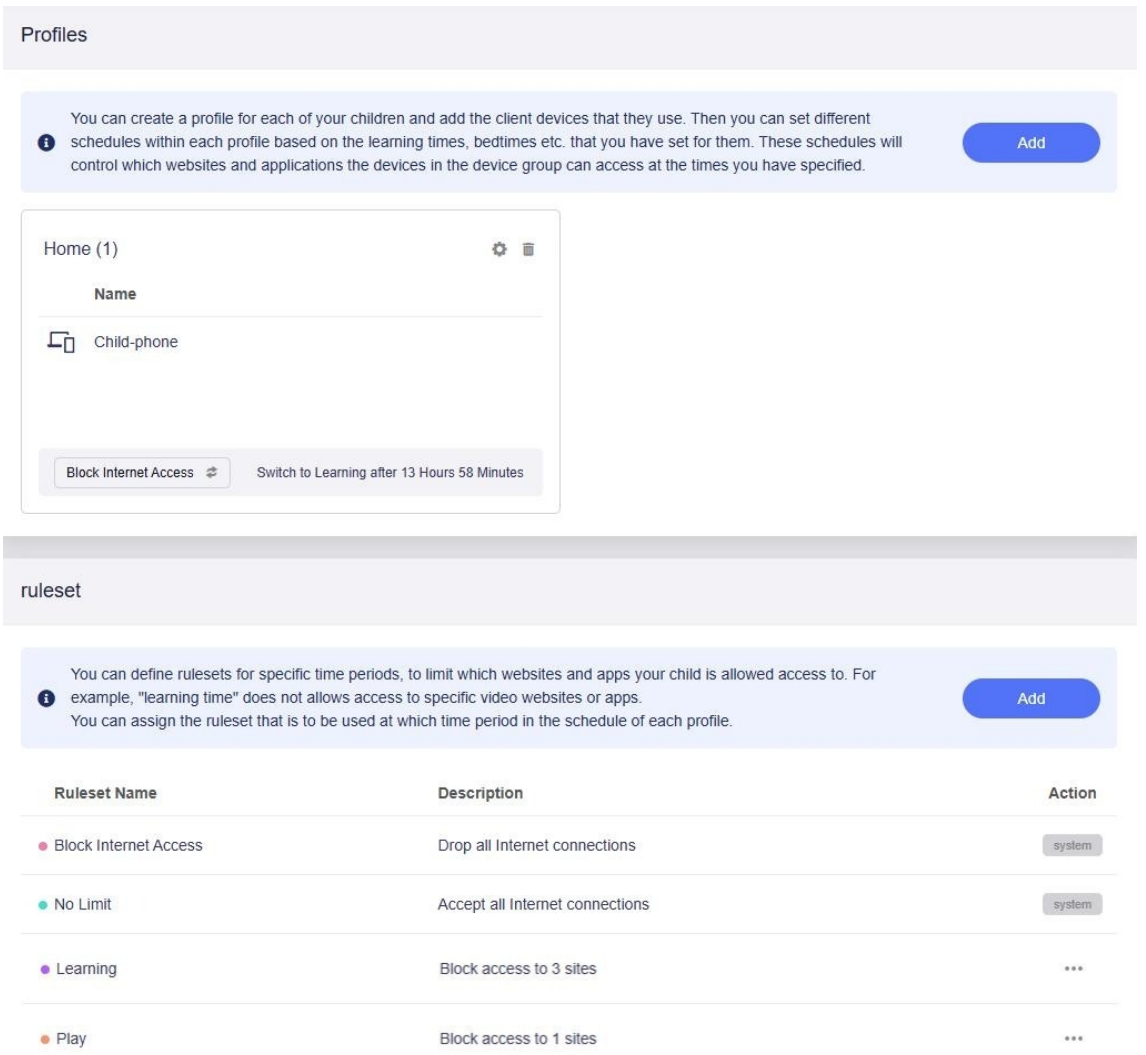

12.5.2 Troubleshooting

If your configured settings fail to take effect, check the following possible causes.

1. DNS cache issue.

   Browsers and operating systems maintain DNS caches, which may delay the application of configuration changes. Clear the DNS cache to apply changes immediately.
2. The profile schedule has not yet started.
3. The entered domain name may be incorrect.

   While a website’s public domain is easy to find, the API domains used by apps are often not publicly available. To locate the correct domain, use a packet capture tool such as Wireshark or look up the relevant domain information.

   For example, when blocking “www.google.com”, entering “google.com” delivers better results than “www.google.com”.
4. The target device uses a randomized MAC address for each network connection, which prevents access rules from taking effect. Disable random MAC address on the target device, then re-add the device to your profile.

12.6 Tailscale

Tailscale is a VPN service that makes your personal devices and applications accessible worldwide, securely and effortlessly. See here for more details.

The Tailscale feature on GL.iNet routers allows the router to join a Tailscale virtual network, enabling remote access to the router itself, as well as its WAN and LAN-side resources.


Note:

1. Since Tailscale is based on WireGuard, it is not recommended to use Tailscale with any of the following features or services simultaneously, as this may cause routing conflicts: OpenVPN Client, WireGuard Client, GoodCloud Site to Site, ZeroTier, AstroWarp.
2. This feature is currently in beta, and may have some bugs.


12.6.1 Set Up Tailscale

Here is an example of using GL-MT2500 to set up Tailscale network.


1. Register a Tailscale account first and bind one or two devices to your Tailscale account for testing purposes. After binding, you will see your devices in the Tailscale Console.

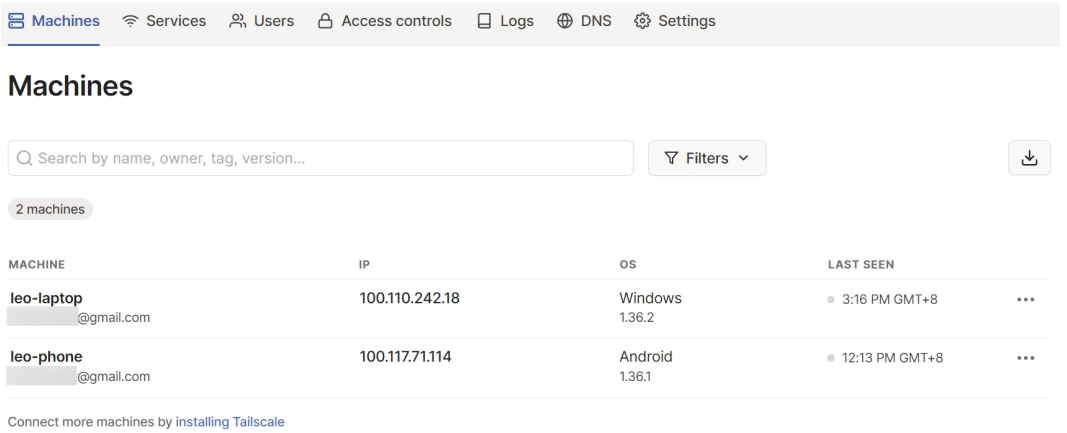

2. Log in to your router's web admin panel and navigate to **APPLICATIONS** > **Tailscale**. Toggle on **Enable Tailscale** and click **Apply**.

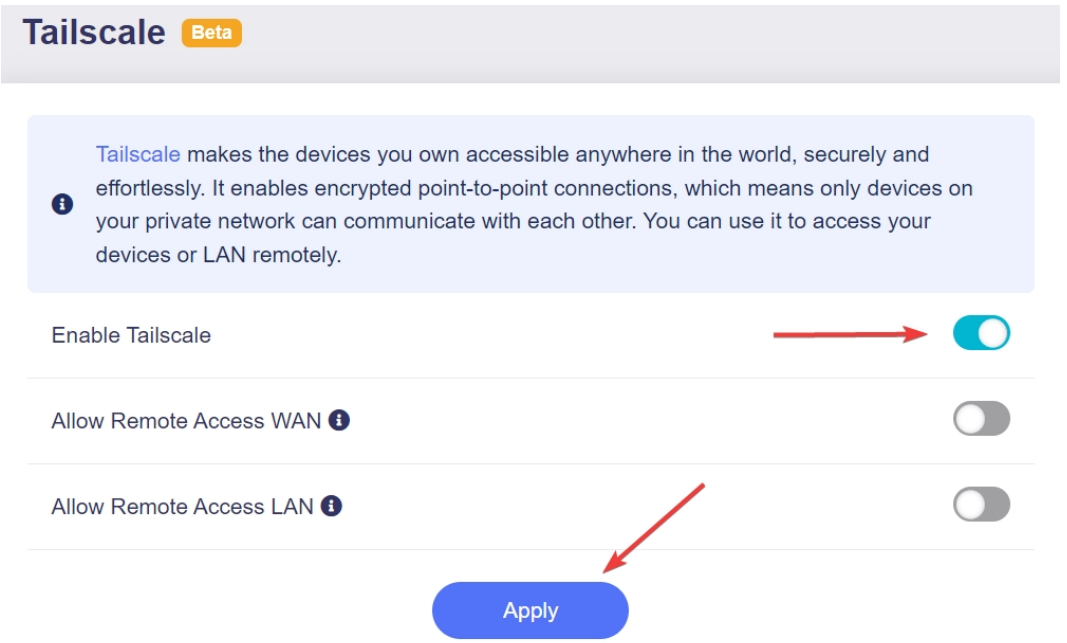


3. The page will prompt you to bind the device. Click **Device Bind Link**.

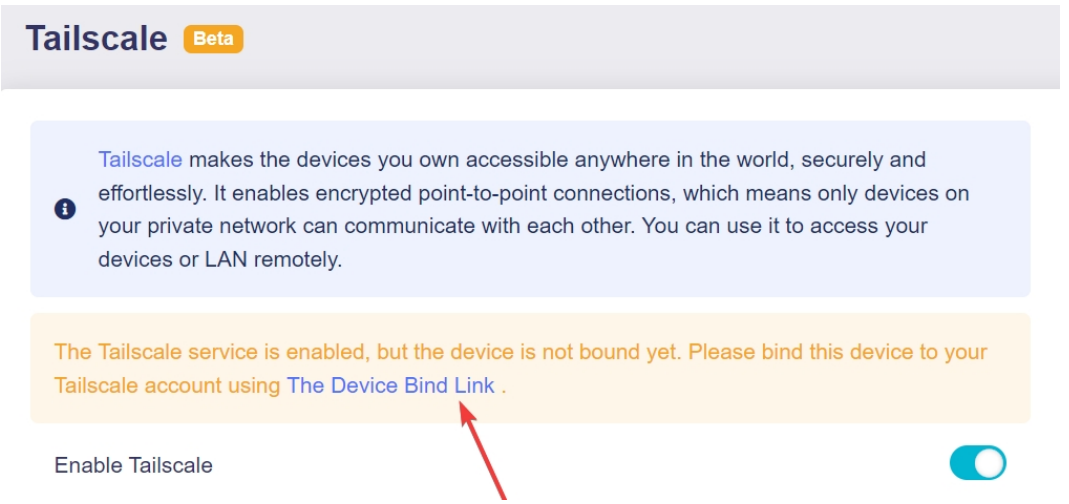


4. In the pop-up window, click the link and log in with your Tailscale account.



5. Once logged in, you will be asked to confirm the device. Click **Connect**.

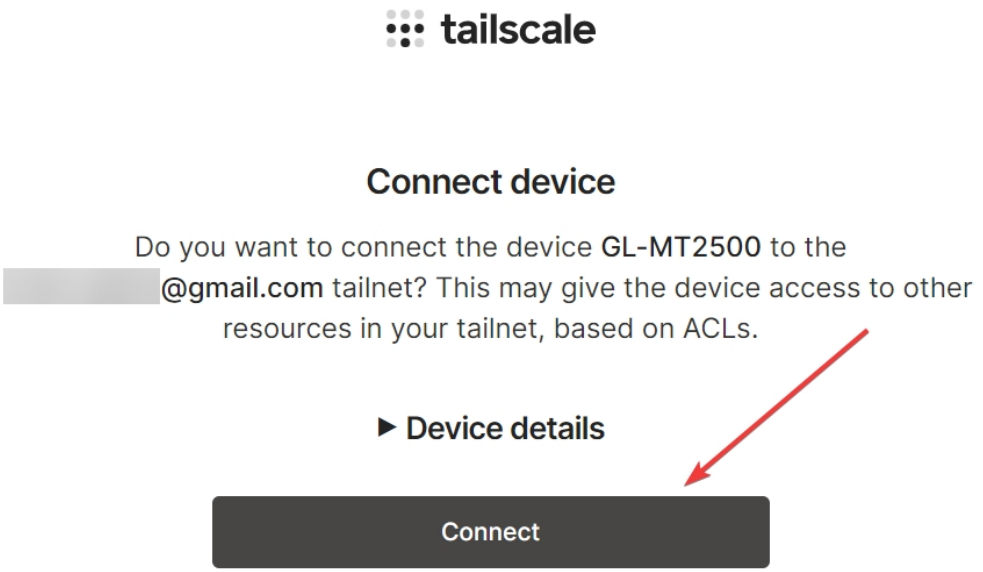

6. You will then be redirected to the Tailscale admin console. Now the router has been added into the Tailscale virtual network, and it can be accessed remotely by the Tailscale virtual IP 100.88.54.21.

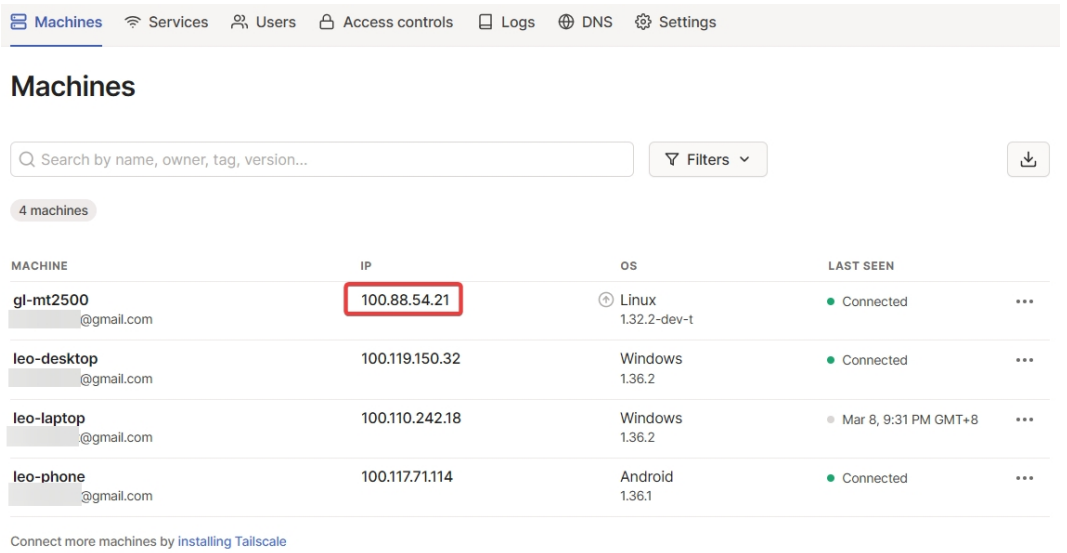


7. Test connectivity.

   On another device connected to the same Tailscale network, open a web browser and enter the router's virtual IP in the address bar. If you can access the router's web admin panel, it means Tailscale is working. You can also use the ping command or SSH log in to the router's terminal by its virtual IP to test connectivity.


12.6.2 Allow Remote Access WAN

If this option is enabled, resources on the device's WAN side can be accessed through the Tailscale virtual network. See here for more details.

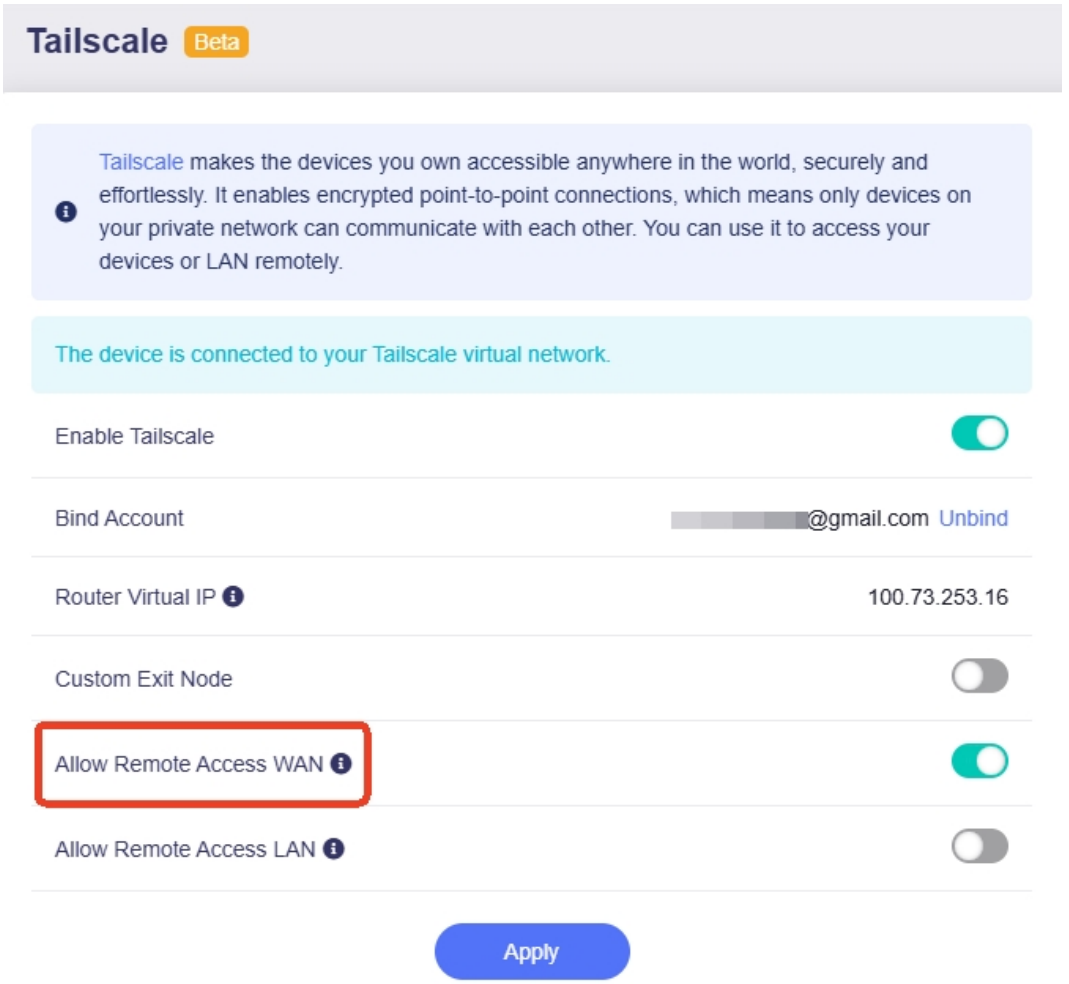

12.6.3 Allow Remote Access LAN


If this option is enabled, resources on the device's LAN side can be accessed through the Tailscale virtual network. See here for more details.

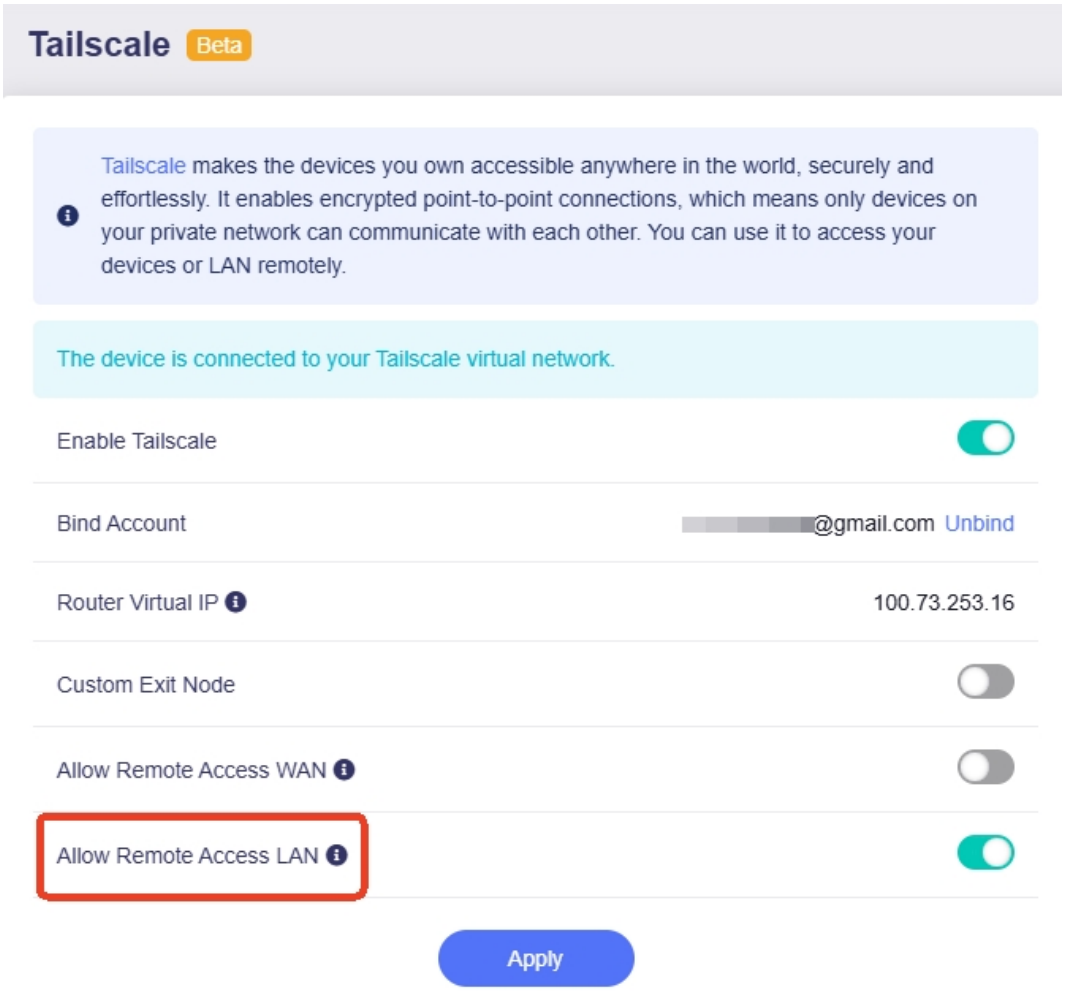

12.6.4 Custom Exit Nodes

By default, Tailscale acts as an overlay network: it only routes traffic between devices running Tailscale, and does not process your public Internet traffic — such as when browsing websites like Google.

However, there might be times when you want Tailscale to route your public Internet traffic. For example, when you are away from home or traveling abroad, if you need to access online services (such as banking) that are only available in your home country, you can set your home desktop with a public IP as an Exit node, and configure other devices on the same Tailnet — such as the GL-AXT1800 and GL-MT3000 in the image below — to send their traffic through it. This enables all your public Internet traffic to be forwarded via the Exit Node.

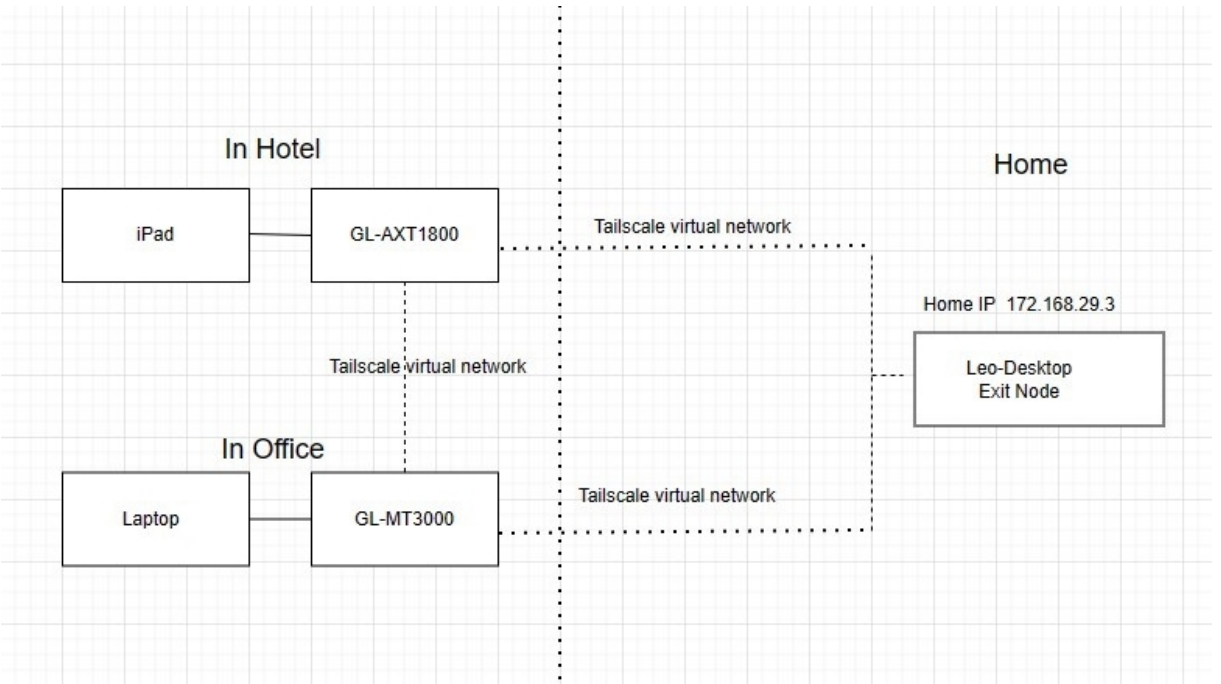


In summary, an Exit node routes outbound Internet traffic from your Tailnet devices, effectively acting as VPN servers. When connected to an Exit node, all your non-Tailscale Internet traffic appears to originate from its location, helping you access geo-restricted content and enhance your online privacy. The device handling this traffic forwarding is referred to as an "exit node". See here for more details.

Note: If the router's DNS Server is a private IP address that can be accessed only in the local network, you may lose Internet access when running the exit nodes. To avoid this, please set a public DNS server (e.g., 8.8.8.8) manually for your router.

12.7 eSIM Management


The eSIM Management allows you to check eSIM physical card status and manage eSIM profiles. It consists of two parts: **Current eSIM Status** and **eSIM Profile List**.

On the left side of the web Admin Panel, go to **APPLICATIONS** > **eSIM Management**.

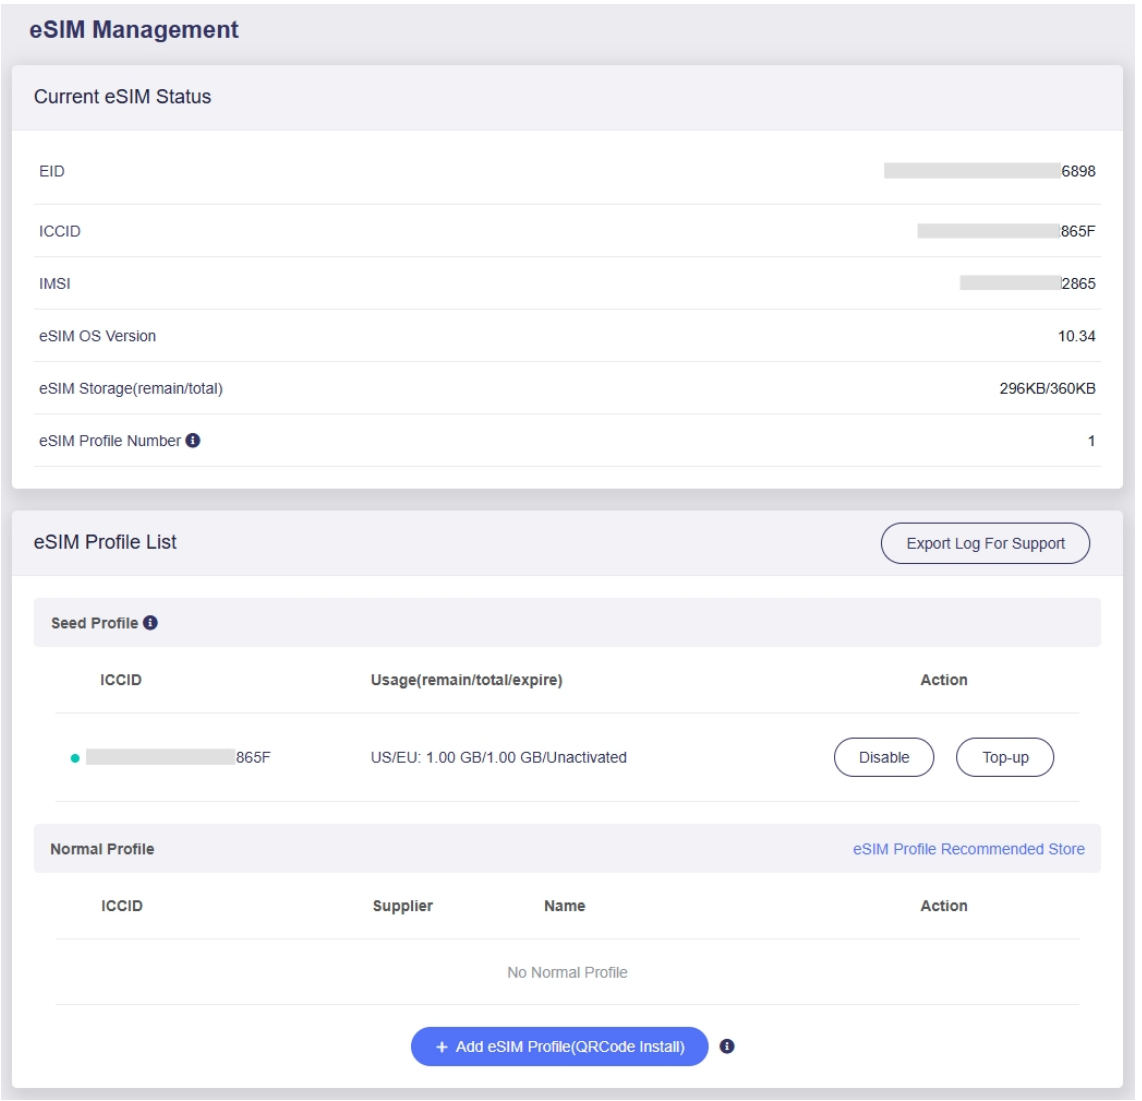

12.7.1 Current eSIM Status


This section displays basic information and details about the currently active eSIM profile.

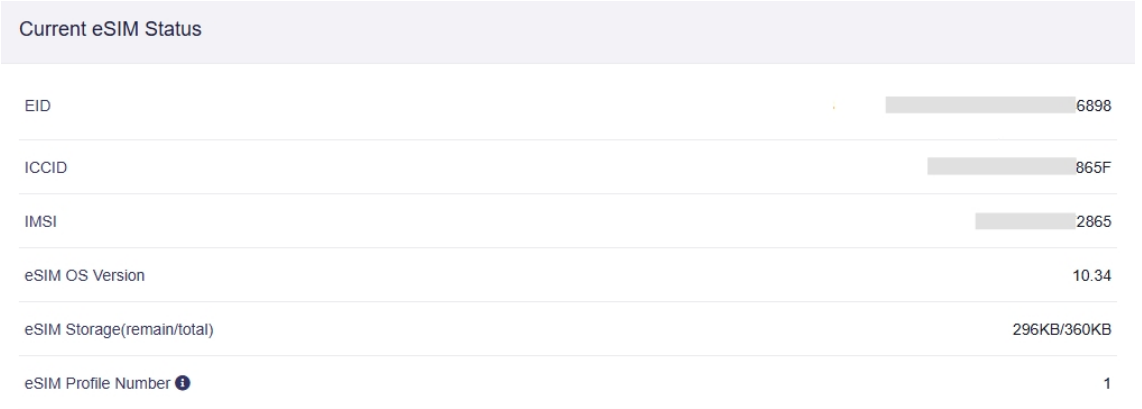

- **EID**: The globally unique identifier of the eUICC (eSIM chip), used for identification and profile management.
- **ICCID**: The Integrated Circuit Card Identifier of the currently active eSIM profile.
- IMSI: The International Mobile Subscriber Identity of the currently active eSIM profile.
- **eSIM OS Version**: The operating system version of the eUICC, which defines its compatibility and supported capabilities.
- **eSIM Storage (remain/total)**: Available and total storage capacity on the eUICC for storing eSIM profiles.
- **eSIM Profile Numbe**r: Number of eSIM profiles currently stored on the eUICC. Note that eSIM profiles offered by different carriers vary in size, so the number of profiles that can be stored on the eUICC will also differ.

12.7.2 eSIM Profile List

This section displays information about the eSIM seed profile and normal profiles.

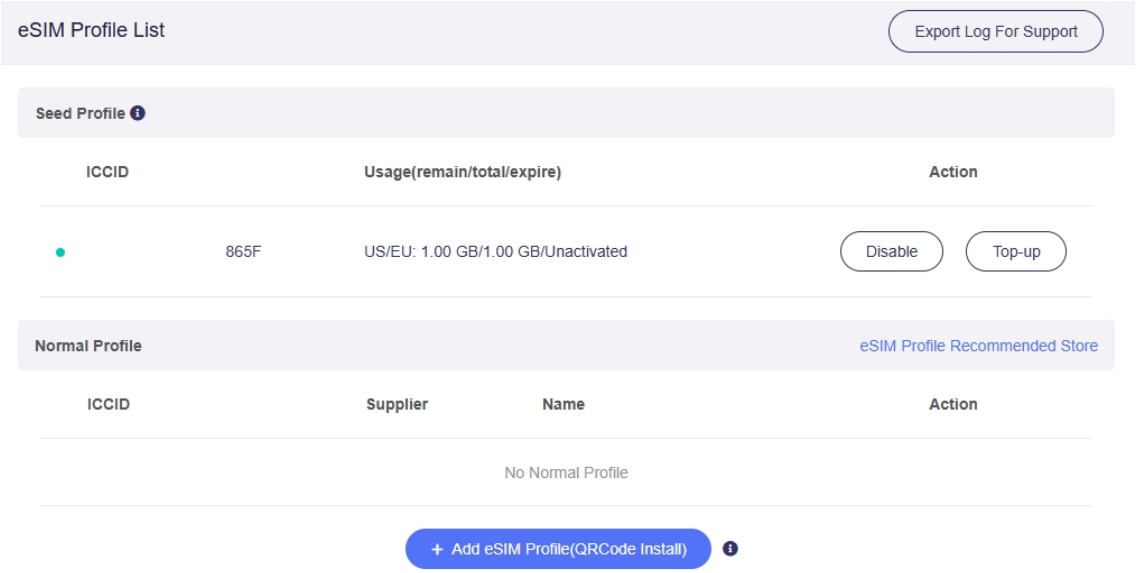


- **Seed Profile**: The seed profile comes preloaded with 1GB of free data for the U.S. and Europe, plus 100MB of global data, valid for 1 year from the date of activation. This data allows you to download other profiles anywhere in the world. You can also monitor usage of the seed profile, including remaining data, total data allowance, and expiration date.
- **Normal Profile**: If you purchase an eSIM profile and upload it via a QR code or activation code, the profile will be displayed here.

Top-up Seed Profile

GL.iNet provides a preloaded seed profile with 100MB of global data and 1GB of data valid in Europe and the U.S. for initial setup and eSIM profile activation. This plan is designed for downloading new eSIM profiles when you arrive at a destination with no internet access.

If you have used up the preloaded free data, or if the free data has expired and you wish to continue using the service, you can top up your seed profile.

In the Seed Profile section, click the **Top-up** button on the right.

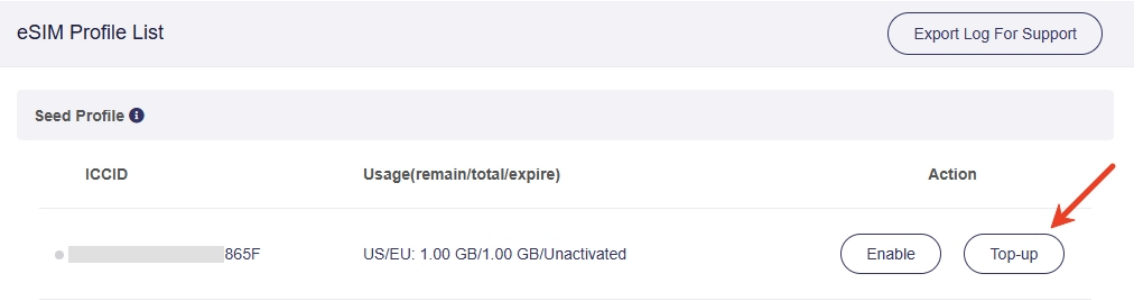

In the pop-up window, scan the QR code and follow the instructions to complete your top-up.




Purchase eSIM Profile

You can purchase eSIM profiles from our recommended stores, tested stores, or other third-party eSIM providers.


Option 1: Purchase from our recommended stores.

There are two recommended stores: EIOTCLUB eSIM Store and Tuge eSIM Store.

In the Normal Profile section, click **eSIM Profile Recommended Store** on the right.

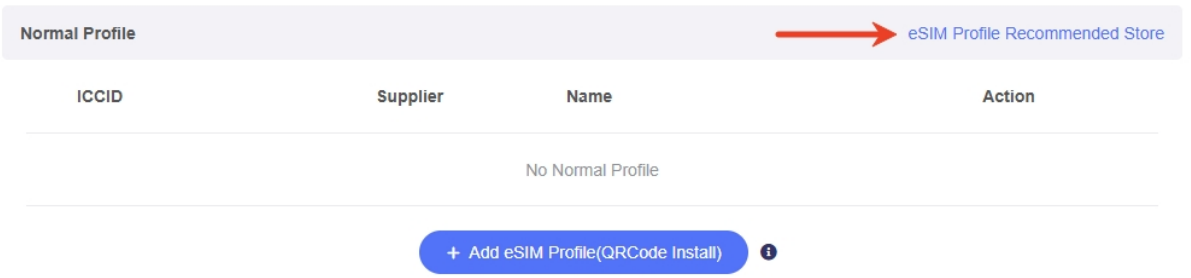

Scan the QR code or click the links to purchase eSIM profiles.

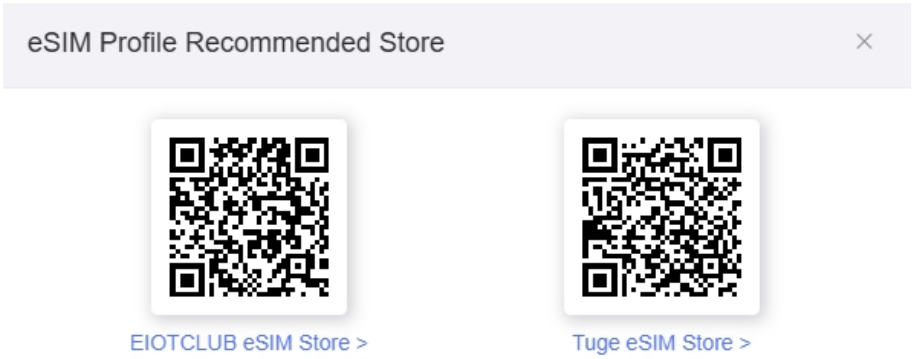

Note: All eSIM profile packages purchased from these two stores are fully compatible with GL.iNet routers. If you have any questions, contact our support team at support@gl-inet.com.

Option 2: Purchase from tested stores.

Refer to this link to view a list of stores tested by GL.iNet.

Note: We cannot guarantee full compatibility with GL.iNet routers for all profiles or packages from these stores. Since GL.iNet does not have partnerships with them, we cannot provide after-sales support or assist with refunds.

Option 3: Purchase from other third-party eSIM providers.


You can also choose to buy eSIM profiles from other third-party providers of your choice. However, we cannot guarantee full compatibility with GL.iNet routers for eSIM profiles purchased from other third-party providers. Please purchase at your own discretion. GL.iNet is not responsible for any incompatibility issues.

For after-sales support or refunds, please contact the corresponding eSIM provider.


Upload eSIM Profile

After purchasing an eSIM profile, you will typically receive a QR code (or an activation code). Save this QR code locally, then follow the steps below to upload your eSIM profile.

1. In the Normal Profile section, click **Add eSIM Profile** at the bottom.

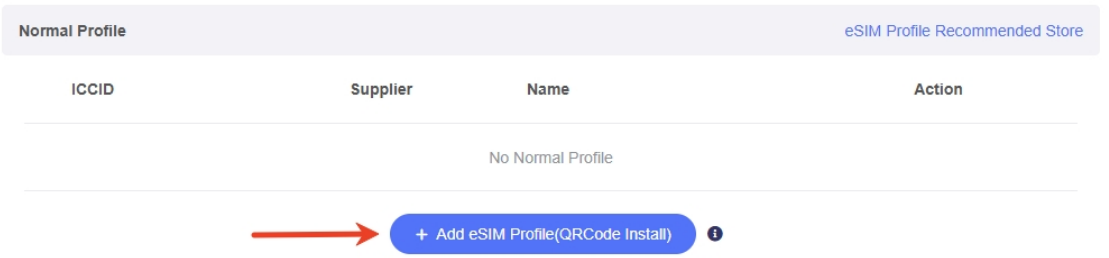

2. Upload your eSIM QR code or enter the activation code, then click **Install**. It will then download and install the eSIM profile onto your router.

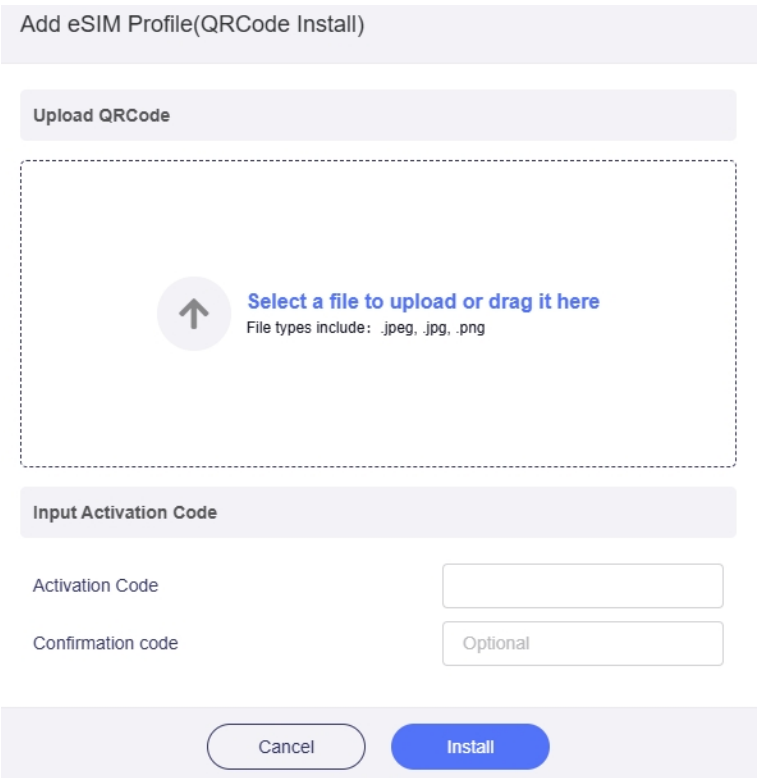

Note:


1. Most eSIM profiles can only be downloaded and installed once.
2. A properly formatted QR code will display an activation code that starts with **LPA**:. However, some non-standard QR codes may only provide a raw activation code without the LPA prefix. In this case, manually add LPA: at the beginning of the code before clicking the Install button.



3. If you haven't purchased any eSIM profile, you may purchase one from the eSIM Profile Recommended Store. See Purchase eSIM Profile for details.


3. Enable your eSIM Profile.

   After successful upload, your new eSIM profile will appear in the **Normal Profile** list. Click **Enable** to activate it.

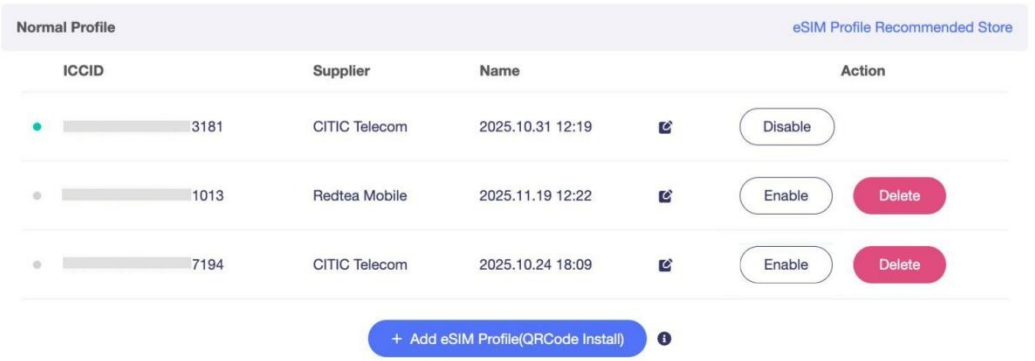


4. Connect to the Internet.

   After enabling your eSIM profile, go to **INTERNET** > **Cellular**. Click **Connect** to establish an internet connection via your eSIM profile.

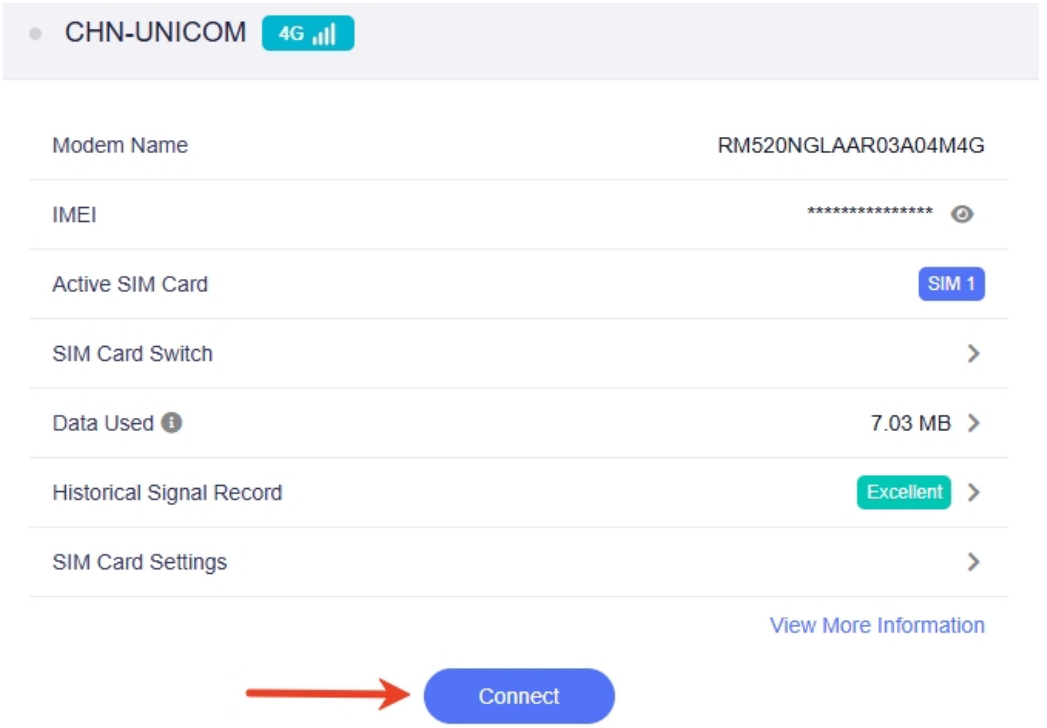


Note: Some eSIM profiles may require additional configuration, such as APN, PIN, or TTL settings. If needed, click **Manual Setup** or **SIM Card Settings** to adjust these parameters. In some cases, you may need to reboot the device to establish an internet connection.

5. Once the router connects successfully via the eSIM profile, the page will display as follows:

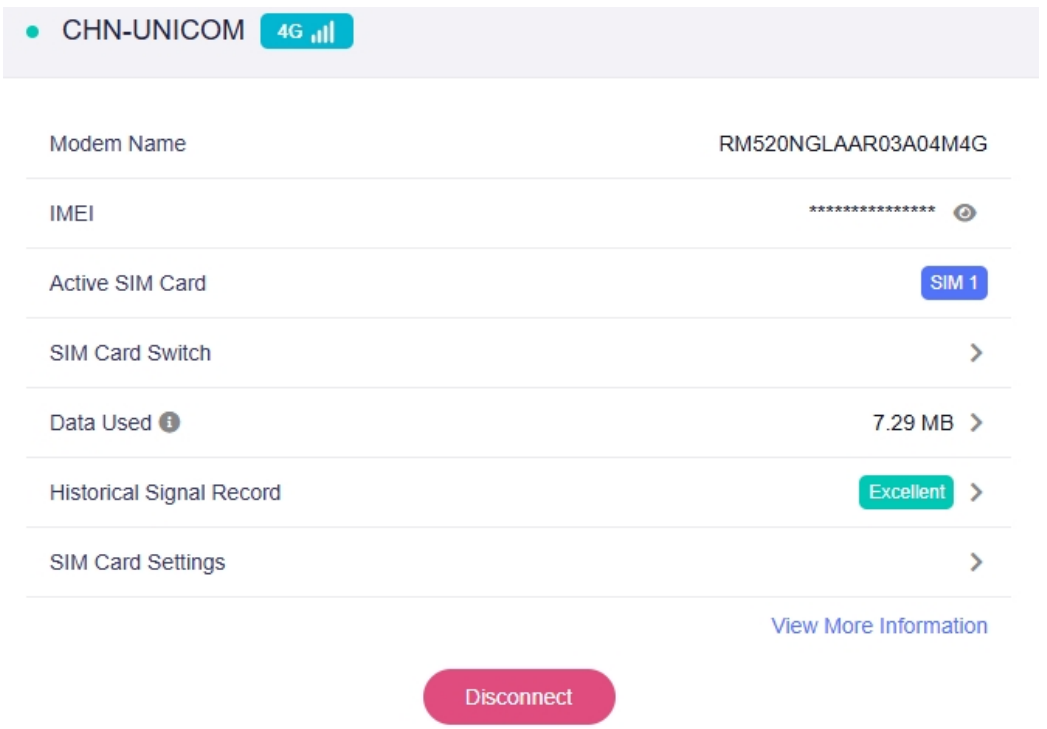

Export Log for Support

Click Export Log for Support to view all eSIM-related logs. If you encounter any issues and require technical support, export the eSIM logs and share them with our support team via email at support@gl-inet.com.

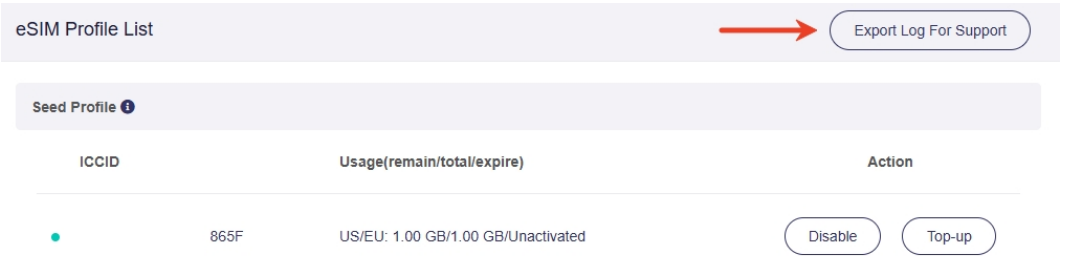

Chapter 13

Network

This chapter introduces network-related settings for configuration and management, such as LAN, DNS, and IPv6.

13.1 Port Forwarding


Port forwarding is a network feature that routes external requests to specific devices on your local network. The Port Forwarding page includes two key functions: **DMZ** (for direct full access to a single device) and **Port Forwarding** (for targeted access to specific ports of devices).

13.1.1 DMZ

DMZ allows you to expose one computer to the Internet, so all inbound packets will be redirected to this computer.

Follow the steps below to enable DMZ if needed.

1. Log in to your router's web admin panel and navigate to **NETWORK** > **Port Forwarding** > **DMZ** section.
2. Toggle on **Enable DMZ**. Select the Priority and DMZ Host IP from the drop-down list, and click **Apply**.

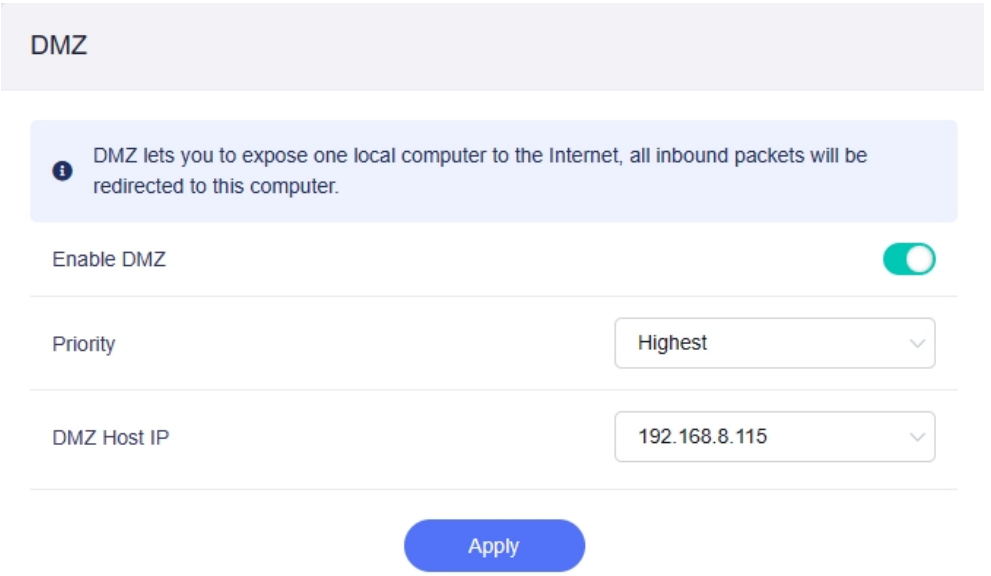


- **Priority**: Set it as Highest or Lowest. If the priority of the DMZ is higher than the port forwarding rules, all port forwarding rules will be invalidated. Otherwise, requests will be forwarded to the DMZ client device only if the accessed port has no corresponding port forwarding rule.
- **DMZ Host IP**: Select the internal IP address of the device that will receive all the inbound packets.

13.1.2 Port Forwarding


Port Forwarding enables remote computers to connect to a local computer or server behind the LAN firewall (e.g., web servers, FTP servers).

If you need to set up port forwarding, follow the steps below.

1. Log in to your router's web admin panel, go to **NETWORK** > **Port Forwarding** > **Port Forwarding** section, and click **Add**.

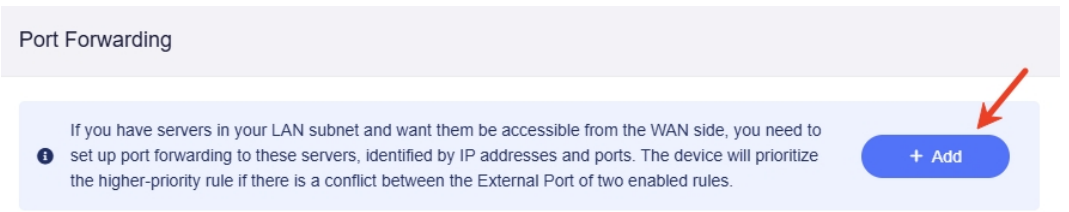

2. In the pop-up window, enter or select the required parameters from the drop-down list to add a port forwarding rule, then click **Apply**.

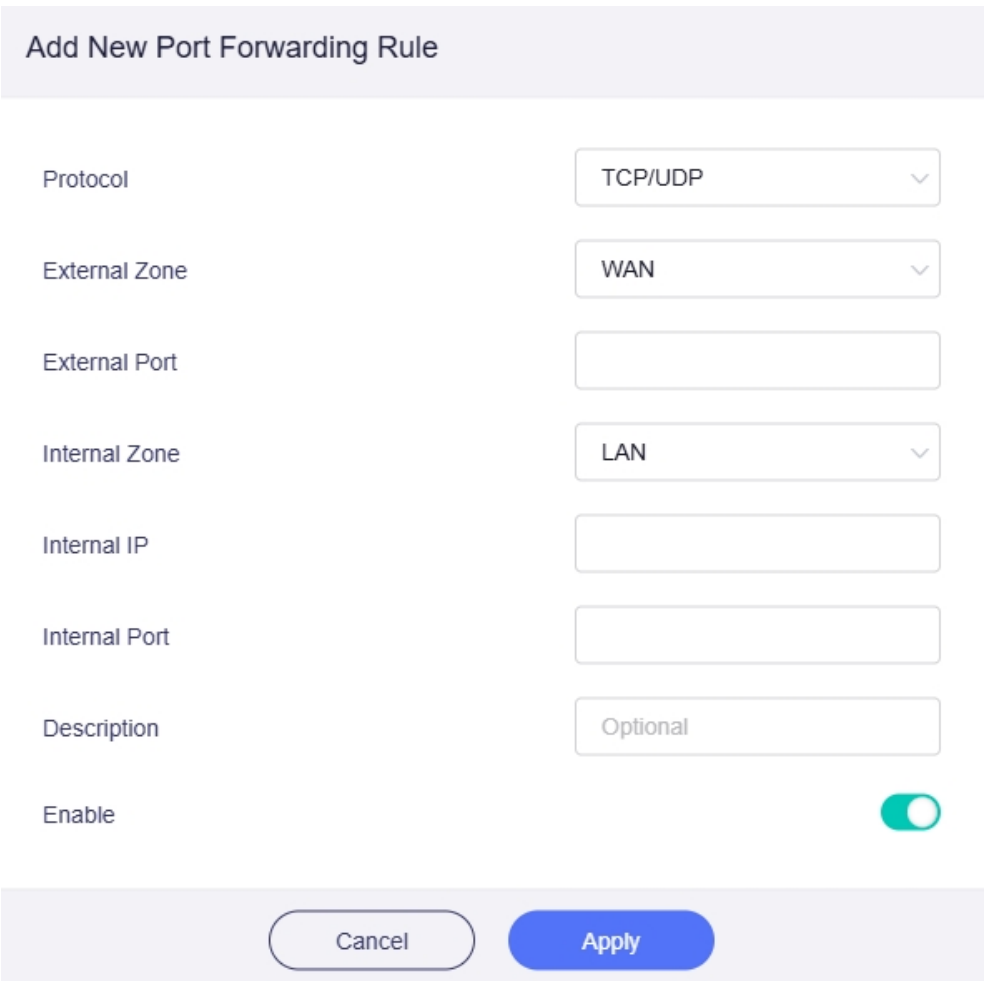

- **Protocol**: The protocol used. You can choose TCP, UDP, or both TCP and UDP.
- **External Zone**: Available options are WAN, WireGuard Client, WireGuard Server, OpenVPN Client, OpenVPN Server, LAN, and Guest.
- **External Port**: The number(s) of external ports. Enter a specific port number here. The port range is 1–65535. You can set a single port or a port range by concatenating the first and last port numbers with a hyphen (e.g., 501-510).
- **Internal Zone**: Available options are LAN, Guest, WireGuard Client, WireGuard Server, OpenVPN Client, OpenVPN Server, and WAN.
- **Internal IP**: The IP address assigned by the router to the device that needs remote access. If you set a single port in External Port, set a single port here. If you set a port range in External Port, set the corresponding port range here.
- **Internal Port**: The internal port number of the device. Enter a specific port number. Leave it blank if it matches the external port.
- **Description**: Set a name or add a description for the port forwarding rule (optional).
- **Enable**: Enable or disable this rule.

13.2 Multi-WAN


Multi-WAN enables simultaneous use of multiple Internet access methods, allowing configuration of diverse connectivity options on the router. It offers two working modes:

- **Failover**: Automatically switches to an alternate connection within a short time if the primary connection fails, ensuring uninterrupted network access.
- **Load Balance**: Distributes network traffic across all available connections at a set ratio for concurrent multi-connection usage, optimizing bandwidth utilization.


Log in to your router's web admin panel and navigate to **NETWORK** > **Multi-WAN**. This page includes two sections: Interface Status Track and Multi-WAN Mode.

13.2.1 Interface Status Track

GL.iNet routers use the **ping** command to monitor the connection status to the destination IP and determine if the interface is available. If the interface is available, a green dot will be displayed on the left; otherwise it will be gray.

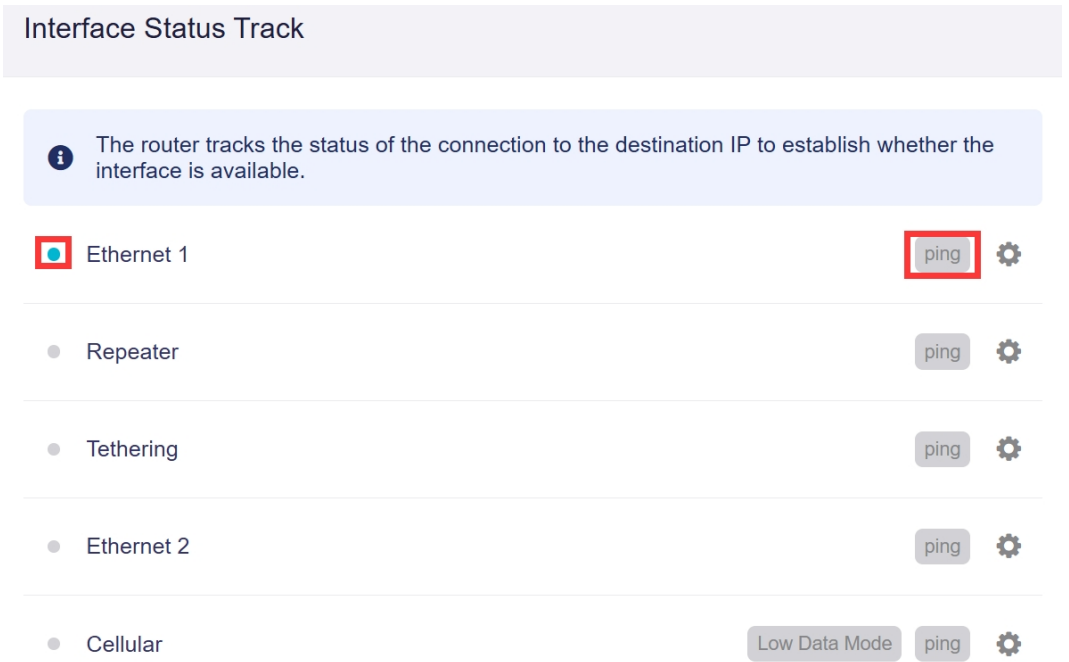


In the **Interface Status Track** section, click the gear icon on the right to access the status tracking settings for each network interface. Below are the status tracking settings for the Ethernet interface. The same configuration logic applies to other interfaces.

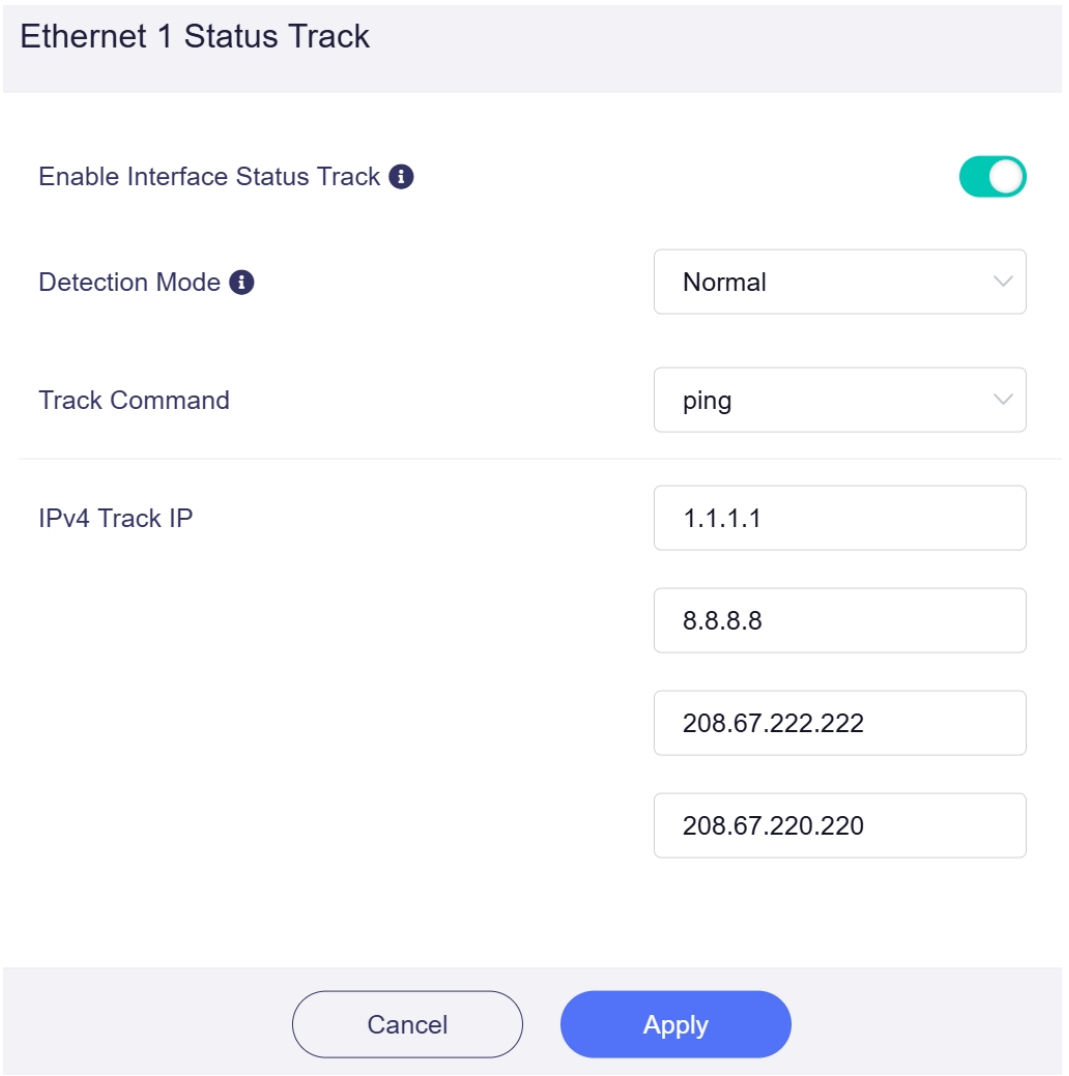


- **Enable Interface Status Track**: It is enabled by default. If disabled, the router will determine the interface status based on physical conditions (e.g., whether the Ethernet cable is plugged in).
- **Detection Mode**: This feature was introduced as Low Data Mode in firmware v4.5, then renamed Detection Mode in firmware v4.7. Three modes are available: Normal Mode, Low Data Mode, and Strict Mode.
  - **Normal Mode**: It is used by default.
  - **Low Data Mode**: It only triggers tracking when a network error occurs on the network interface. Use this mode if you are on a limited data plan. Note that reconnecting after a disconnection may be slightly slower than in Normal Mode, and it is enabled by default only for cellular interface.

    - **Strict Mode**: It determines the interface status exclusively based on the results of a detection command sent to a public IP.
- **Track Command**: The ping command is used to monitor connection status to the destination IP and verify interface availability.
- **IPv4 Track IP**: Customize the IPv4 Track IP addresses if needed.

Click **Sensitivity Options** in the upper right corner.

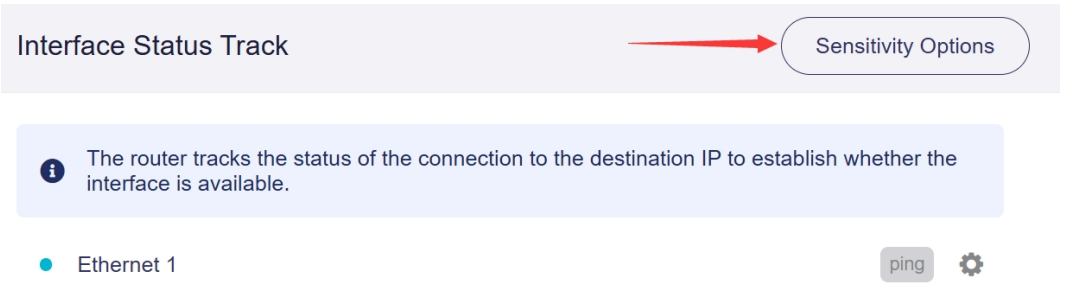

You can set the time interval for Internet status detection to Low, Medium, High, or customize it. The adjustable interval time ranges from 0.5 seconds to 90 seconds.

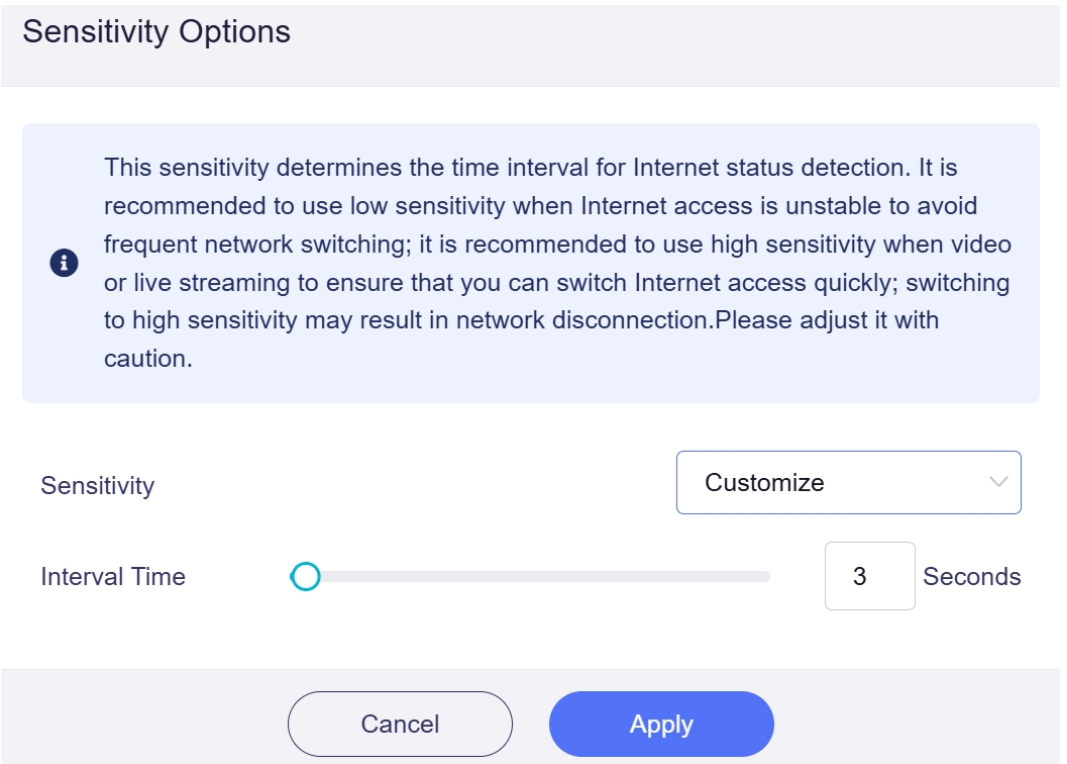


13.2.2 Multi-WAN Mode

Two modes are available for Multi-WAN: **Failover** and **Load Balance**. Note that these modes are mutually exclusive.

Failover

Failover is the default mode when multiple connections are configured. If the active link fails, the router will automatically switch to another network interface for Internet access.


You can set priority levels for each interface: when the currently used interface fails, the router switches to the next available interface with the highest priority. Once a higher-priority connection is restored, the router will automatically switch back to it.

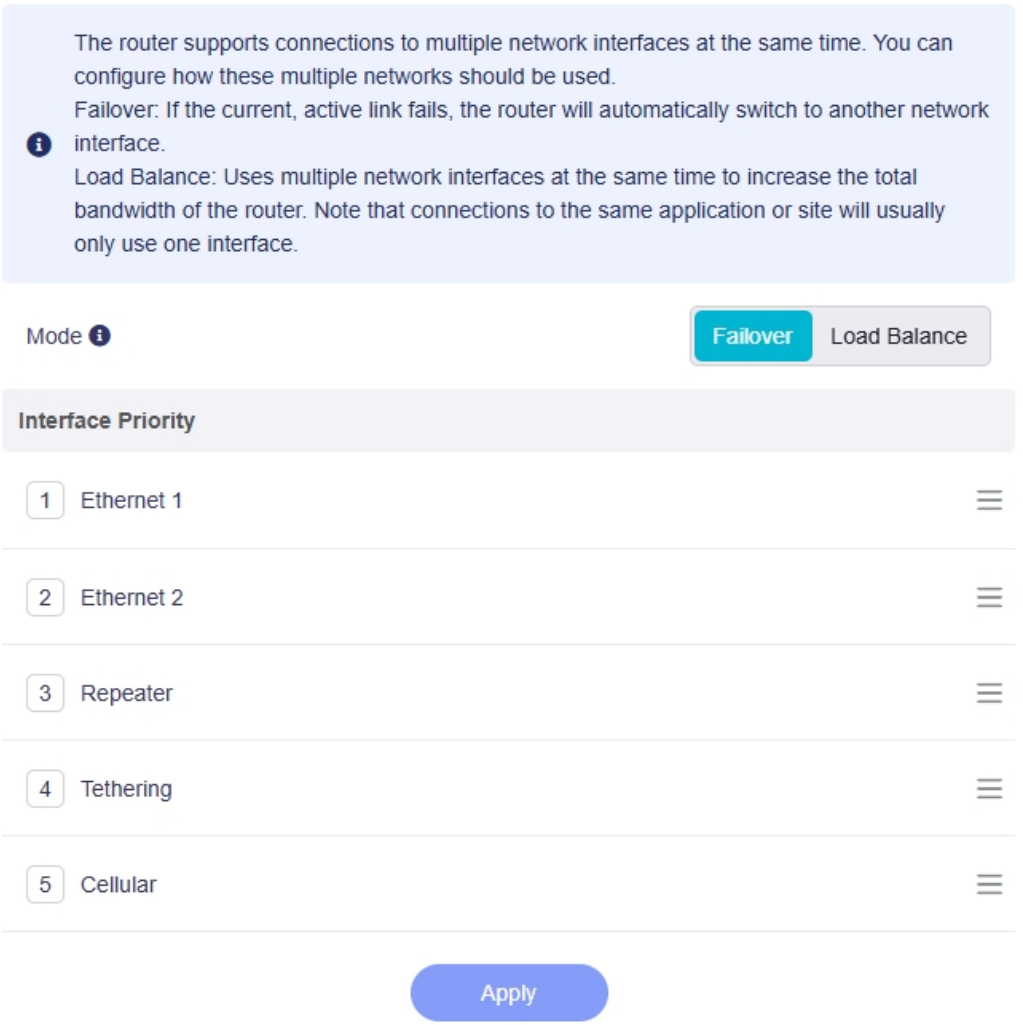

Load Balance

Load Balance mode uses multiple network interfaces simultaneously to increase the router's total bandwidth, with the system distributing new connections across interfaces according to a configured load ratio. Note that connections to the same application or website will typically use only one interface.

The load ratio refers to the proportion between each network interface. The system will assign interfaces to handle new connections based on this configured ratio. For example, if the router is connected to five networks (e.g., Ethernet 1, Repeater, Tethering, Cellular, and Ethernet 2) simultaneously and all interfaces are available for Internet access, enabling Load Balance and setting a 1:1:1:1:1 ratio means the five interfaces will share network bandwidth equally. The system will distribute new connections across these interfaces according to the configured load ratio.

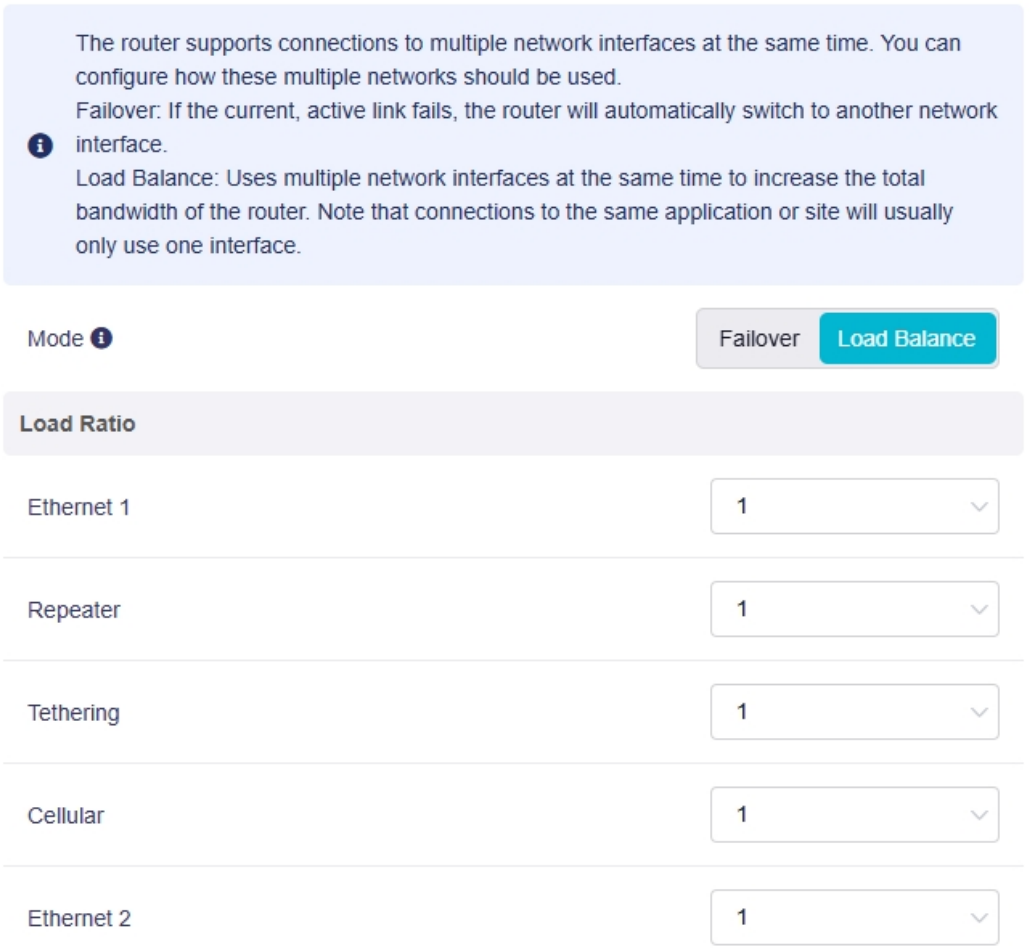

You can also customize the load ratio if needed. For example, if Ethernet 1 has a bandwidth of 100 Mbps, Repeater has 200 Mbps, and no other connections are active, set the load ratios to 1 for Ethernet 1, 2 for Repeater, and 0 for Tethering, Cellular and Ethernet 2. The system will then distribute new connections across these interfaces according to the configured 1:2 ratio, meaning Ethernet 1 will handle half as many connections as Repeater. Unlike Failover mode, this mode optimizes overall throughput efficiency by balancing traffic load across all available interfaces.

Note: Existing connections or traffic are not guaranteed to align with the load ratio. The actual distribution will gradually approach the configured ratio with prolonged use.


13.3 LAN

LAN (Local Area Network) refers to the private local network, to which your devices connect via Ethernet cables.

Log in to your router's web admin panel and navigate to **NETWORK** > **LAN**. Here you can configure LAN settings, including basic settings, DHCP server, and address reservation.

13.2.1 Basic Settings


The basic settings include Router IP address and Netmask. You can set subnet within IPv4 private address ranges: 192.168.0.0/16, 172.16.0.0/12, 10.0.0.0/8

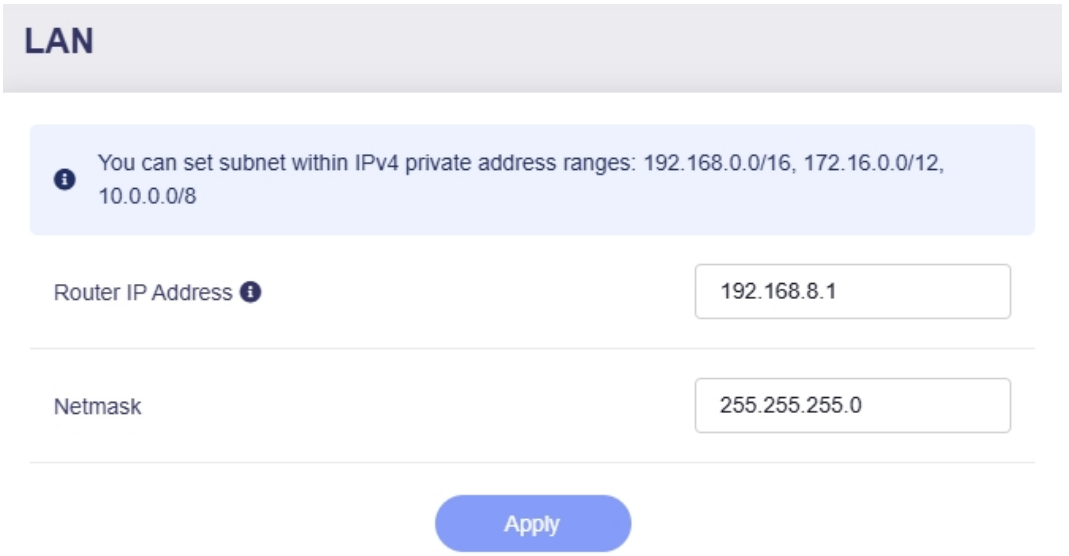


- **Router IP Address**: This is the address entered into a browser's address bar to access the router's admin panel. It is 192.168.8.1 by default and can be changed if it conflicts with the upstream network.
- **Netmask**: Two options are available: 255.255.255.0 and 255.255.0.0.

13.2.2 DHCP Server


The DHCP server automatically assigns IP addresses and other communication parameters to each connected client. GL.iNet router's DHCP server is enabled by default, and the DHCP server's IP address pool ranges from 192.168.8.100 to 192.168.8.249. You can customize the address range if needed.

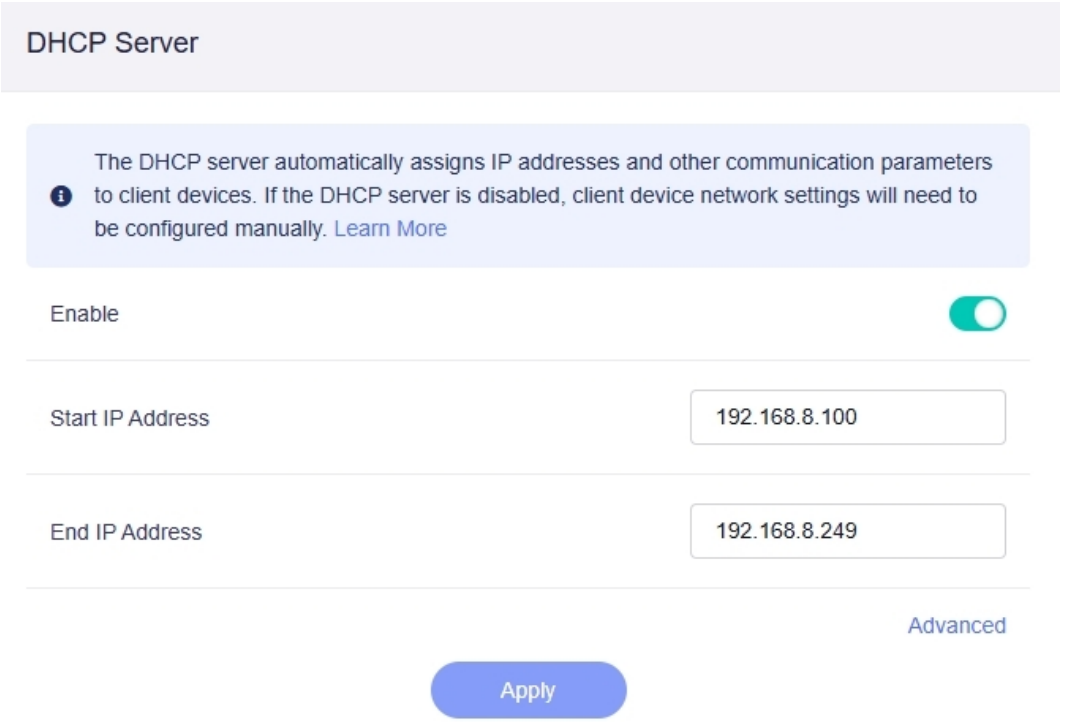

Click **Advanced** in the bottom right corner.

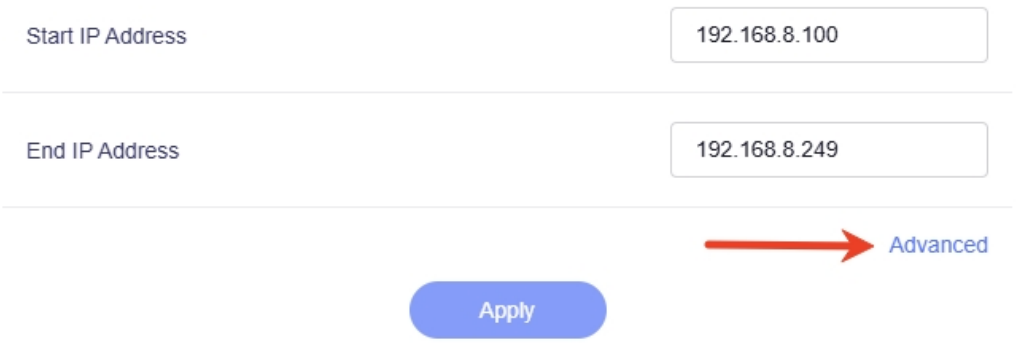

You will be able to configure advanced settings, including Lease Time, Gateway, DNS Server(s), and LPR Server.

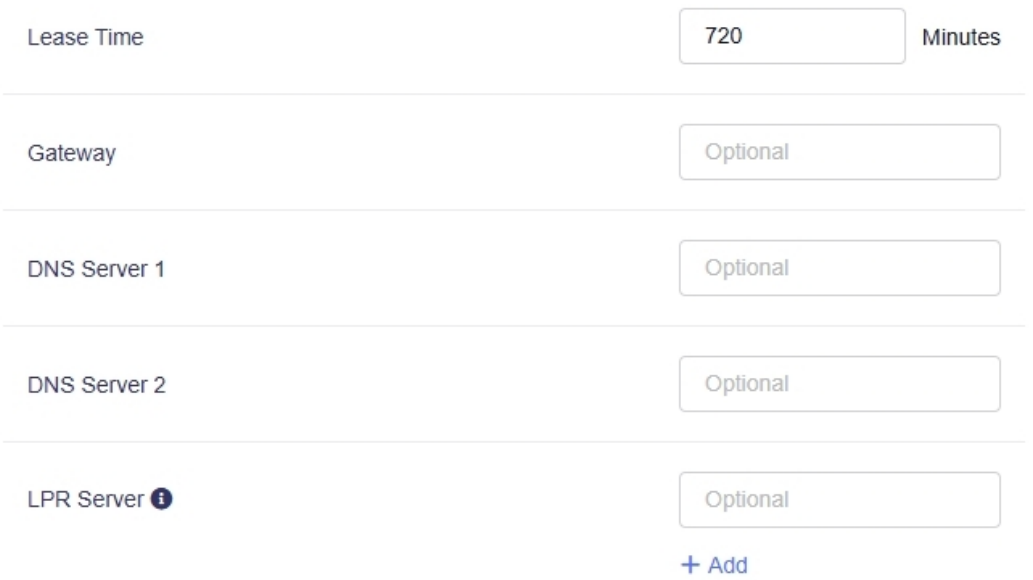

- **Lease Time**: The duration for which a device can use an IP address assigned via DHCP.
- **Gateway**: The router component that routes traffic between the local network and external networks (e.g., the internet).
- **DNS Server 1**: The primary server responsible for translating domain names into IP addresses.
- **DNS Server 2**: A backup server used to resolve domain names if the primary DNS server fails.
- **LPR Server**: (Line Printer Remote Server) A service that manages print jobs and enables networked devices to send print requests to remote printers. Multiple LPR ports for printers can be configured.


Note: If DHCP server is disabled, you need to configure static IP and other communication parameters manually for each clients. See here for details.

13.2.3 Address Reservation

Address reservation allows you to specify a fixed IP address for a LAN client, so that the client will always receive the same IP address each time it accesses the router's DHCP server. You can assign reserved IP addresses to computers or servers that require permanent IP settings. Note that clients with address reservation configured must reconnect to the router to activate the setting.

Follow the steps below to configure address reservation if needed.

1. Log in to your router's web admin panel, navigate to **NETWORK** > **LAN** > **Address Reservation**, and click **Add**.
2. In the pop-up window, select the MAC address from the drop-down list, then the corresponding IP address for the selected MAC will be auto-filled. Enter a descriptive name and click **Submit**.

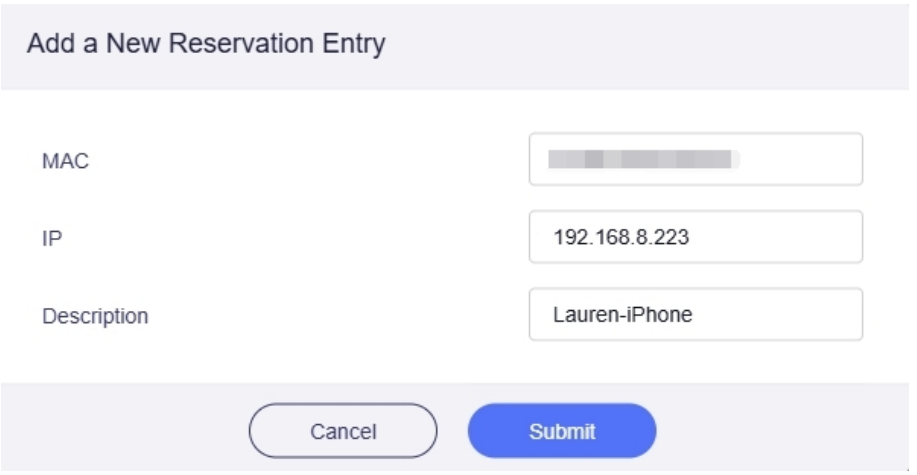

3. After adding a new IP address reservation, the page will display the reserved entry, as shown below.




13.4 Guest Network

Guest Network refers to a dedicated network for visitors to connect to, isolating them from your main LAN to protect your private network security.

Log in to your router's web admin panel and go to **NETWORK** > **Guest Network**. This page allows you to configure Guest Network settings, including basic settings and DHCP server.

13.4.1 Basic Settings

The basic settings include Gateway, Netmask, and AP Isolation.

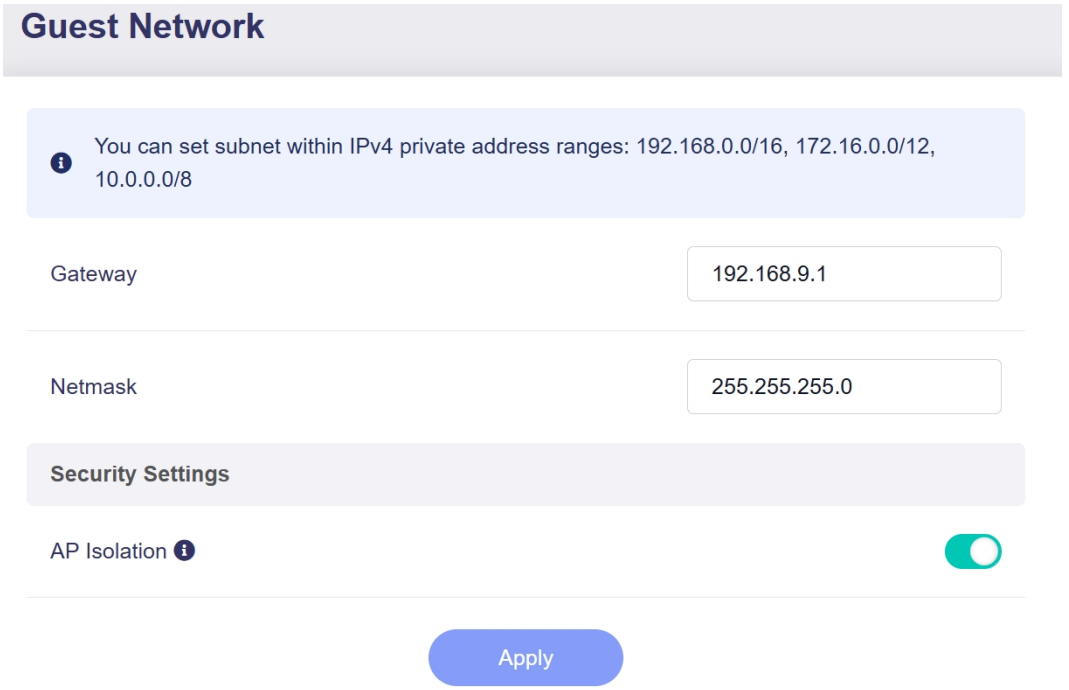


- **Gateway**: It is 192.168.9.1 by default and can be changed if needed, but it must not conflict with the gateway of the main network.
- **Netmask**: Two options are available: 255.255.255.0 and 255.255.0.0.
- **AP Isolation**: It is used to isolate guest network clients into separate segments so they cannot communicate with other devices on the same network.


13.4.2 DHCP Server

Since the Guest network is disabled by default, its DHCP server is disabled and hidden until it is manually enabled.


When enabled, the DHCP server automatically assigns IP addresses and other communication parameters to each connected client. The DHCP server's IP address pool for the Guest network ranges from 192.168.9.100 to 192.168.9.249. You can customize the address range if needed.

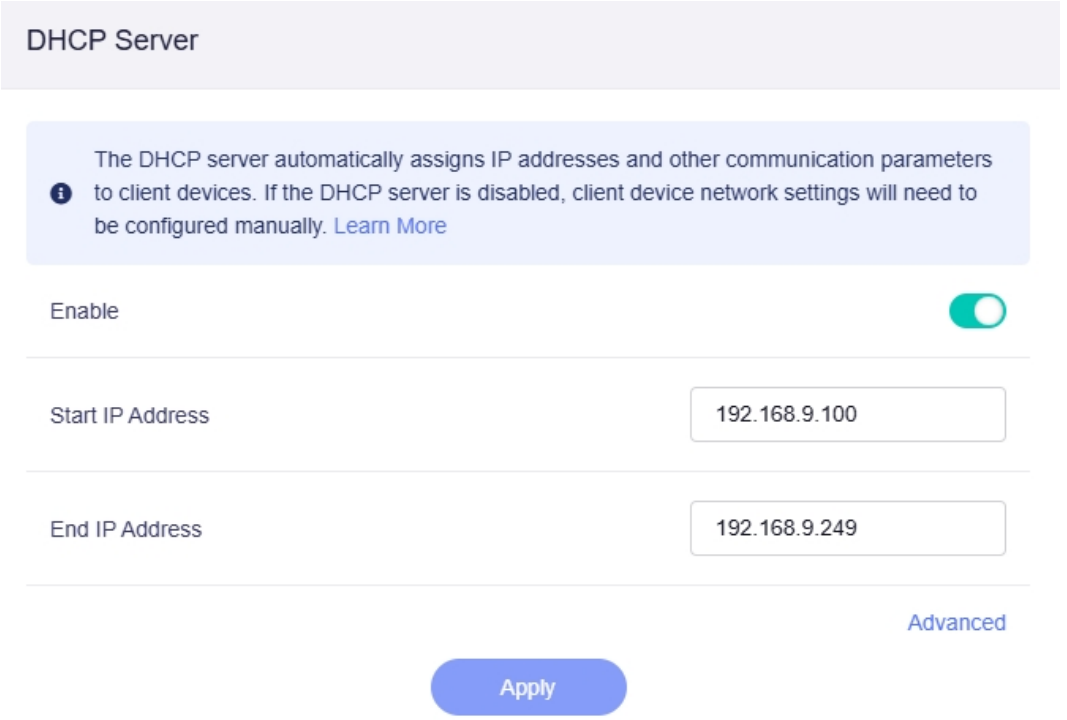

Click **Advanced** in the bottom right corner.

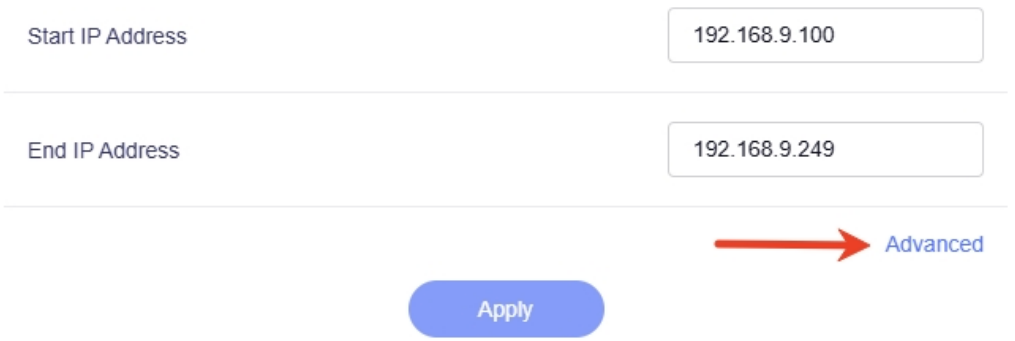

You will be able to configure advanced settings, including Lease Time, Gateway, DNS Server(s), and LPR Server.

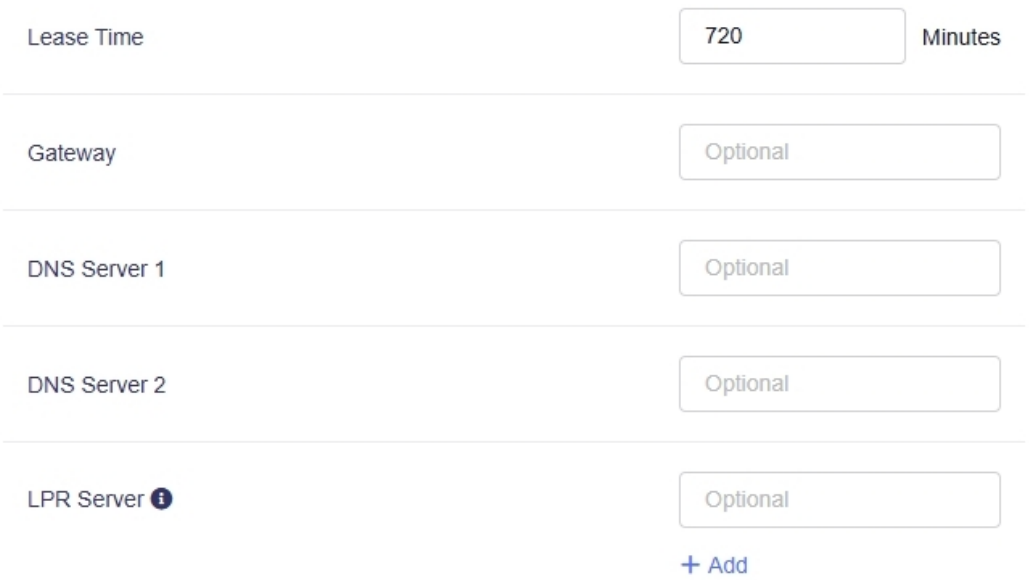


- **Lease Time**: The duration for which a device can use an IP address assigned via the Guest network's DHCP.
- **Gateway**: The router component that routes traffic between the guest network and external networks (e.g., the internet).
- **DNS Server 1**: The primary server responsible for translating domain names into IP addresses.
- **DNS Server 2**: A backup server used to resolve domain names if the primary DNS server fails.
- **LPR Server**: (Line Printer Remote Server) A service that manages print jobs and enables networked devices to send print requests to remote printers. Multiple LPR ports for printers can be configured.

13.5 DNS

DNS (Domain Name System) is a network service that translates human-readable domain names (e.g., www.google.com) into machine-recognizable IP addresses (e.g., 142.250.185.142), enabling devices to connect to target websites or services.

Router DNS Server refers to the DNS service built into the router, which provides domain name-to-IP translation for all connected devices. It typically works in two ways: first, it automatically obtains DNS addresses from the upstream network to provide default translation services; second, users can manually configure custom public DNS addresses (e.g., 8.8.8.8) in the router's web admin panel to optimize network access or enhance security. Once set up, all connected devices will use this unified DNS server by default, eliminating the need for separate DNS configuration on each device.


Log in to your router's web admin panel and navigate to **NETWORK** > **DNS**. This page allows you to configure DNS related settings, including security options, server modes, and DNS priority rules for different network scenarios.

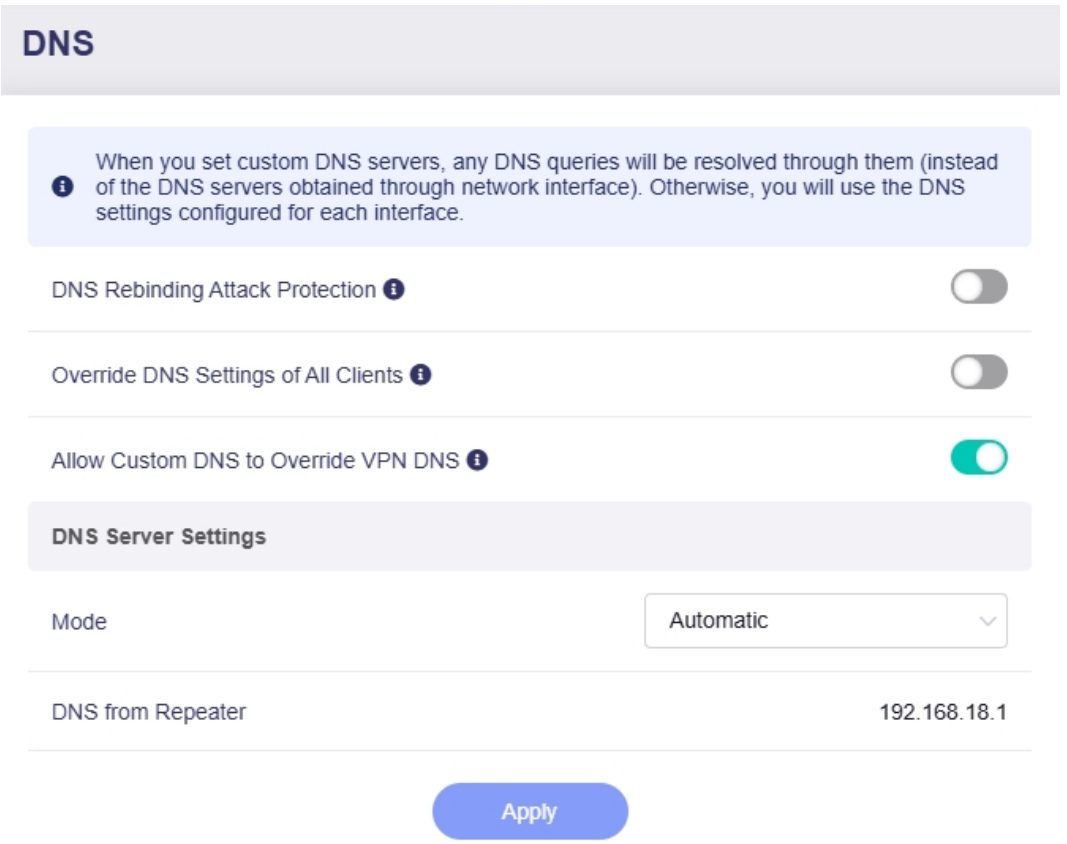


- **DNS Rebinding Attack Protection**: Protects against DNS rebinding attacks by blocking malicious DNS resolution attempts. Note that enabling it may cause private DNS lookup failure; disable if your network uses a captive portal (e.g., public Wi-Fi login pages).
- **Override DNS Settings of All Clients**: If enabled, all connected devices will be forced to use the DNS servers configured on the router, ignoring their own original DNS settings. It enables unified DNS configuration for all devices.
- **Allow Custom DNS to Override VPN DNS**: When enabled, if you have set custom DNS, packets transmitted through the VPN tunnel will use the custom DNS for resolution, instead of the DNS servers from the VPN connection. This ensures your custom DNS resolution rules apply normally when using VPN.

13.5.1 DNS Server Settings

There are four modes for the DNS server: Automatic, Encrypted DNS, Manual DNS, and DNS Proxy.

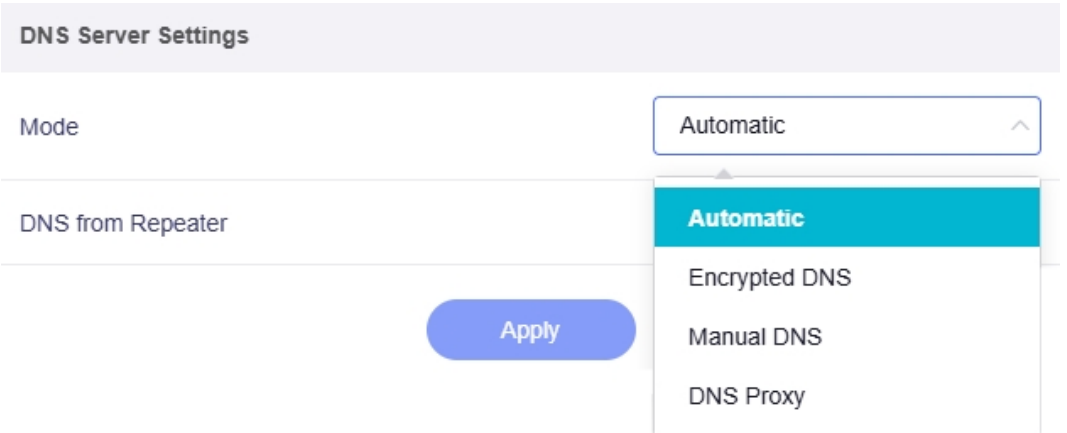


1. **Automatic**: When selected, the router will automatically obtain DNS server addresses from the upstream network and apply them to all connected devices.

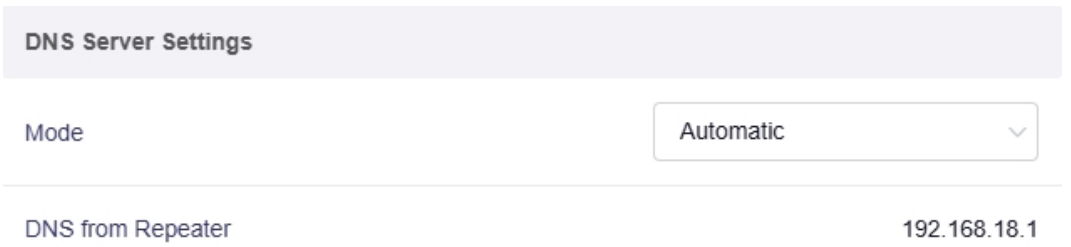


2. **Encrypted DNS**: When selected, the router will use encrypted protocols to process DNS queries, securing resolution data against eavesdropping or tampering.

It has four encryption types: DNS over TLS, DNSCrypt-Proxy, DNS over HTTPS, and Oblivious DNS over HTTPS.

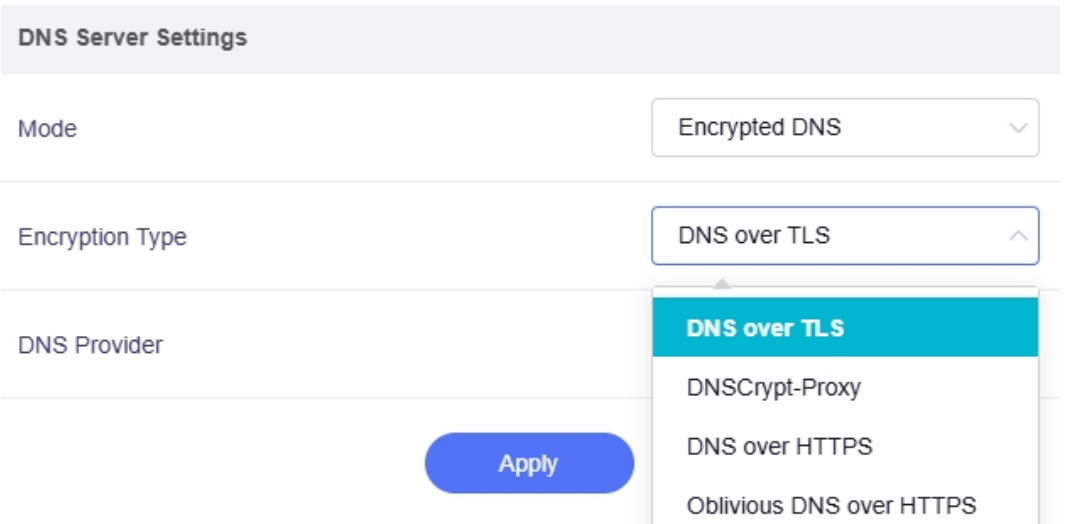


- For DNS over TLS, select a DNS provider among Control D, NextDNS, and Cloudflare.
- For the other three (i.e., DNSCrypt-Proxy, DNS over HTTPS, and Oblivious DNS over HTTPS), select at least one DNS server from the repository. Up to 8 servers can be selected. When multiple servers are selected, the router will use the fastest one automatically.

3. **Manual DNS**: When selected, you can customize your router's DNS servers. Click DNS Server 1 and choose a DNS server from the drop-down list. The remaining DNS fields will update automatically.

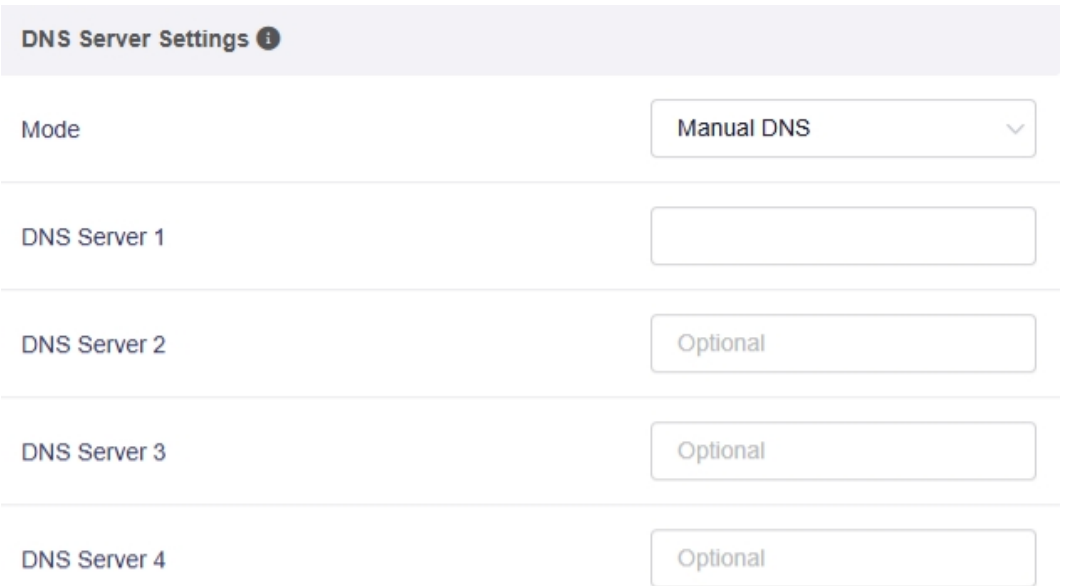

Note: If you need to use IPv6 addresses for manual DNS, enable IPv6 on your router first.


4. **DNS Proxy**: When selected, the router forwards all DNS queries through a proxy server, allowing resolution via the proxy's network environment for specific access needs.

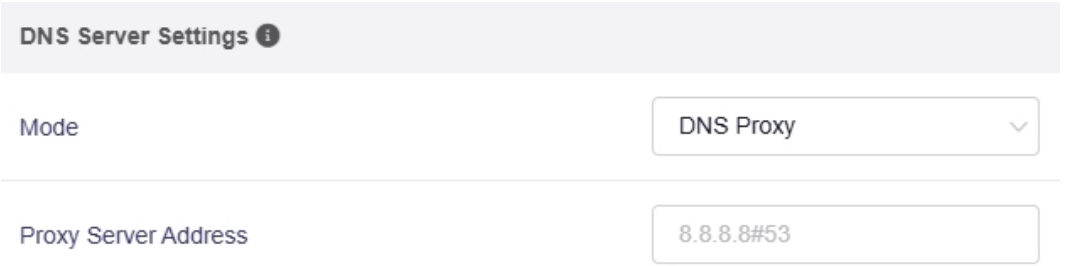


13.5.2 Edit Hosts

You can define static DNS resolution rules if needed.

On the DNS page, click **Edit Hosts** in the top right corner.

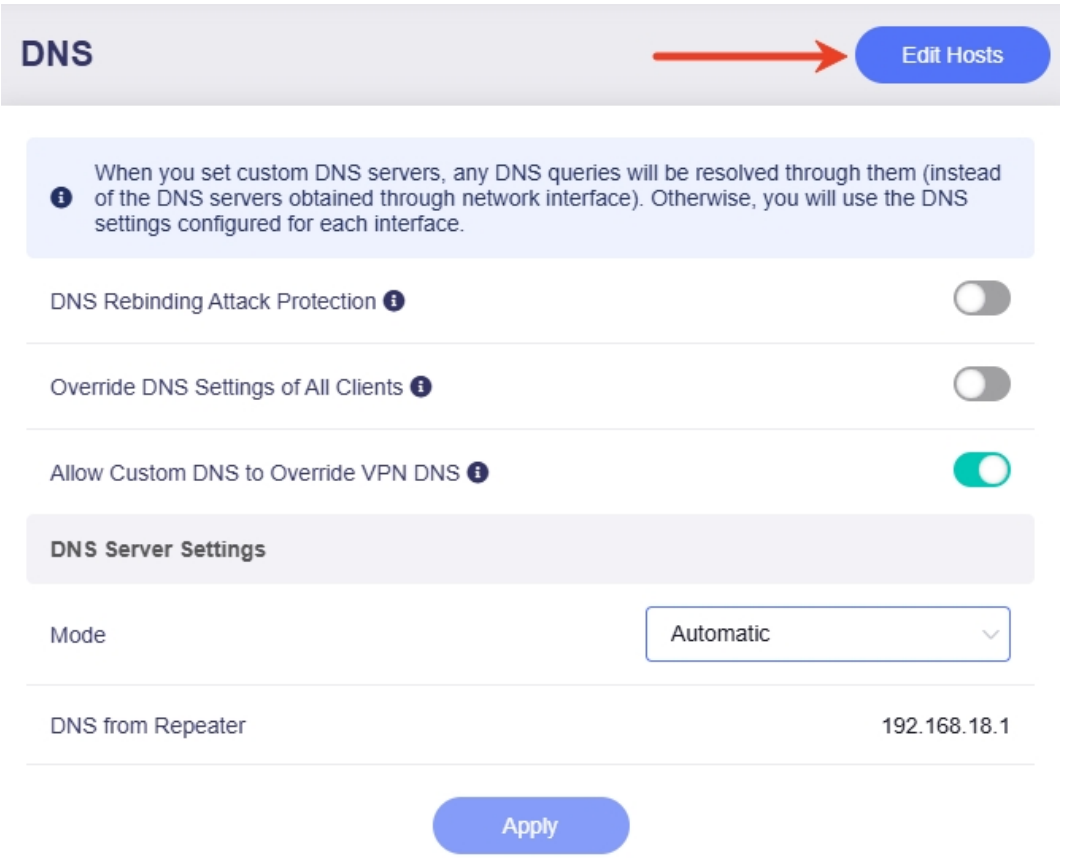


Requests from clients will be resolved preferentially using the static DNS rules written here, allowing you to manually map IP addresses to hostnames (e.g., the default entries like 127.0.0.1 localhost for local loopback) for customized domain name resolution control.

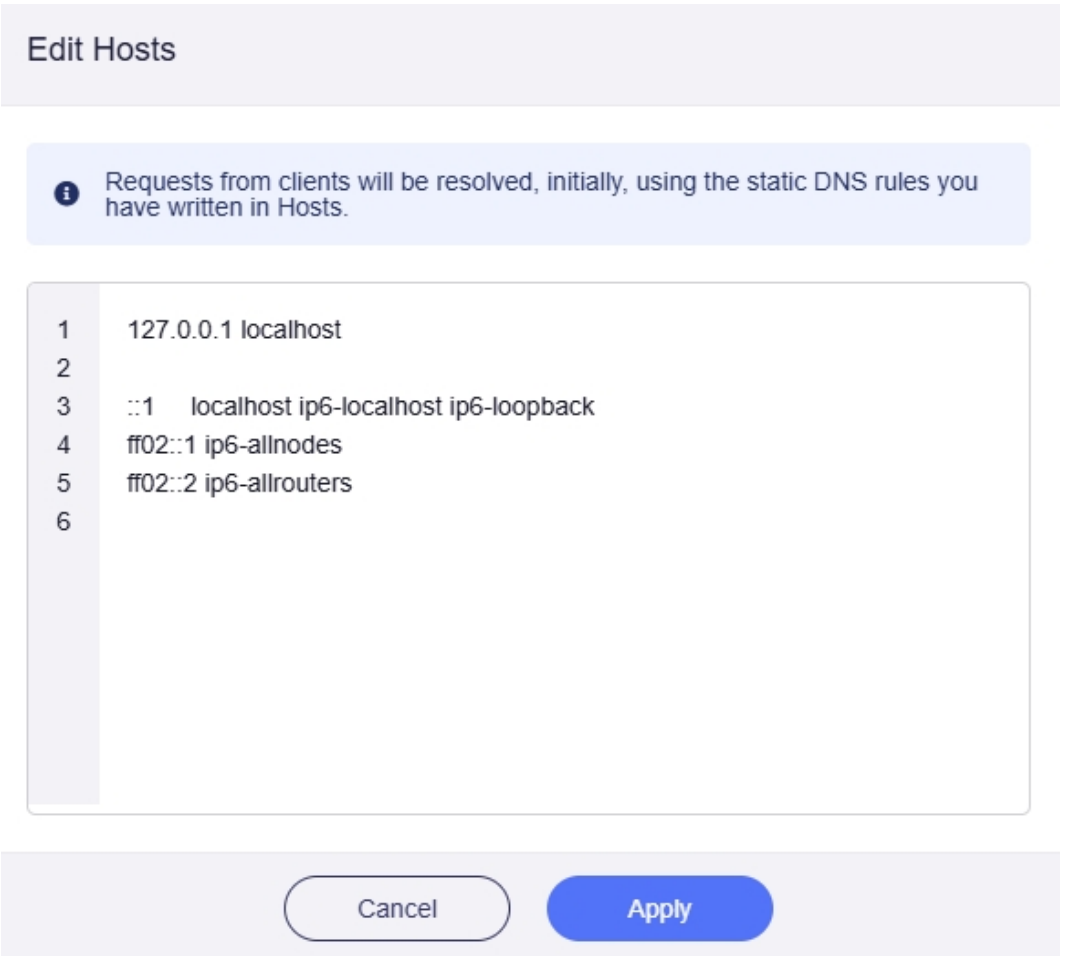


13.6 Port Management

Log in to your router's web admin panel and navigate to **NETWORK** > **Port Management**. This page allows you to manage the router's Ethernet ports.

The **WAN** section displays the port role (WAN or LAN), MAC address, and negotiated rate.

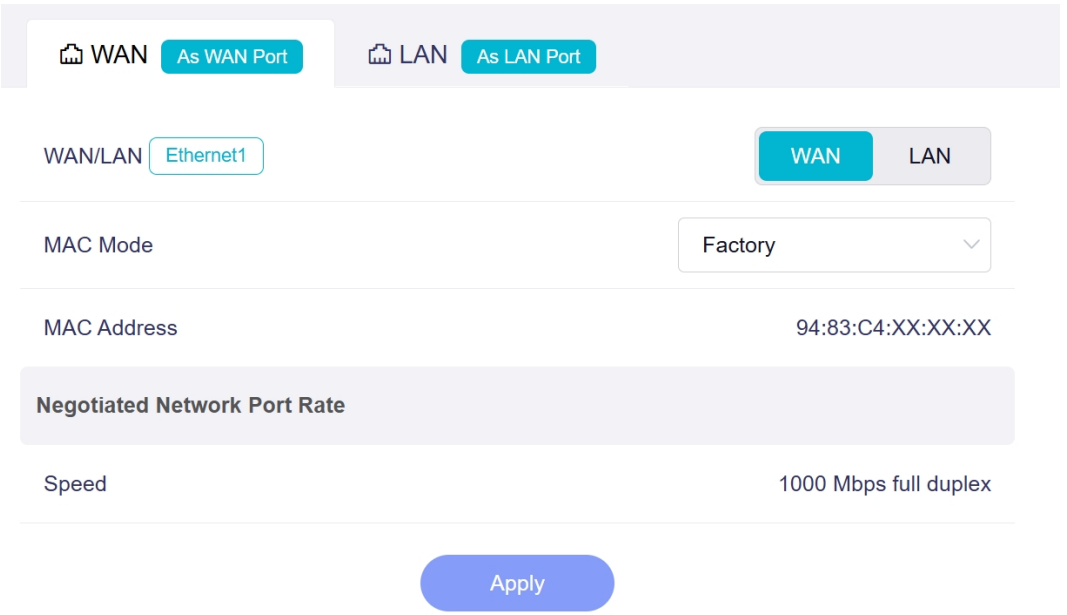

The **LAN** section allows you to switch LAN to WAN. You can switch the port role and check the negotiated rate here.

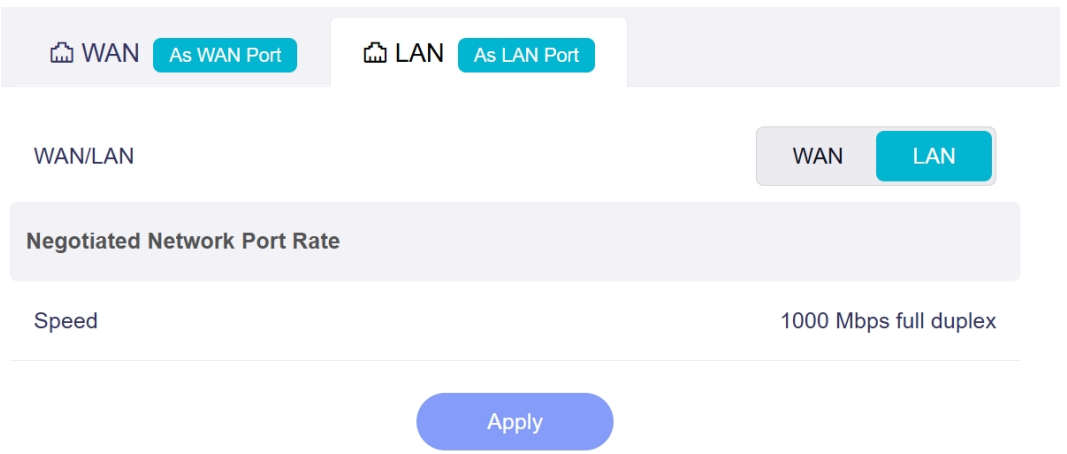


Note: The negotiated rate for WAN and LAN port is displayed only when an Ethernet cable is connected. It depends on both the Ethernet port and the Ethernet cable.

13.7 Network Mode

Network mode refers to the different operational roles and functions a router can assume to meet various network deployment needs.

Log in to your router's web admin panel and navigate to **NETWORK** > **Network Mode**. You can change the network mode of your router.

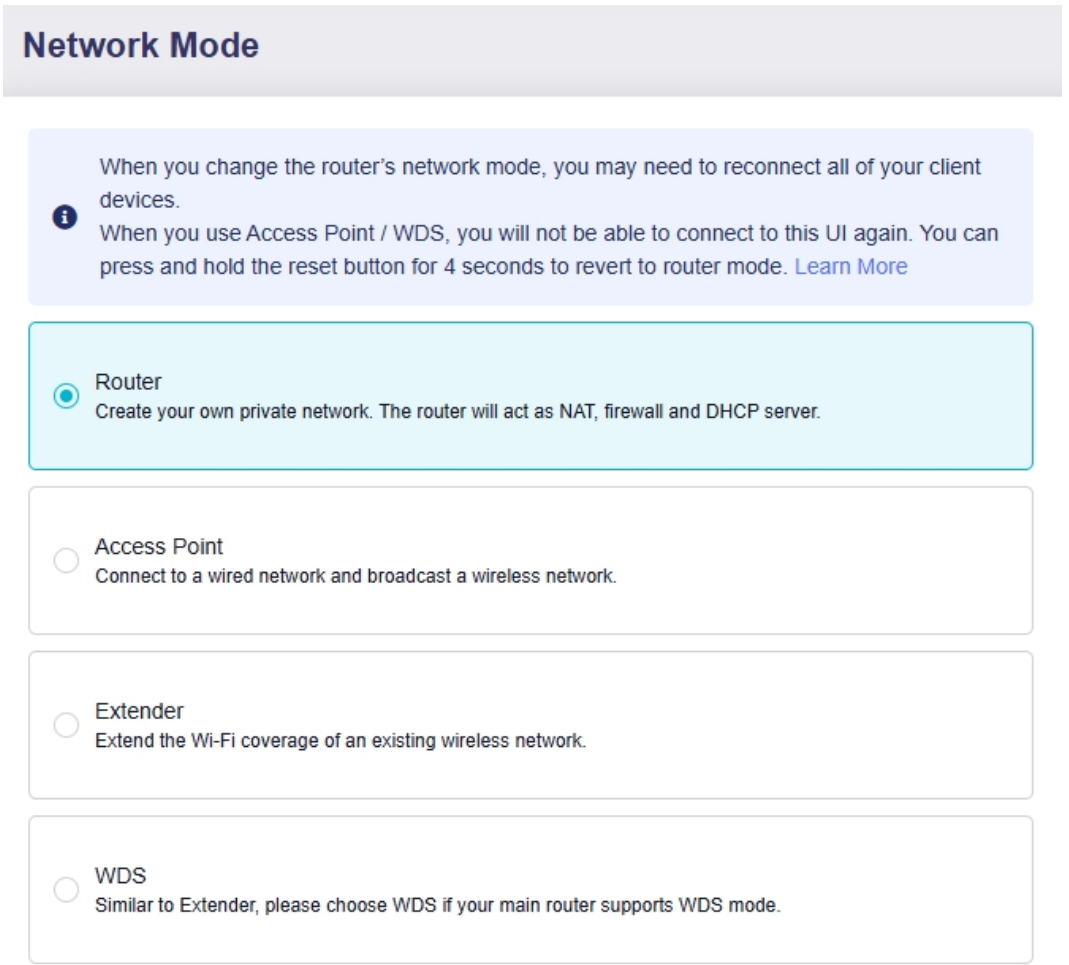

- **Router**: This is the default operational mode for most home and small office routers, designed to create a private local area network (LAN) and act as a dedicated gateway between the public internet and connected devices. In this mode, the router enables core functions including NAT, DHCP, and a built-in firewall. It connects to an upstream line such as broadband fiber, automatically assigns private IP addresses to connected devices, and provides network security for the entire private network.
- **Access Point**: This mode enables a router to connect to a wired network via a LAN cable and broadcast wireless signals, expanding Wi-Fi coverage in large spaces to allow more

devices to access the network. In this mode, the router disables its NAT and DHCP functions, operating purely as a wireless signal transmitter and switch rather than a standalone gateway.

- **Extender**: This mode is designed to extend the Wi-Fi coverage of an existing wireless network and eliminate signal dead zones in areas with poor connectivity. It enables the router to wirelessly receive signals from the main router, amplify them, and retransmit the boosted signal. Unlike Access Point mode, it requires no wired connection to the main router, but it may lead to bandwidth halving, as the device has to handle simultaneous signal reception and transmission.
- **WDS**: Wireless Distribution System (WDS) mode is similar to Extender mode as it extends Wi-Fi coverage wirelessly, but it supports wireless bridging between multiple compatible routers. It is recommended for wireless network expansion when the upstream router has WDS functionality.

  This mode is ideal for scenarios like covering multi-story buildings or small office campuses where multiple routers need to work together to form a unified wireless network. Unlike Extender mode, which only transmits signals from one main router to a single extender, WDS mode allows interconnected routers to both send and receive signals, enabling seamless coverage across larger areas with multiple signal nodes.

Note:


1. When the network mode is changed, all client devices shall reconnect to the router for stable network connectivity.
2. **In Access Point / WDS mode, you will not be able to access the web admin panel using the original IP address**. Instead, you need to log in to the upstream router to find the IP address it has assigned to this router, then use this IP address to access the web admin panel. If you do not have access to the upstream router, press and hold the reset button for 4 seconds to revert it to the default Router mode.
3. **In Access Point / Extender / WDS mode, the following features will be unavailable**: Access Control (Allowlist and Blocklist), AstroWarp, VPN, AdGuard Home, Parental Control, ZeroTier, Tailscale, Port Forwarding, Multi-WAN, DHCP Server, Address Reservation, Guest Network, DNS, Port Management, IPv6, Drop-in Gateway, IGMP Snooping, Network Acceleration, NAT Settings.

13.8 IPv6

IPv6 (Internet Protocol version 6) is the latest Internet Protocol designed to replace IPv4. It offers a larger pool of unique IPs, solving the address exhaustion issue of IPv4 and supporting the growing number of connected devices globally.

Log in to your router's web admin panel and navigate to **NETWORK** > **IPv6**. This page allows you to enable and configure IPv6 on your router. When IPv6 is enabled, WAN interfaces such as Ethernet will get their IPv6 addresses via DHCPv6.

Toggle on **Enable**, select the mode for your main network and DNS acquisition method, then click **Apply.**

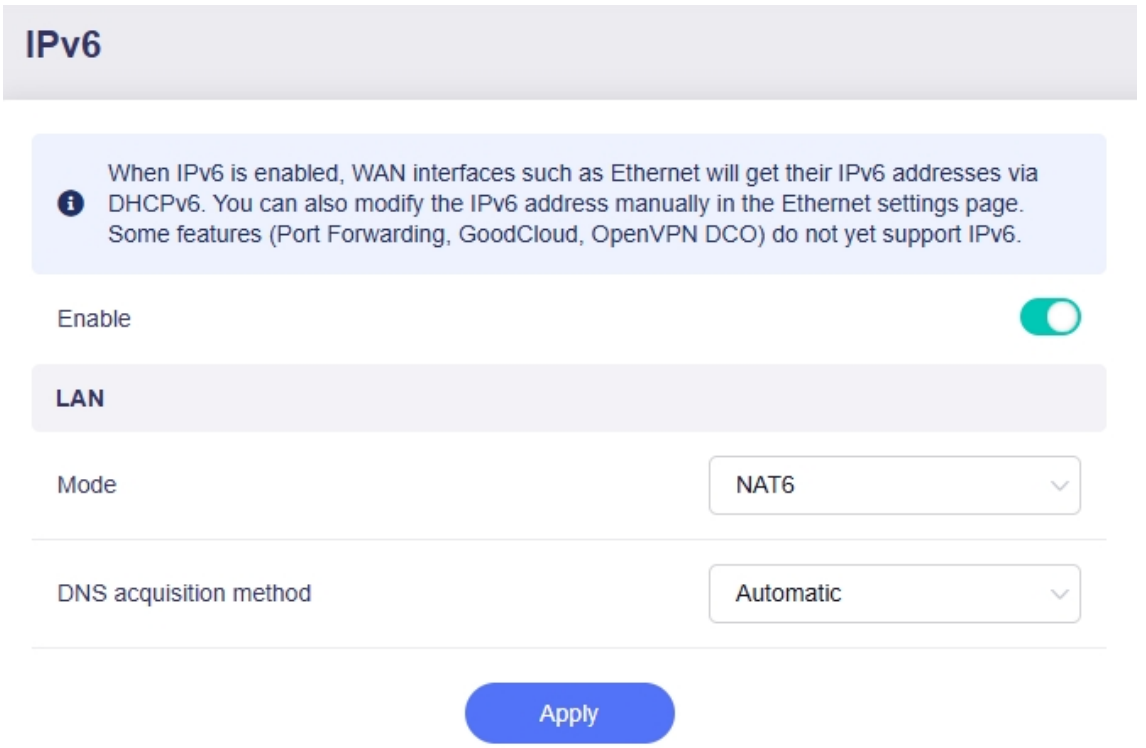

Note: Some features (e.g., firewall, GoodCloud, OpenVPN DCO) do not yet support IPv6. If you enable these features and IPv6 at the same time, it's likely to cause connectivity issues.

13.8.1 IPv6 Mode

Four modes are available: Native, Passthrough, NAT6 and Static IPv6.

- **Native**: This mode is applicable when the router directly obtains a public IPv6 address, and the router automatically assigns IPv6 addresses to online devices. This mode can meet the IPv6 access needs of most users.
- **Passthrough**: This mode is applicable when IPv6 packets need to be directly passed through without any processing or conversion. For example, some specific applications or services may require the complete preservation of IPv6 packet content for further processing or analysis. This mode is used by technical personnel for network debugging or security analysis.
- **NAT6**: This mode is suitable for scenarios where a router is used as a gateway to assign dynamic internal IPv6 addresses to each device on the network. In this mode, terminal devices connect through a Optical Network Terminal and obtain a local area network IPv6 address.
- **Static IPv6**: This mode is suitable for devices or services that require a fixed IPv6 address, such as servers or network printers. This mode ensures that the device always uses the same IPv6 address, facilitating management and access.

13.8.2 DNS Acquisition Method

It determines how the router obtains IPv6 DNS server addresses. There are two options: Automatic and Manual.


- **Automatic**: The router will obtain IPv6 DNS server addresses dynamically (e.g., via DHCPv6).
- **Manual**: Input custom IPv6 DNS server addresses. However, since DNS is used to resolve domain names to their corresponding IP addresses, manual DNS server configuration may result in DNS lookup failures. Please use it with caution.

13.9 Drop-in Gateway

Drop-in Gateway is an extension function that enables capability expansion for an existing primary router without replacing or re-configuring it. By connecting the GL.iNet router to the primary router via an Ethernet cable, users can add advanced features onto the existing network infrastructure, for example:

- Filter advertisements via AdGuard Home
- Enable VPN client
- Use encrypted DNS

Drop-in Gateway operates as an intermediate network system, routing data traffic from client devices through the GL.iNet router for processing before transmitting it via the primary router. During this process, it not only preserves existing network settings to ensure uninterrupted connectivity for all connected devices, but also allows you to manage network traffic for all or specific client devices if needed.

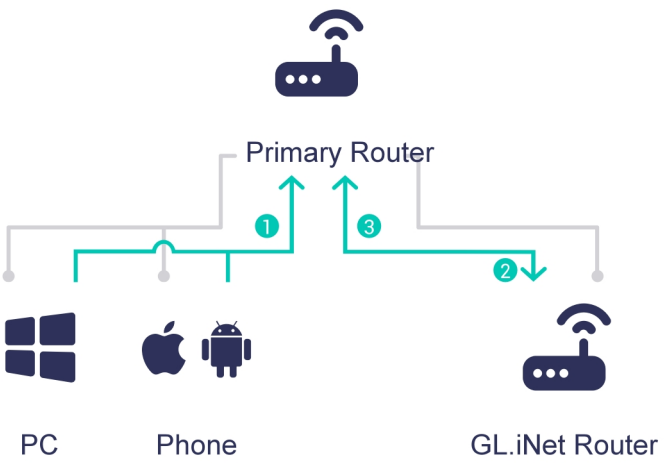


The diagram above consists of two types of lines: gray lines, and green lines marked with three arrows, each labeled with a corresponding number.

- **Gray lines** illustrate the physical connection topology: client devices (e.g., computer, laptop) connect to the primary router, and the primary router's LAN port links to the WAN port of the GL.iNet router (with Drop-in Gateway enabled) via an Ethernet cable.


- **Green lines** depict the sequential data transmission path when Drop-in Gateway is active, with the numbered arrows indicating the traffic flow order:
  1. Traffic from client devices is first routed to the primary router;
  2. The primary router forwards the traffic to the GL.iNet router for processing (e.g., ad filtering, VPN encryption);
  3. After processing, the traffic is sent back to the primary router, which then either delivers the final data to the original client devices or routes it out to the Internet.

Follow the steps below to enable Drop-in Gateway if needed.

1. Log in to your router's web admin panel and navigate to **NETWORK** > **Drop-in Gateway**. Toggle on **Enable Drop-in Gateway Mode**, and confirm the network parameters.

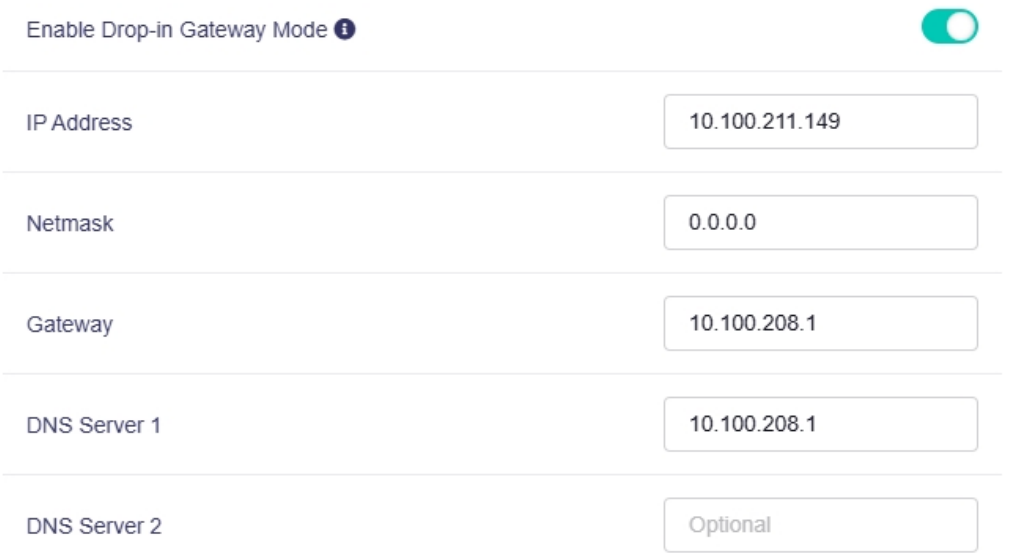


2. Select the configuration method, then click **Apply**. Please refer to this tutorial for details.

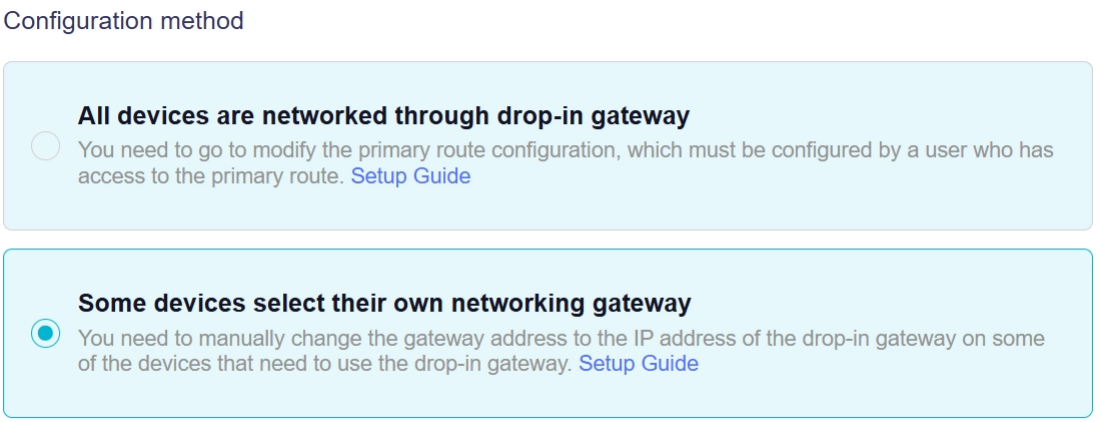

13.10 IGMP Snooping

IGMP Snooping listens to the IGMP protocol package, extracts the corresponding information, establishes and maintains the layer 2 multicast forwarding table, and then forwards the multicast group data to the host that joins the multicast group, while other hosts cannot receive the multicast group data.


Log in to your router's web admin panel and navigate to **NETWORK** > **IGMP Snooping**. You can enable it to use the multicast function on your router if needed.

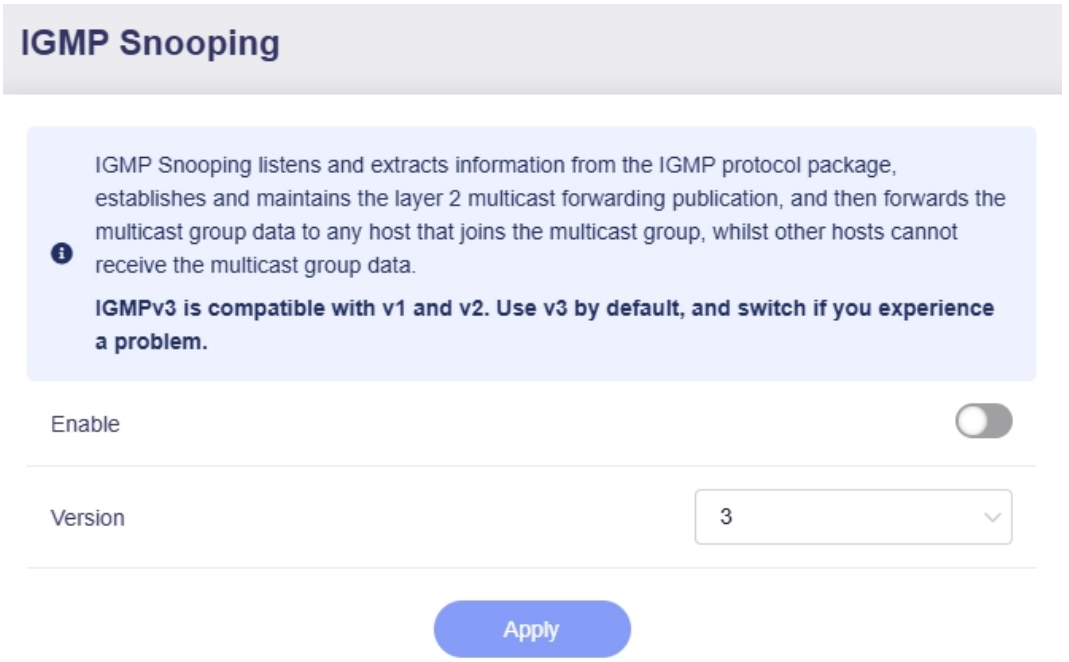

13.11 Network Acceleration

Network acceleration reduces CPU load and speeds up traffic packet forwarding, but can conflict with some features.

Log in to your router's web admin panel, and navigate to **NETWORK** > **Network Acceleration**. This page allows you to enable Network Acceleration and select the mode as Hardware Acceleration.

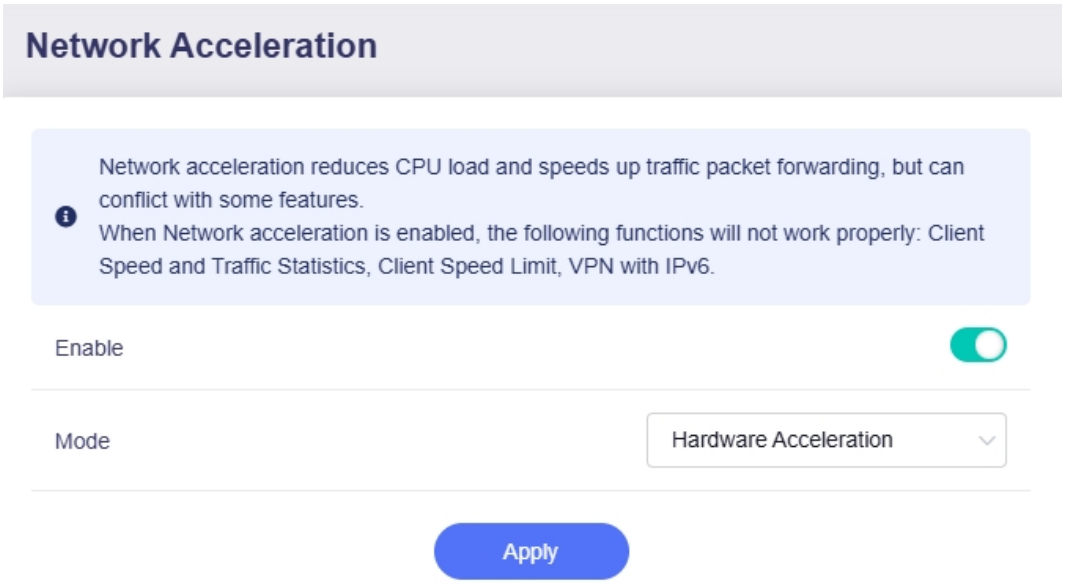


Hardware Acceleration mode offloads high-frequency network tasks (e.g., NAT, packet forwarding, checksum verification) to dedicated hardware such as NPUs or HWNAT chips. It specifically works on Ethernet and Repeater connections, excelling in these scenarios with fixed paths and simple rules to deliver high throughput, low latency, and minimal CPU load for wire-speed data transmission.

Note: When Network Acceleration is enabled, the following functions will not work properly: Client Speed Statistics, Traffic Statistics, Speed Limit, Parental Control, and VPN with IPv6.

13.12 NAT Settings

NAT Settings controls network address translation behaviors, optimizing P2P connections and VoIP services, but enabling certain options may weaken network security or trigger call anomalies.

Log in to your router's web admin panel, and navigate to **NETWORK** > **NAT Settings**. This page lets you enable Full Cone NAT to improve peer-to-peer connection stability for apps like gaming or streaming, and SIP ALG to fix compatibility issues with VoIP/SIP-based phone services.

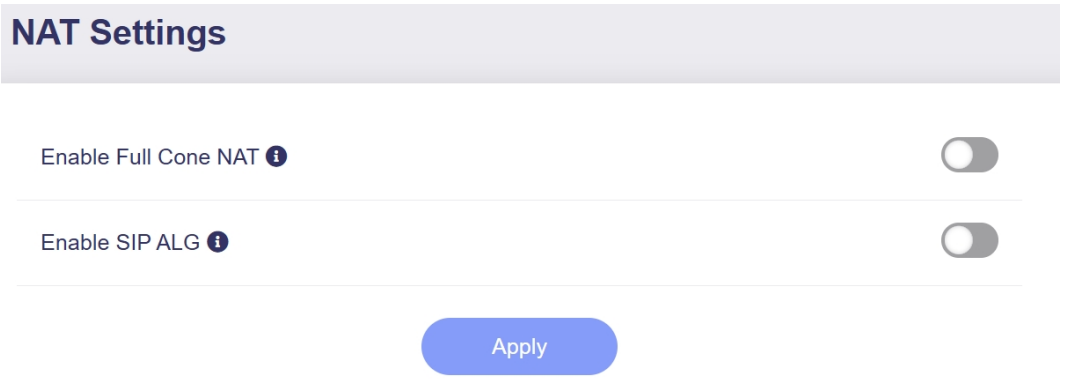

13.12.1 Full Cone NAT

Full Cone NAT acts as a "direct shortcut" for devices like game consoles or phones when connecting to others online (e.g., in multiplayer games or video calls).

By allowing external devices to directly reach local devices through the router — instead of hiding them behind multiple layers — it enhances peer-to-peer (P2P) connection stability, reduces latency, and resolves connection failures in P2P applications.

Note: Enabling this feature may lower security compared to other NAT types, as it exposes device ports to the public network.

13.12.2 SIP ALG

SIP ALG (Application Layer Gateway) functions as a router "translator" for VoIP/SIP-based communication services, such as business desk phones or app-based calls.

Designed to address NAT traversal challenges, it adjusts call data to ensure seamless transmission through multiple NAT layers — common in networks with multiple routers (e.g., a primary router and a GL.iNet router) — thereby mitigating conflicts and preventing call disruptions.

Note: Incompatible or poorly implemented SIP ALG may degrade call quality, leading to issues including one-way audio, unresponsive ringing, dropped calls, or calls being routed directly to voicemail.

Chapter 14


System

This chapter covers system management tools for the device, such as system overview, upgrade, scheduled tasks, time zone, log, firmware reset, and advanced settings.

14.1 Overview

Log in to your router's web admin panel and navigate to **SYSTEM** > **Overview**. This page displays hardware status and supports some simple controls, including:

- CPU, Memory, and Flash Status
- LED Control
- Device Information
- External Storage Protocol Switch

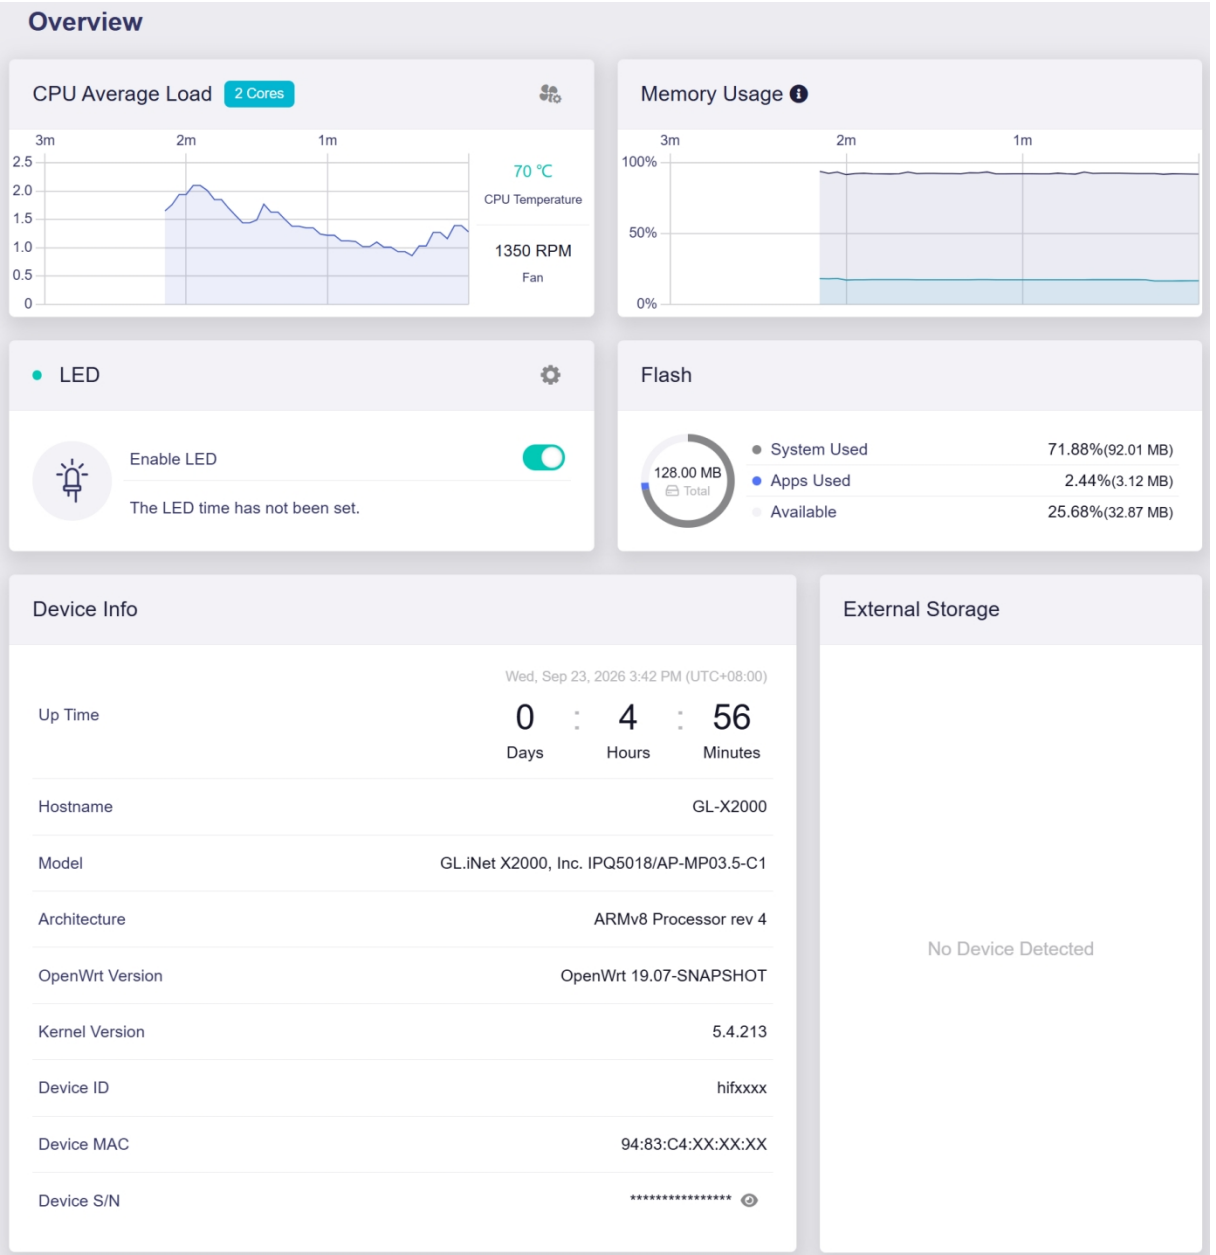


14.2 Upgrade

Log in to your router's web admin panel and navigate to **SYSTEM** > **Upgrade**. You can upgrade the router firmware and modem firmware through an online or local upgrade.

14.2.1 Firmware Upgrade

Online Upgrade

You can find the current firmware details here, including firmware version, firmware type (e.g., release, beta), and update time.

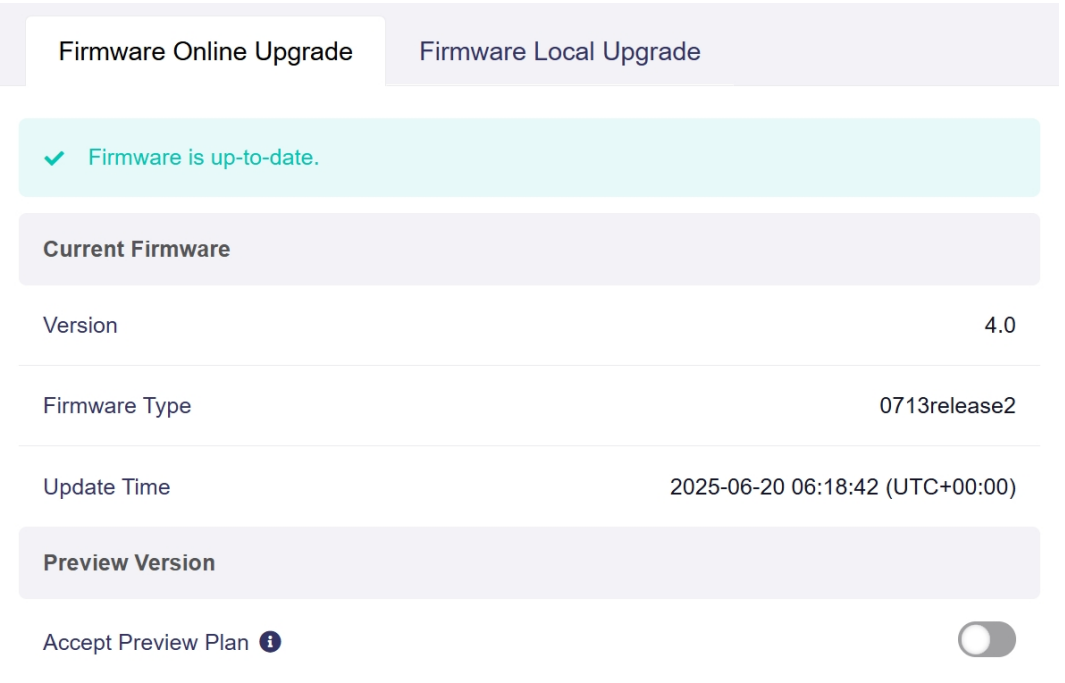

- **Accept Preview Plan**: If this option is enabled, you can try new features before the final version is issued and provide us with feedback. Set it once and it stays on. Note that these upgrades may not be stable.


If your router is connected to the Internet, it will check for the newer firmware version available for download.

Tip: When trying to perform an online upgrade, if it displays **Download Failed**, please navigate to **SYSTEM** > **Time Zone**, and fix the time zone error (sync to browser).


Local Upgrade

Local upgrade does not rely on an Internet connection for the router.

Download the correct firmware package (matching your router model) from the official Download Center to your local device. Then log in to the router's web admin panel, navigate to **SYSTEM** > **Upgrade** > **Local Upgrade** section, and upload the firmware package.

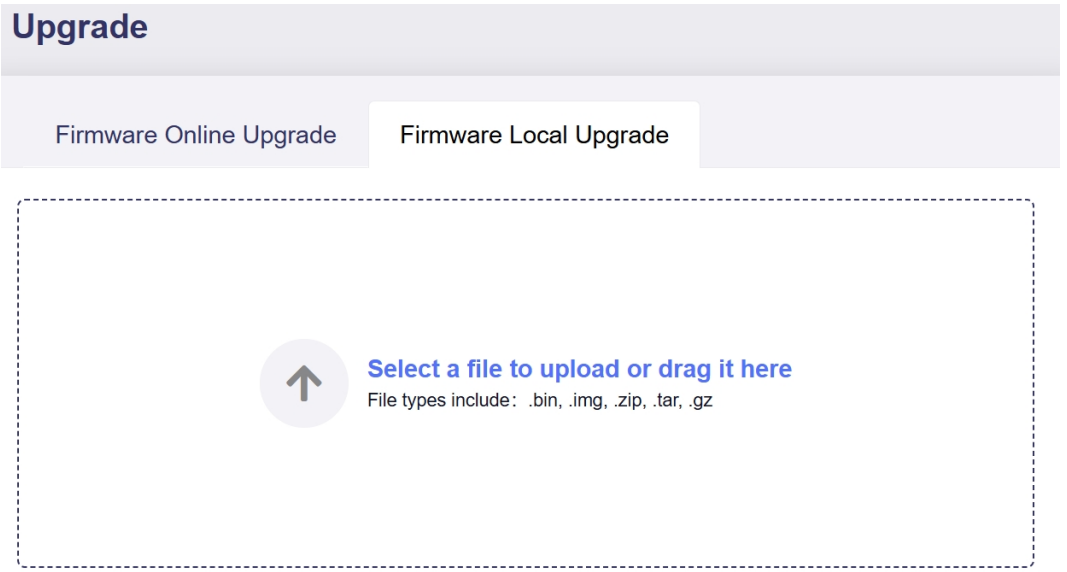

The page will display the firmware details. Verify these details before clicking **Install**.

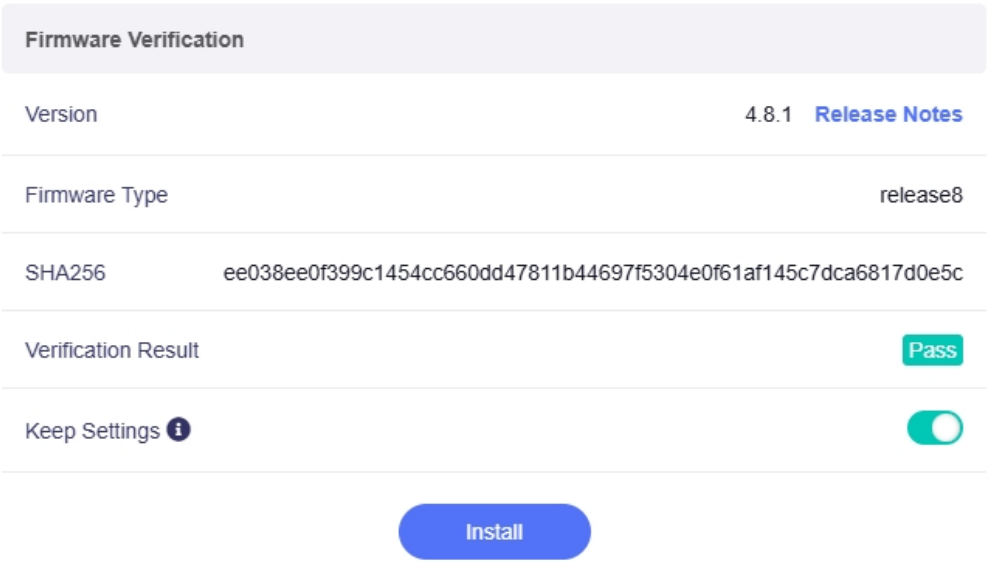


- **Keep Settings**: If enabled, current settings are retained. However, any manually installed packages must be reinstalled after the upgrade completes. Do not enable this option when downgrading the firmware.

14.2.2 Modem Upgrade


Online Upgrade

You can find the current cellular modem version here. If your router is connected to the Internet, it will automatically check for the latest cellular modem version from the manufacturer's server, simplifying the update process.

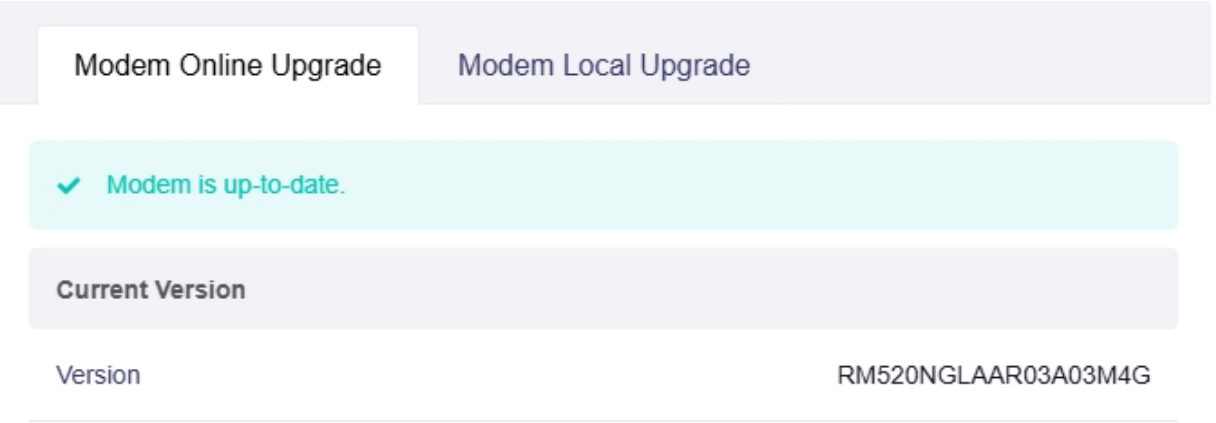

Local Upgrade

Manually upload a modem firmware file from your computer to update the cellular modem if needed.

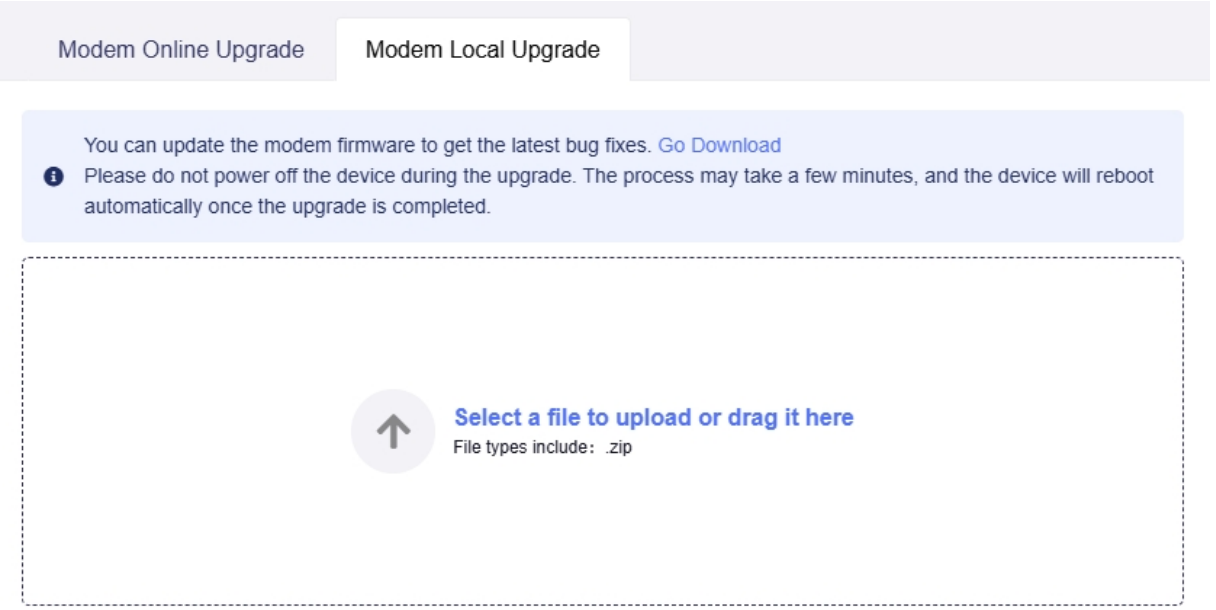

14.3 Scheduled Tasks


Log in to your router's web admin panel and navigate to **SYSTEM** > **Scheduled Tasks**. This page allows you to set up a daily schedule for some basic actions, such as turning LED light on and off, restarting the router, turning Wi-Fi on and off, etc.

Note: Please synchronize the time in the Time Zone before using this function. If the device is shut down at the scheduled time, the task will not be executed.

14.3.1 LED Display Schedule

Set an on/off schedule for your router's LED light if needed.


When enabled, set the on and off times, select the weekly effective dates, then click **Apply**.

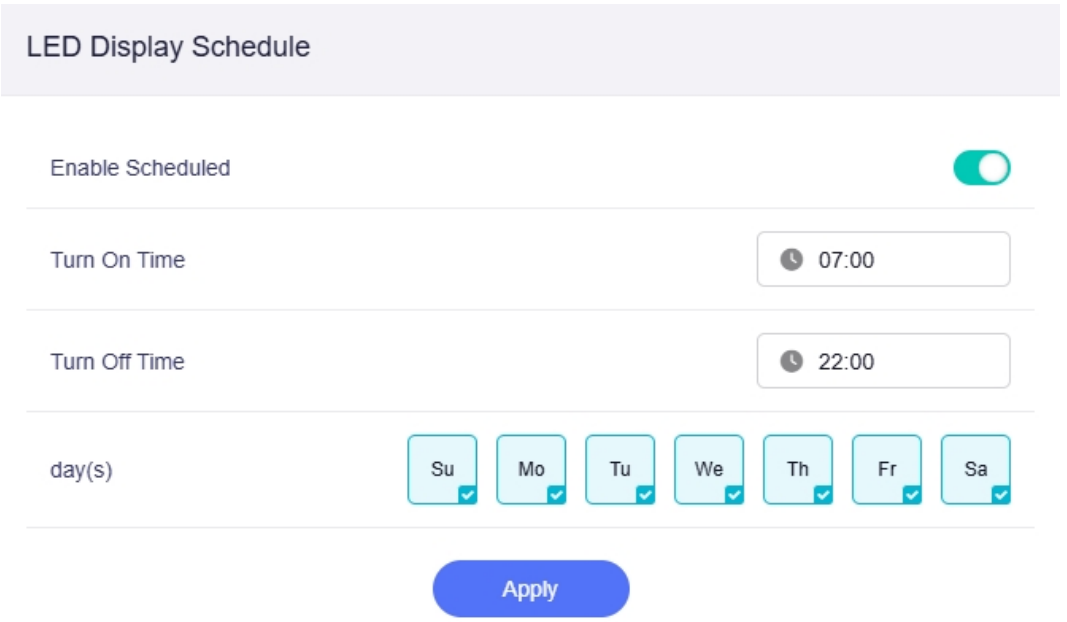

14.3.2 Schedule Reboot

Set a schedule to automatically restart your router if needed.

When enabled, set the reboot times, select the weekly effective dates, then click **Apply**.

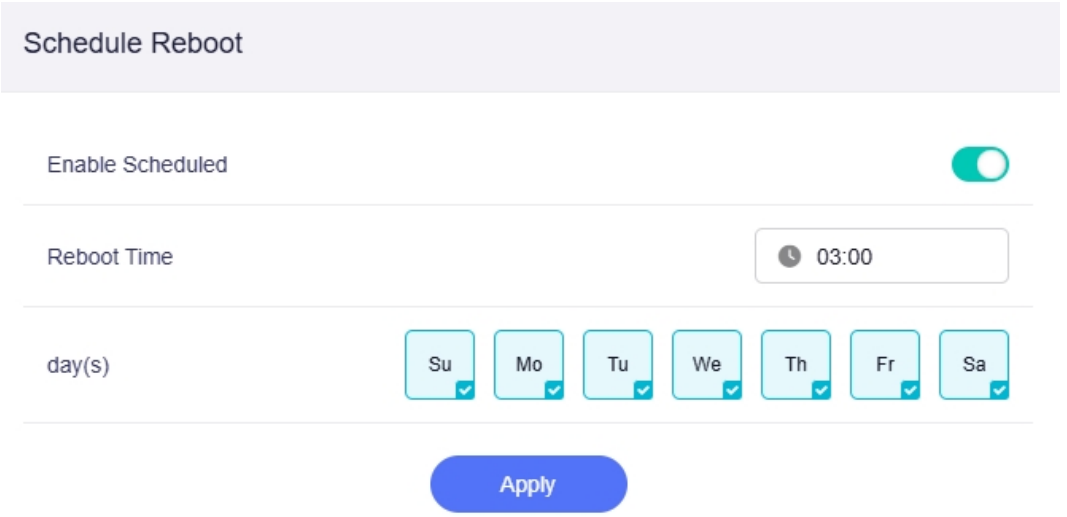


14.3.5 5GHz Wi-Fi Schedule


Set a schedule for your 5GHz Wi-Fi in two modes: Turn On/Off, and Switch TX Power.

Mode 1: Turn On/Off


You can enable the on/off schedule for both the 5GHz Main Wi-Fi and Guest Wi-Fi.

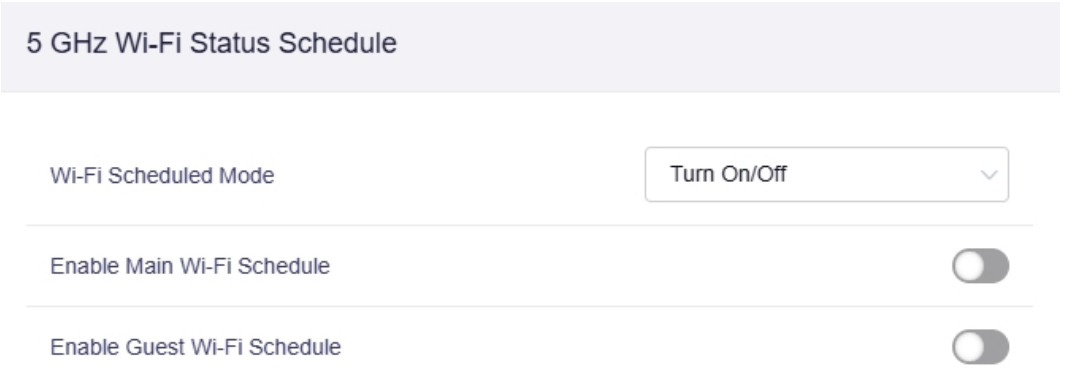

- **Main Wi-Fi Schedule**: When enabled, set the on and off times for your 5GHz Main Wi-Fi, select the weekly effective dates, then click **Apply**.

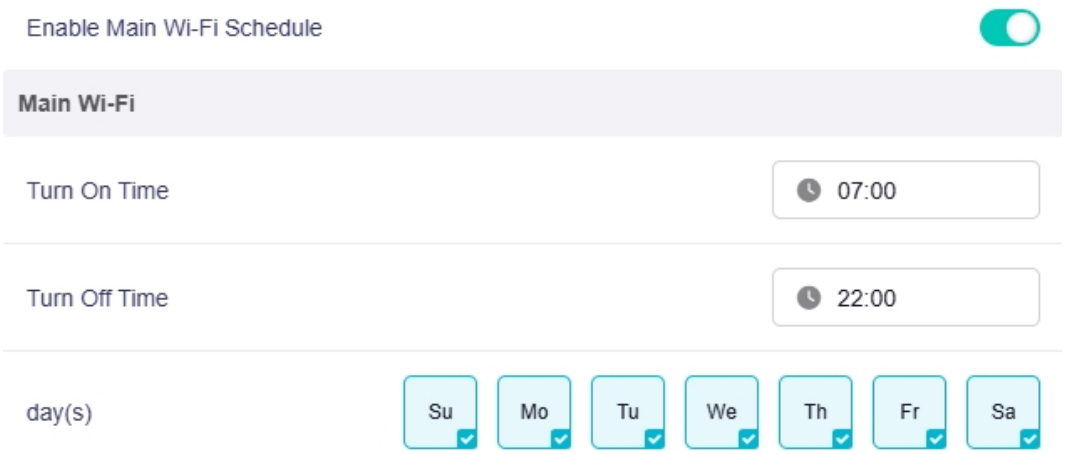


- **Guest Wi-Fi Schedule**: When enabled, set the on and off times for your 5GHz Guest Wi-Fi, select the weekly effective dates, then click **Apply**.

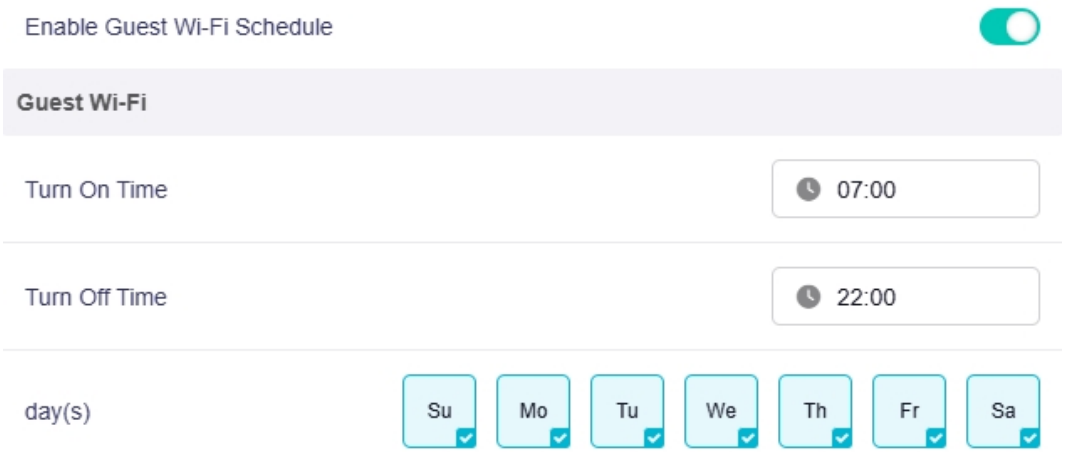


Mode 2: Switch TX Power

You can enable the TX power switching schedule for the 5GHz Main Wi-Fi.

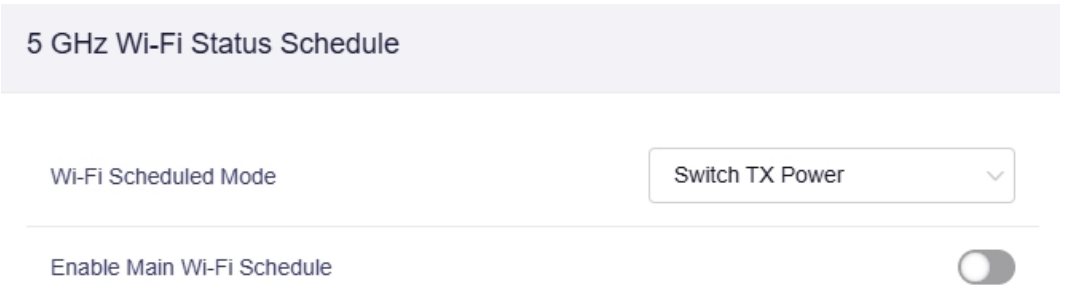

When enabled, set two timed actions for your 5GHz Main Wi-Fi to switch TX power, select the weekly effective dates, then click **Apply**.

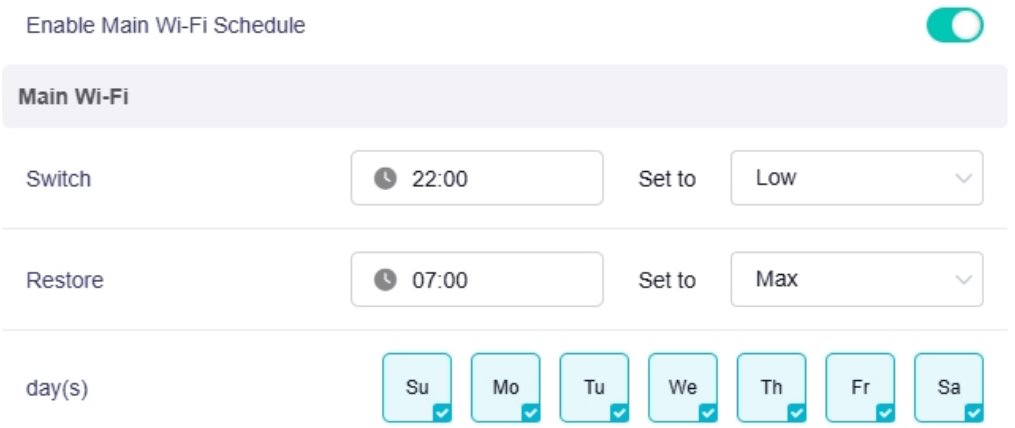


14.3.6 2.4GHz Wi-Fi Schedule


Set a schedule for your 2.4GHz Wi-Fi in two modes: Turn On/Off, and Switch TX Power.

Mode 1: Turn On/Off


You can enable the on/off schedule for both the 2.4GHz Main Wi-Fi and Guest Wi-Fi.

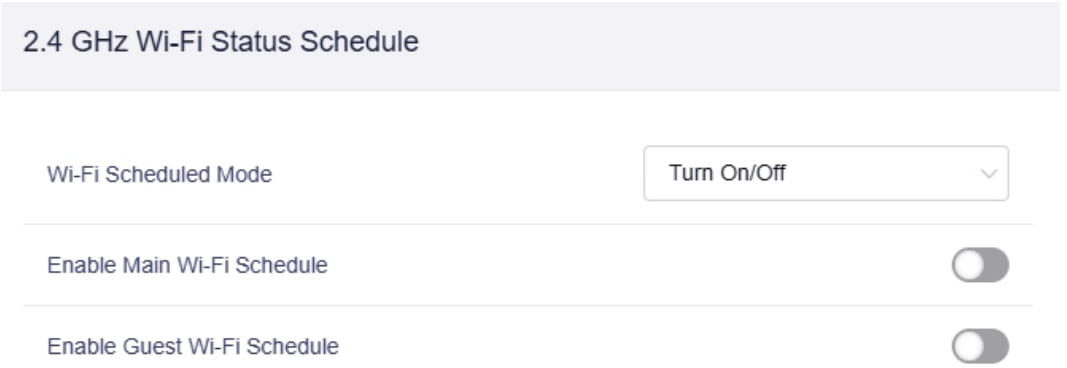

- **Main Wi-Fi Schedule**: When enabled, set the on and off times for your 2.4GHz Main Wi-Fi, select the weekly effective dates, then click **Apply**.

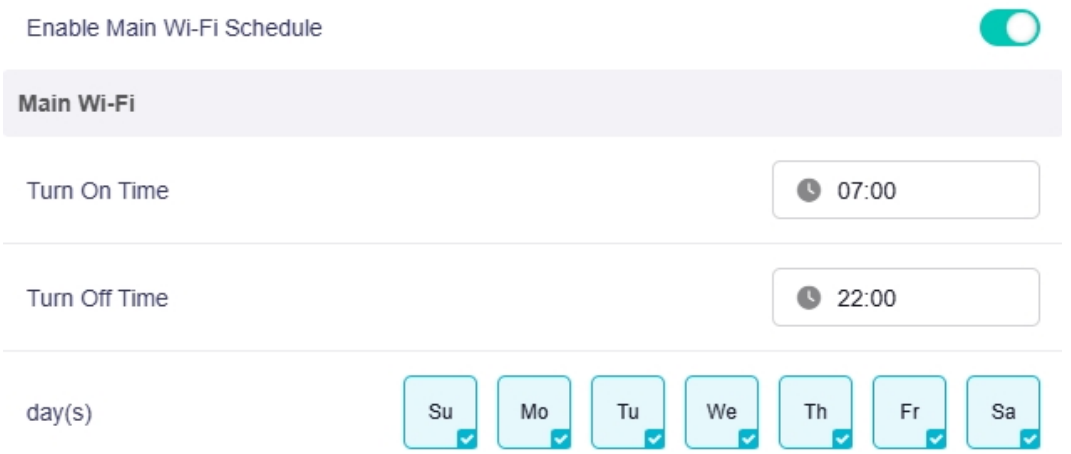


- **Guest Wi-Fi Schedule**: When enabled, set the on and off times for your 2.4GHz Guest Wi-Fi, select the weekly effective dates, then click **Apply**.

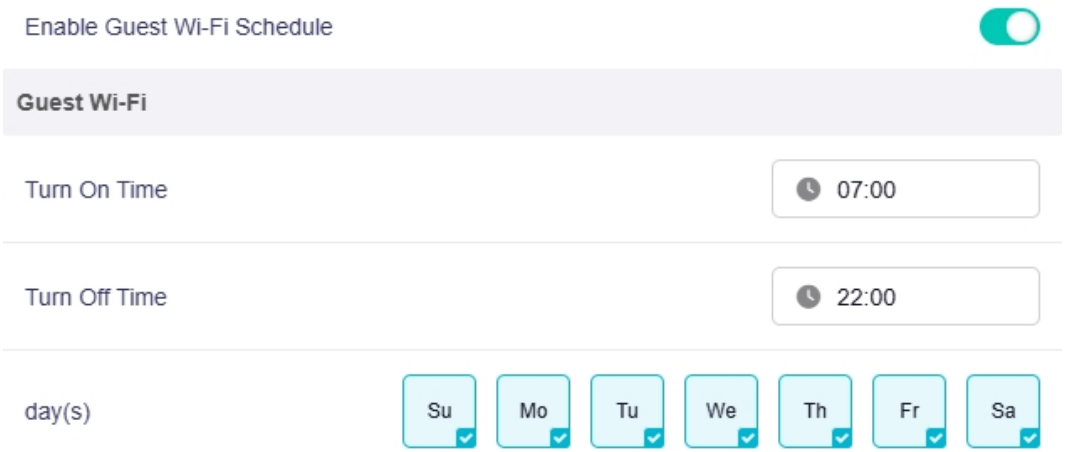


Mode 2: Switch TX Power

You can enable the TX power switching schedule for the 2.4GHz Main Wi-Fi.

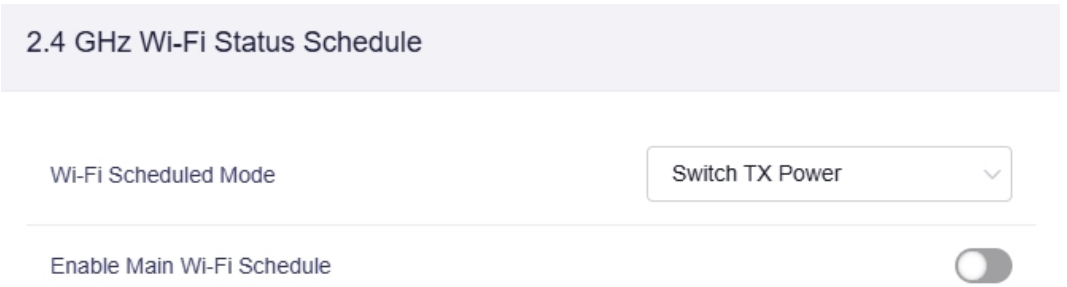


When enabled, set two timed actions for your 2.4GHz Main Wi-Fi to switch TX power, select the weekly effective dates, then click **Apply**.

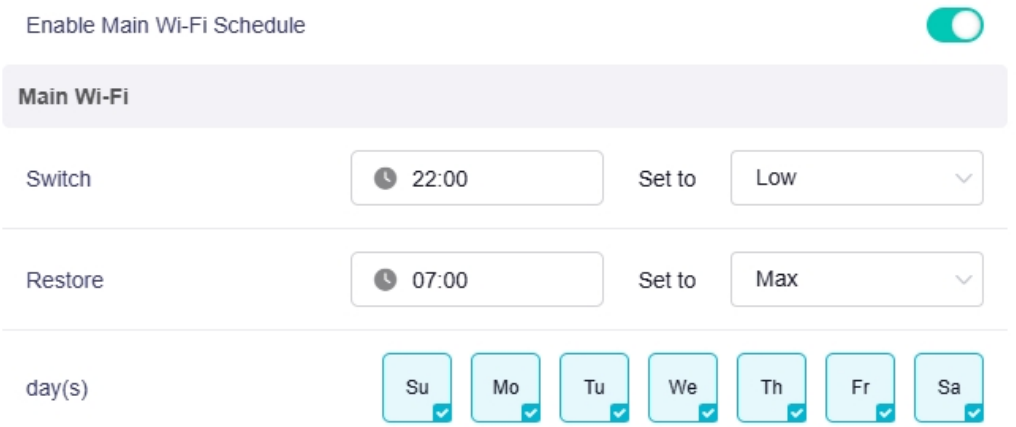


14.4 Time Zone


Log in to your router's web admin panel and navigate to **SYSTEM** > **Time Zone**. This page displays your router's system time, indicating the date, time, and corresponding time zone offset.

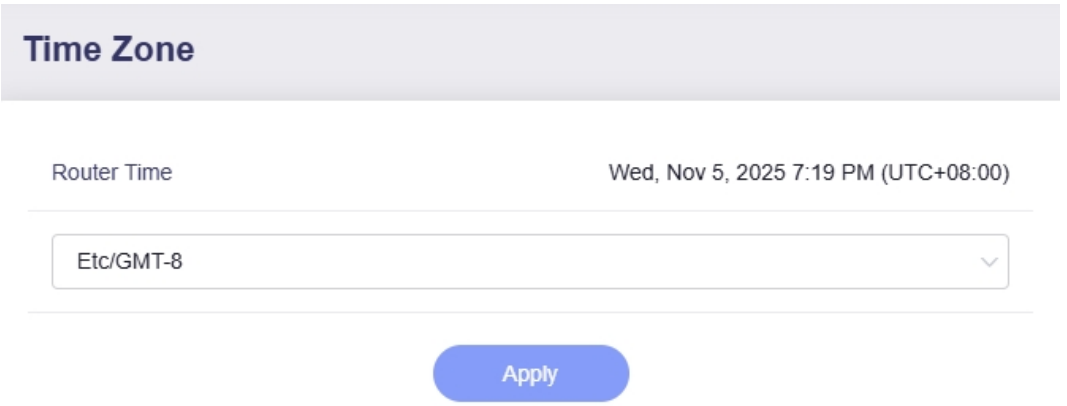

Some functions rely on the router's system time to take effect. Therefore, please ensure the correct time zone is properly synchronized. If the router's time zone is different from that of your browser, a prompt will be displayed as follows. Click the **Sync** button to synchronize the time zone.

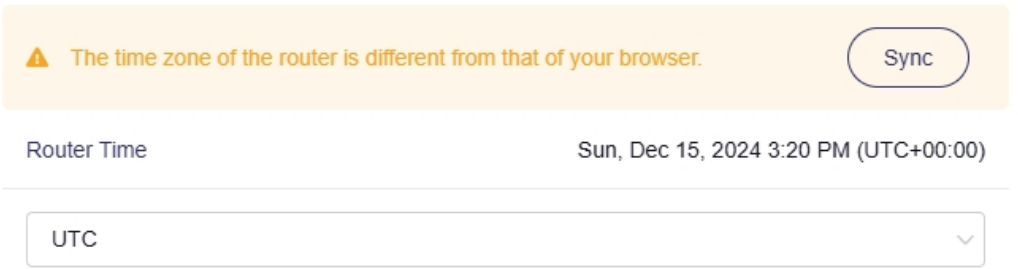


To switch time zone, select the appropriate time zone from the list to ensure the router's system time matches your local time.

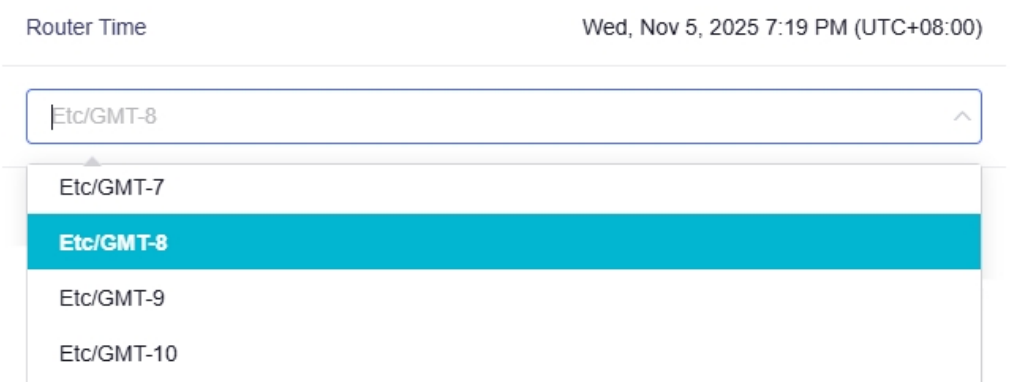



14.5 Log

Log in to your router's web admin panel and navigate to **SYSTEM** > **Log**. This page allows you to view logs of System, Kernel, Crash, Cloud and Nginx for analysis and troubleshooting. In addition, some cellular models that supports eSIM also provides eSIM log.

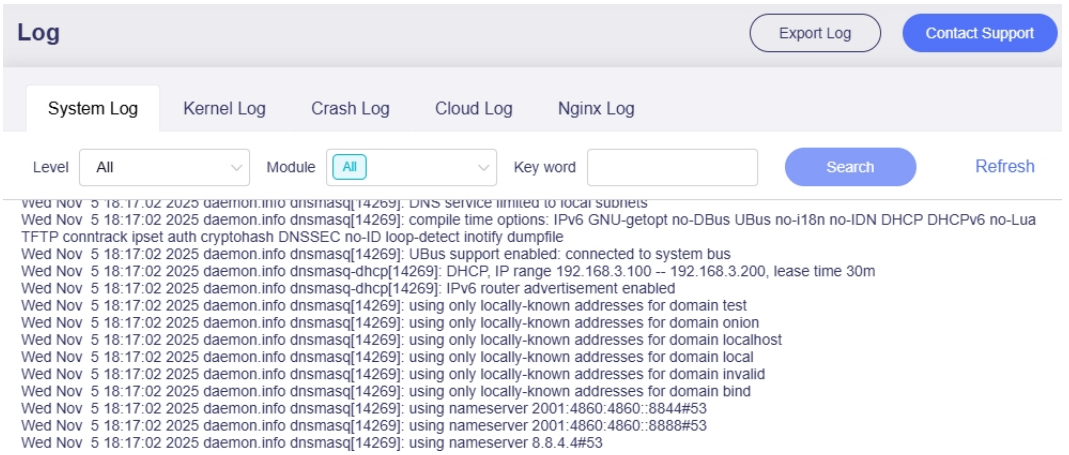

- **Search**: The system log page provides filtering for quick search. You can select the log level (e.g., all, info, error) or module (e.g., IPv6, Tethering, Cellular) from the drop-down list, or enter keywords to quickly query logs.
- **Refresh**: Click this button to refresh logs.
- **Export Log**: Click this button to export debug info along with the logs.
- **Contact Support**: Click this button, fill in detailed information in the pop-up window on the right, then click **Send**. Your feedback will be sent directly to GL.iNet Technical Support.

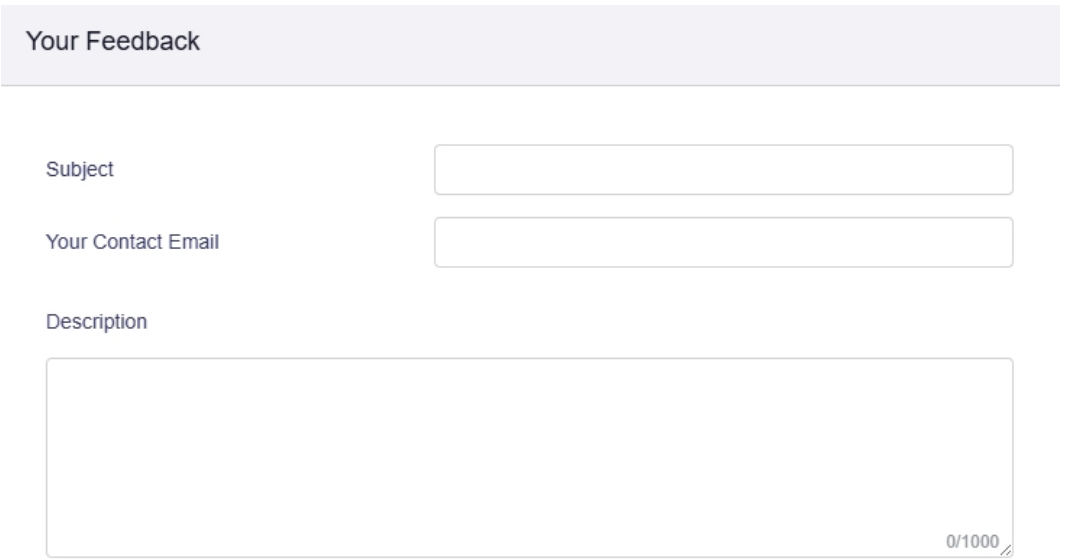

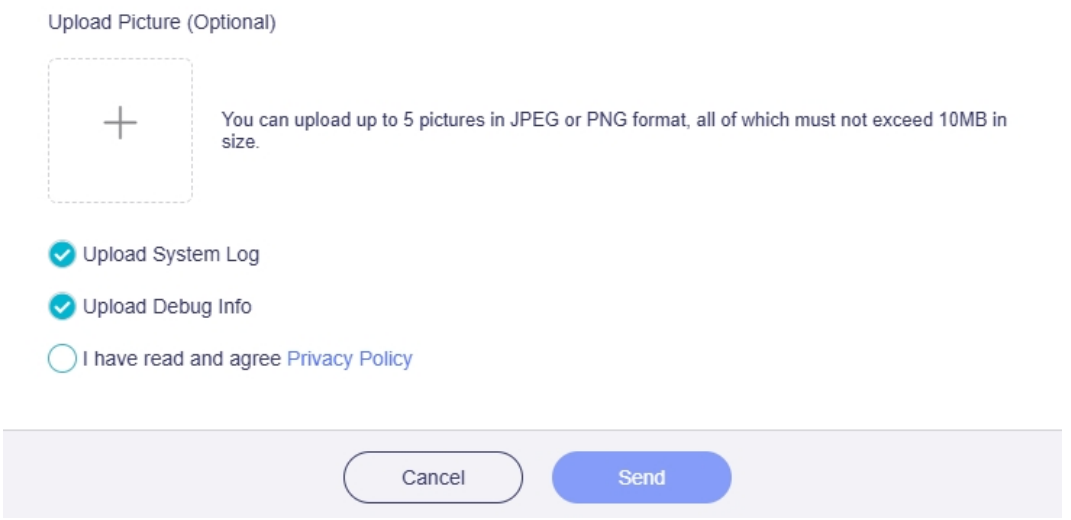
Upload Picture (Optional)
You can upload up to 5 pictures in JPEG or PNG format, all of which must not exceed 10MB in size.
Upload System Log
Upload Debug Info
I have read and agree Privacy Policy
Cancel
Send


14.6 Security

Log in to your router's web admin panel and navigate to **SYSTEM** > **Security**. This page contains configuration options for the router's local and remote management, including:

- Admin password
- Local access for web admin panel, LuCI, and SSH
- Remote HTTPS/SSH access
- Open ports on router

14.6.1 Admin Password

In this section, you can change the login password of the web admin panel.

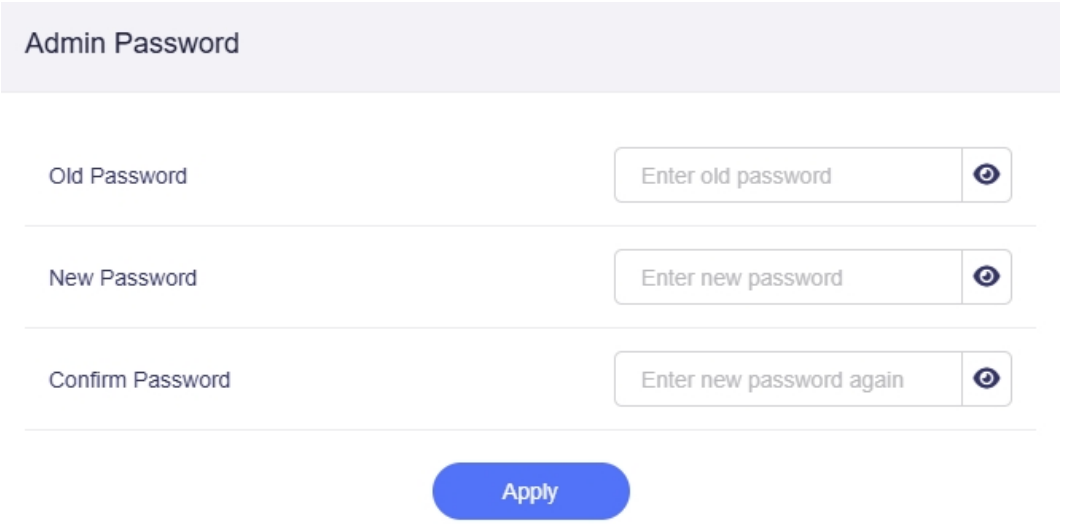


The requirements for the admin password are as follows:

1. Minimum 10 characters and maximum 63 characters in length.
2. Letters (case sensitive), numbers and symbols (e.g., ! @ # $ % ^ & * ( ) _ + - = , . > < | ? / \ [ ] { } : ; " ' ` ~) are allowed.
3. At least two types (uppercase letters, lowercase letters, numbers, and symbols) are required.

14.6.2 Access Control

This section manages access to the router's multiple interfaces (Admin Panel, LuCI, and SSH). It can prevent scanning and intrusion attempts on the default port and avoid network problems caused by port conflicts.

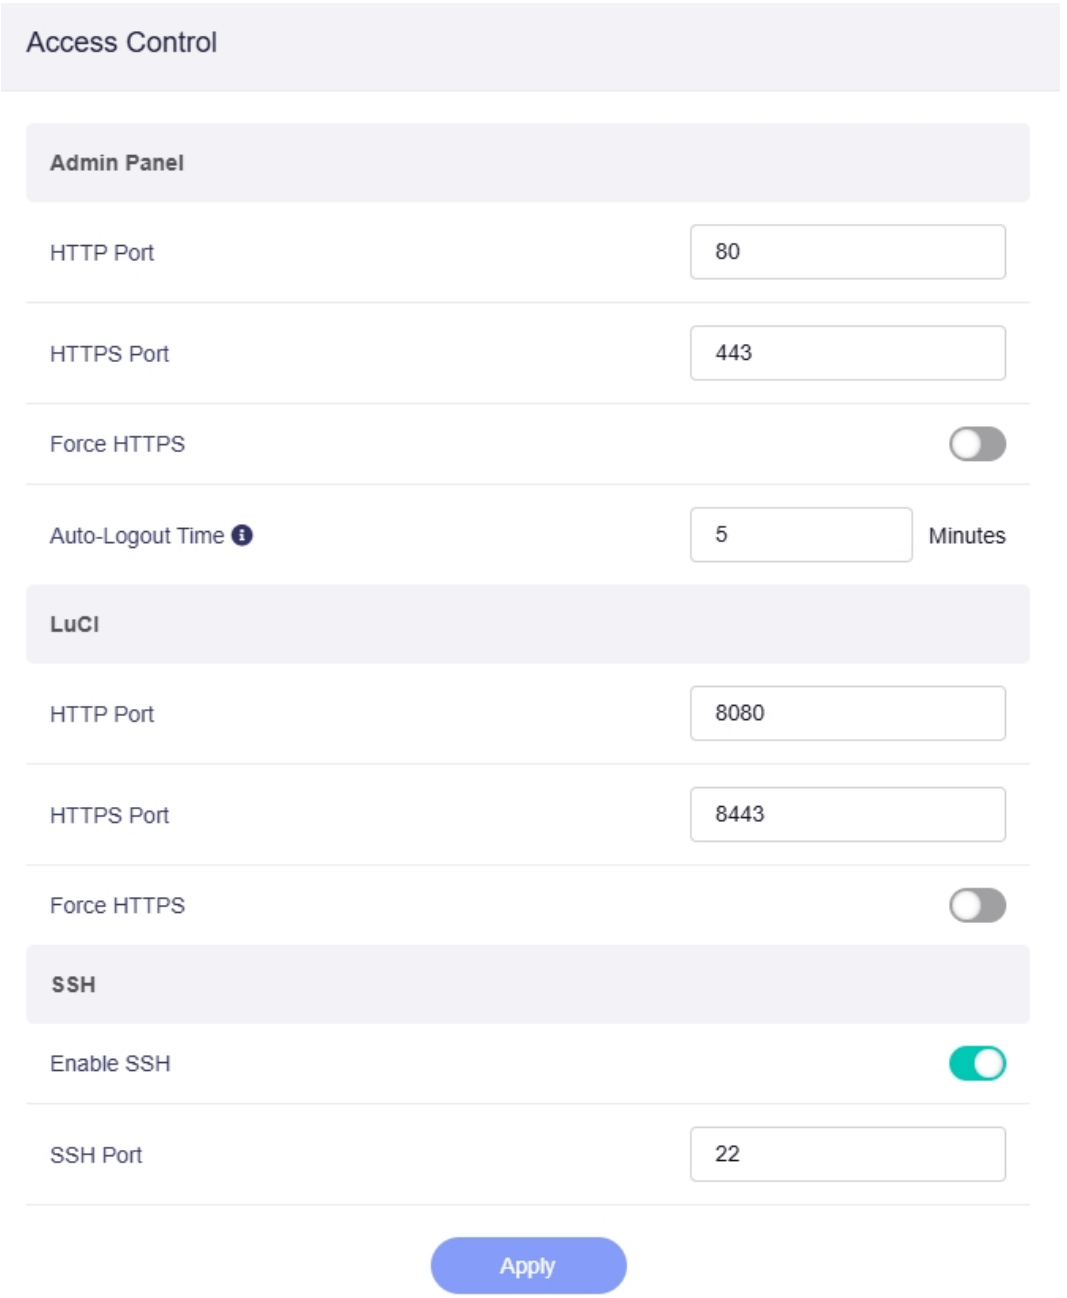

Admin Panel

- **HTTP Port**: Defaults to 80, used for unencrypted HTTP access to the web admin panel.
- **HTTPS Port**: Defaults to 443, used for secure HTTPS access to the web admin panel.

- **Force HTTPS**: When enabled, access to the web admin panel is enforced to use a secure HTTPS connection.
- **Auto-Logout Time**: Set to 5 minutes by default, it automatically logs out idle admin sessions after this duration for security. You can customize the auto-logout time, ranging from 1 minute to 3 hours.

LuCI

Note: Please install LuCI on the Advanced Settings before setting the access control for it.


- **HTTP Port**: Defaults to 8080, for unencrypted HTTP access to the LuCI interface.
- **HTTPS Port**: Defaults to 8443, for secure HTTPS access to the LuCI interface.
- **Force HTTPS**: When enabled, access to the LuCI interface is enforced to use a secure HTTPS connection.

SSH

- **Enable SSH**: Enabled by default, it controls whether the SSH access to the router is permitted.
- **SSH Port**: Defaults to 22, the port used for SSH access to the router.

Note:


1. If you assign a port number that conflicts with a reserved port (or one reserved for specific services by browsers/network conventions), a prompt will appear stating "This port is forbidden by the browser".

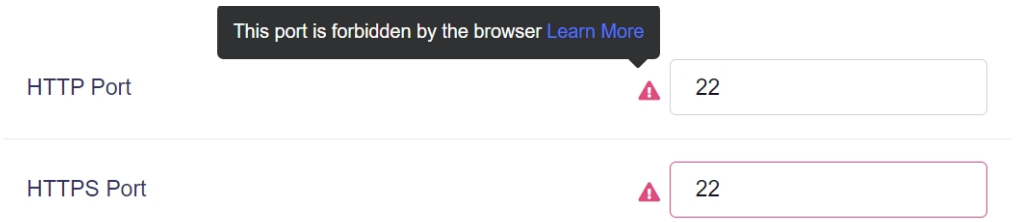


2. If the port number is modified in the firmware, you need to enter the correct port number to access the admin panel. If you forgot the port number, please reset the router to restore the default port number.
3. LuCI access settings are available only after LuCI is installed. If these settings are not visible, go to **SYSTEM** > **Advanced Settings** to install LuCI.

14.6.3 Remote Access Control

This section manages remote access to router interfaces, including HTTPS, SSH and WAN-side ping. It also allows you to restrict access from specific IP addresses, striking a balance between remote accessibility and network security.

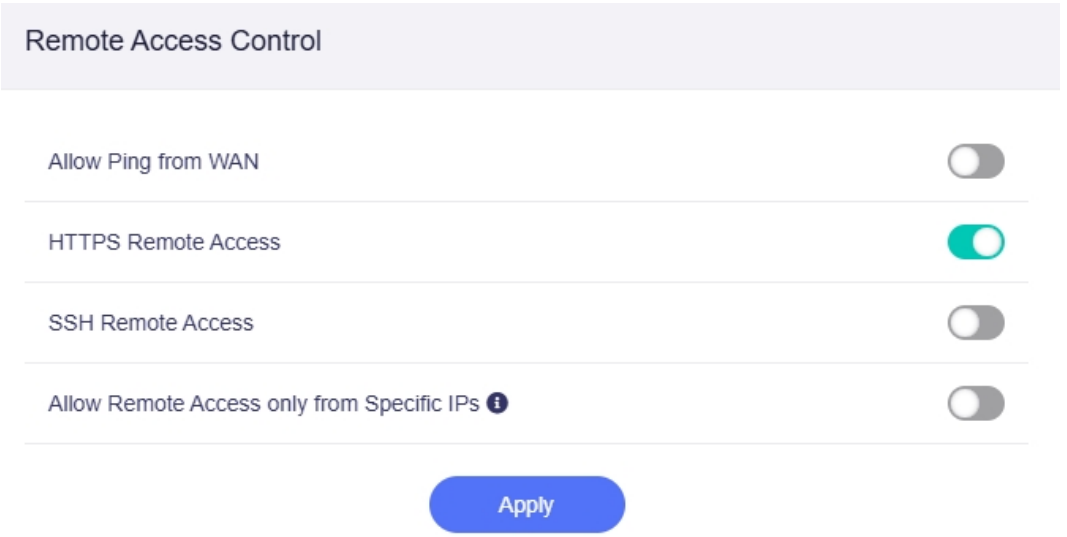


- **Allow Ping from WAN**: Allowing Ping from the router's WAN side can help users check whether the router is reachable over the WAN when there is a network issue, as well as determine network latency and packet loss.
- **HTTPS Remote Access**: HTTPS Remote Access enables secure remote access to the router's web admin panel via the HTTPS protocol. It ensures encrypted data transmission when managing the router remotely through a web browser.
- **SSH Remote Access**: SSH Remote Access enables secure access to the router terminal. It allows users to remotely manage the router via SSH, establishing an encrypted tunnel for tasks.
- **Allow Remote Access from Specific IPs**: This feature is only available when any of the above three features are enabled. You can add multiple specified IP addresses to remotely manage the router only from devices with these IPs.

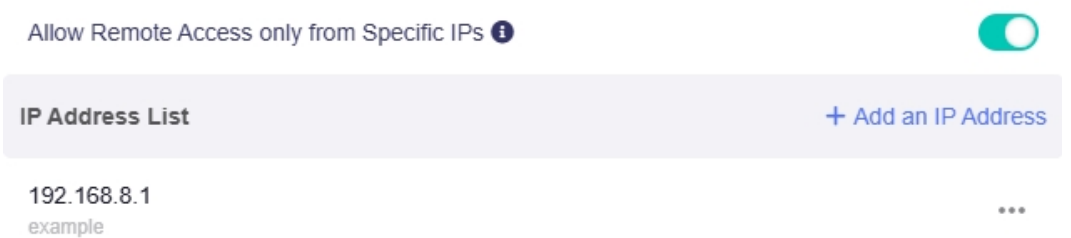


14.6.4 Open Ports on Router

This section manages port forwarding for services on your router. Some services, such as web and FTP, require their respective ports to be opened on the router in order to be publicly reachable from the WAN network. For security reasons, services installed on the device are only accessible within the LAN by default. If you need to enable such WAN access, you can open specific ports here.

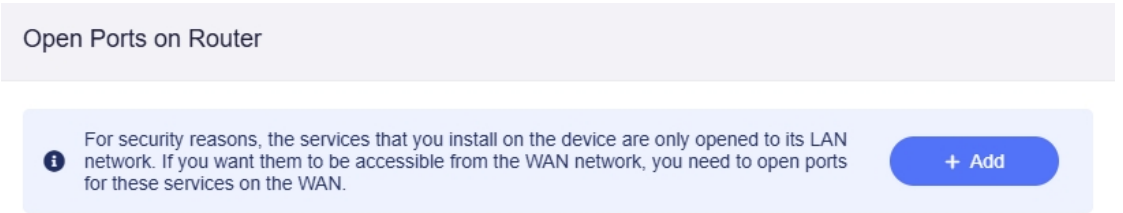

To open a port, click **Add**, and enter the required information in the pop-up window.

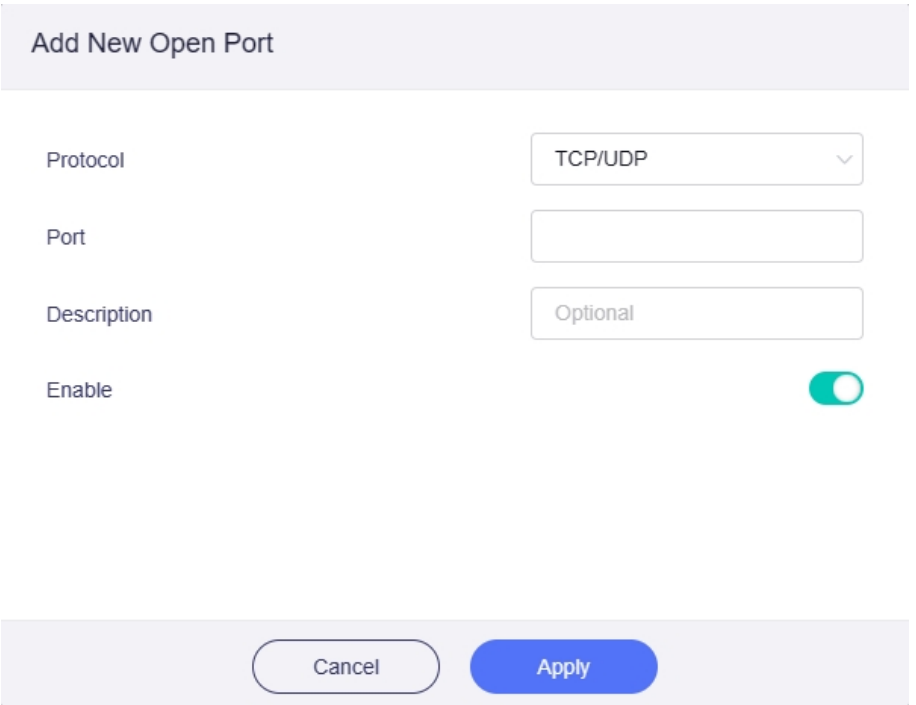


- **Protocol**: Select the network protocol (TCP, UDP, or TCP/UDP) for the port. This determines how data is transmitted for the service associated with the port.
- **Port**: Enter the specific port number you want to open.
- **Description** (Optional): Add a brief note to describe the purpose of this open port (e.g., “Web Server” or “FTP Service”) for easier management.
- **Enable**: Toggle this switch to activate or deactivate the port forwarding rule.

14.7 Reset Firmware

If the router malfunctions, you can try resolving the issue by resetting the firmware.

Log in to your router's web admin panel and navigate to **SYSTEM** > **Reset Firmware**. Click **Delete All and Reboot** to reset the firmware if needed.

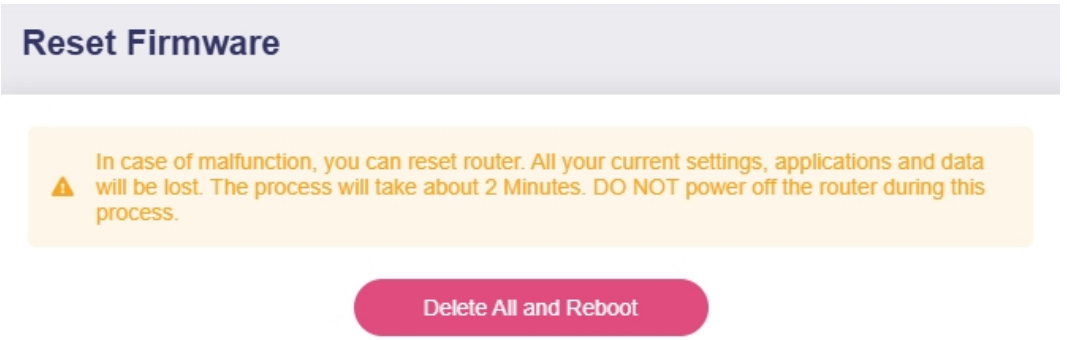

Note: All your current settings, applications and data will be cleared. The process will take about 2 minutes. Do not power off the router during this process.


If you fail to access the router's web admin panel, try resetting your router using the physical reset button on the side.

14.8 Advanced Settings


Log in to your router's web admin panel and navigate to **SYSTEM** > **Advanced Settings**. This page allows you to modify advanced settings in LuCI, which is the default web user interface of OpenWrt. As an open and independent project maintained by OpenWrt, LuCI is provided as-is. GL.iNet is not responsible for LuCI maintenance.

Follow the steps below to log in to the LuCI interface.


1. Click **Install Now**, and it will be installing LuCI interface.

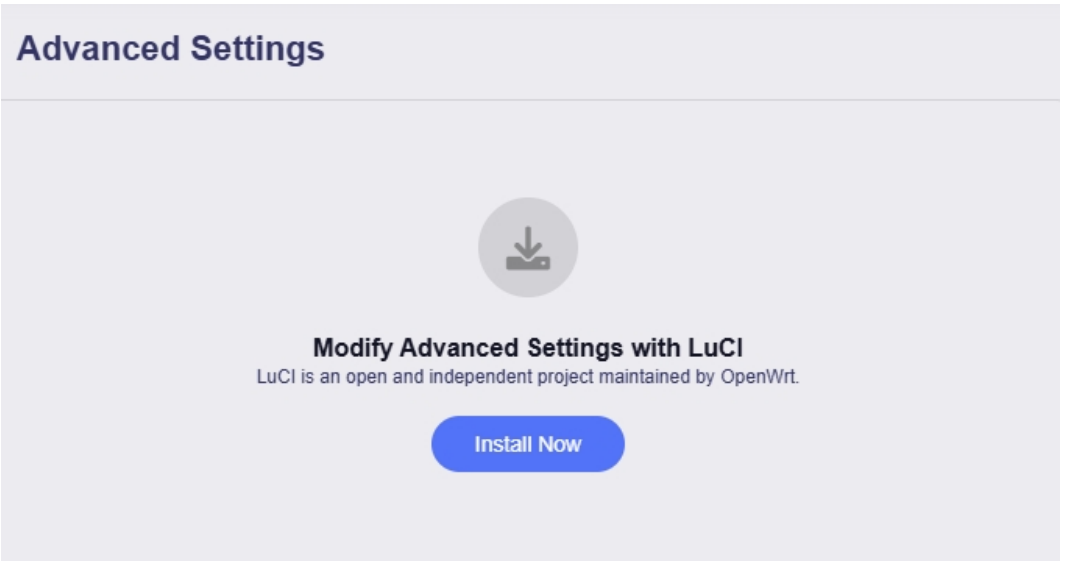

2. Click **Go To LuCI**, and you will be re-directed to the LuCI login page.

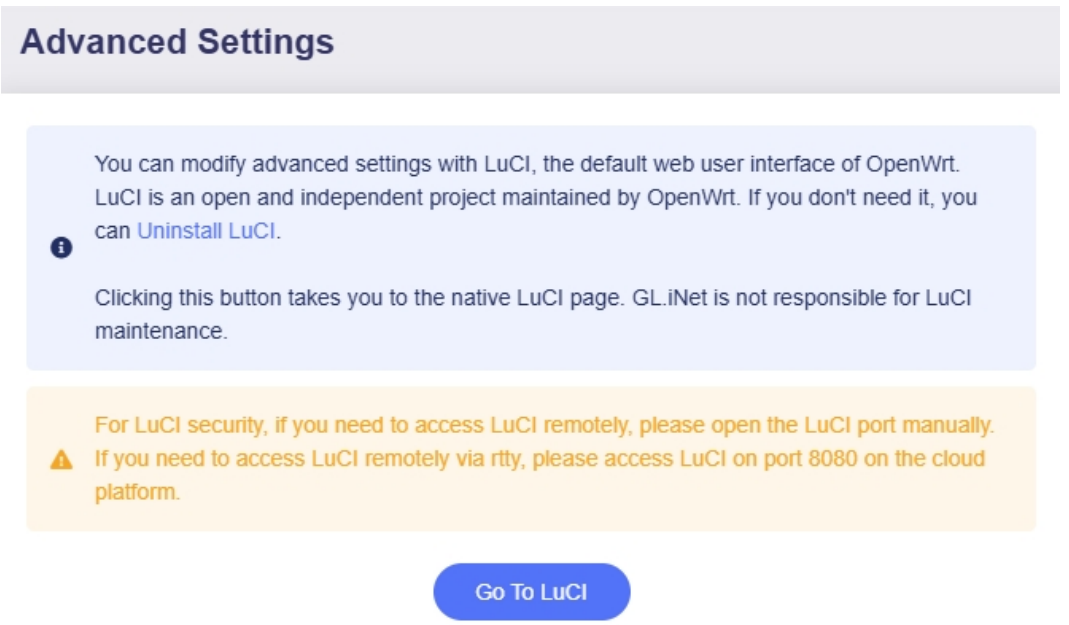

3. Enter the login password, which is the same as the password of the web admin panel.

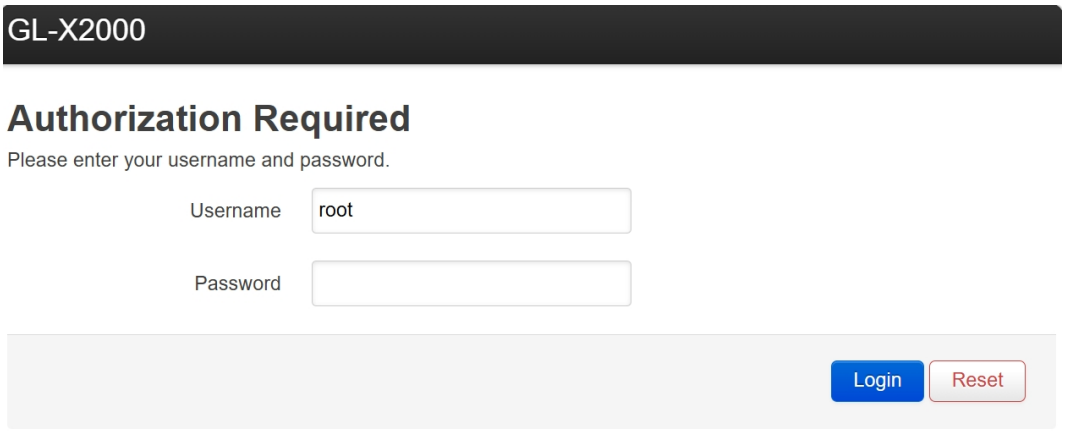

You will then log in to the LuCI interface.

